


BCD Cable Pin-Out for Flex Data Decoder Utility

Yaesu Quadra Amplifier

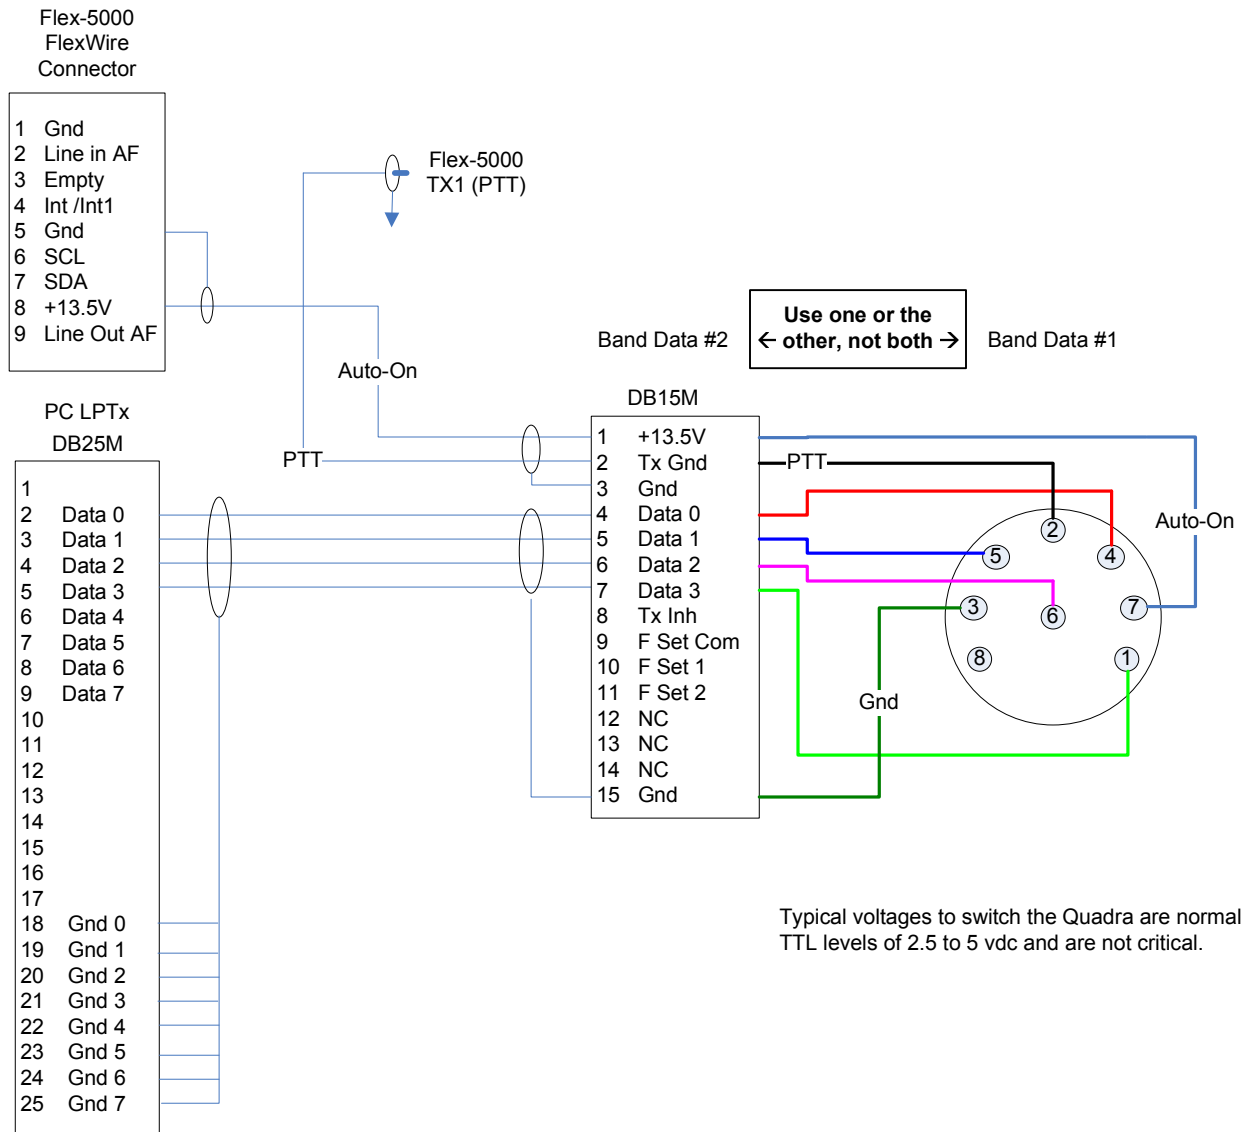

Please note that the connections for the Band Data 1 are **un-proven** but are thought to be correct. It is known that the Band Data 1 connection information from the Yaesu Quadra manual is **incorrect** in at least some instances. So proceed with caution until the Band Data 1 connection information is verified.


The Band Data 2 connection information has been proven to work.

© Steve Nance – K5FR
Nov., 2007


RS-232 Cable Pin-Out for Flex Data Decoder Utility

© Steve Nance – K5FR
Nov., 2007, 2008


Sample Parallel Wiring Diagram

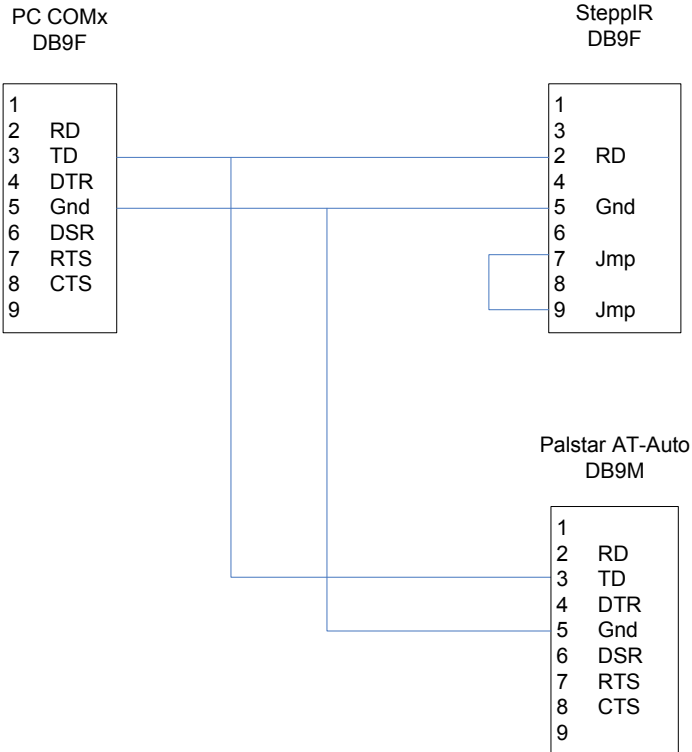

Sample Wiring Diagram Palstar AT-AUTO

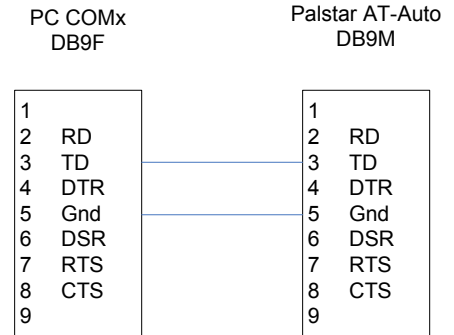

Sample Wiring Diagram SteppIR Controller Data Out Port

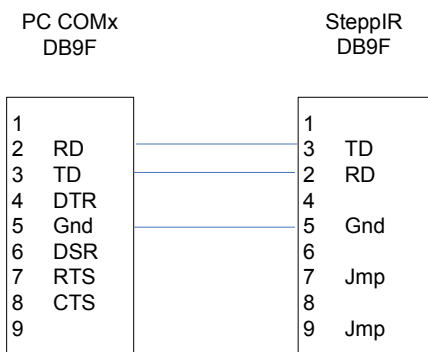

Notes for SteppIR Data Out Port connection.

- Observe that pins 2 & 3 **ARE** switched between plugs.
- Make sure port communication is compatible between the pc and the SteppIR controller.
- Connect to the SteppIR controller Data Out port only (bottom in pix).

