


BCD Cable Pin-Out for Flex Data Decoder Utility

Yaesu Quadra Amplifier

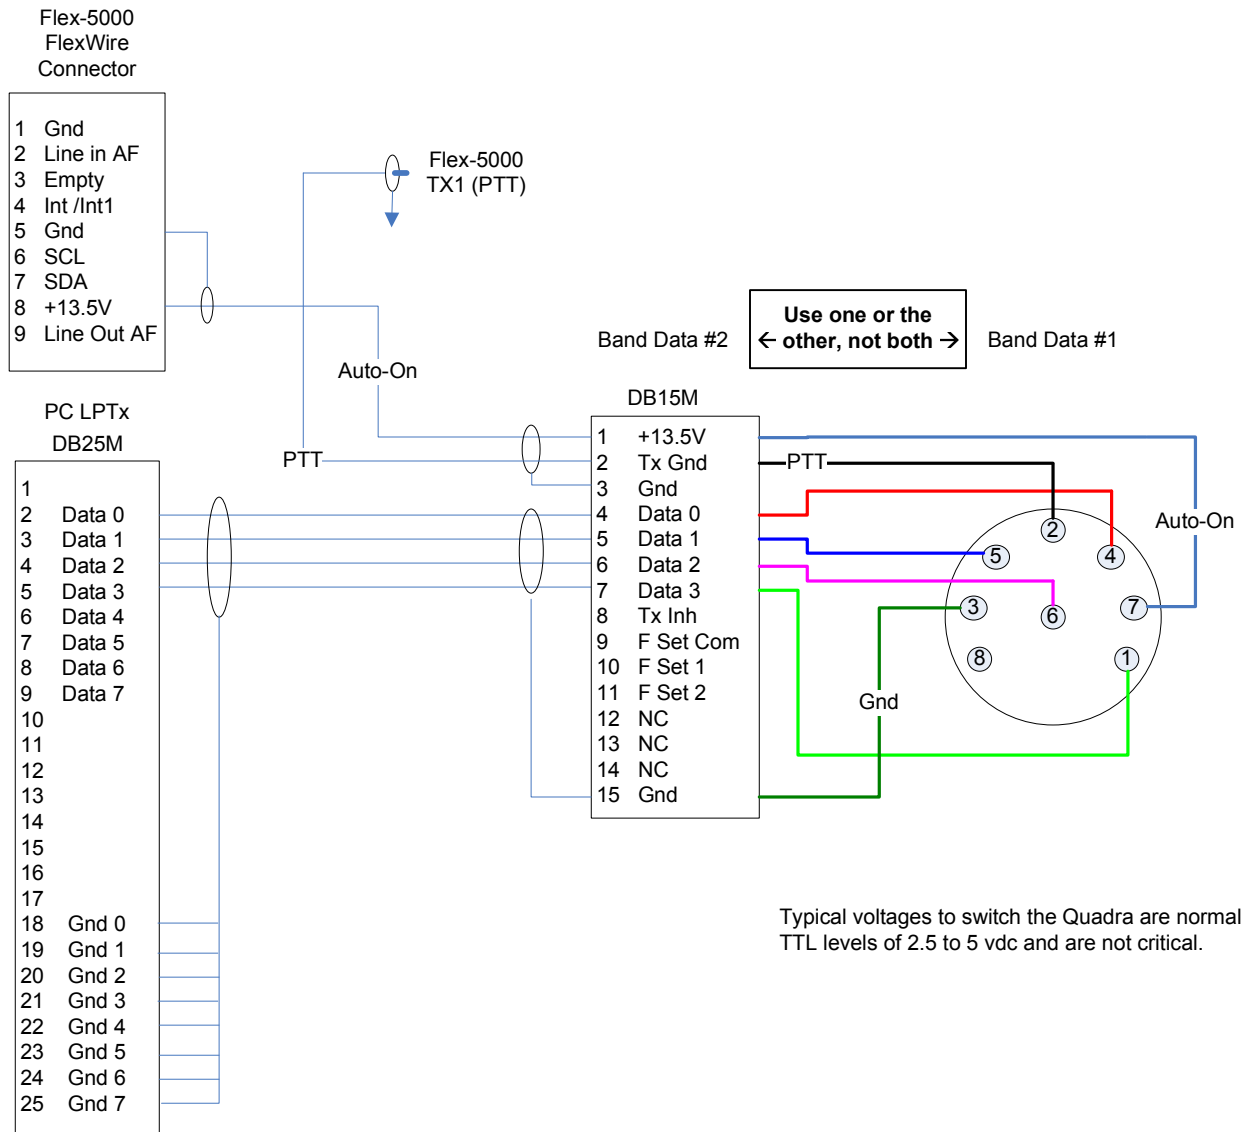

Please note that the connections for the Band Data 1 are **un-proven** but are thought to be correct. It is known that the Band Data 1 connection information from the Yaesu Quadra manual is **incorrect** in at least some instances. So proceed with caution until the Band Data 1 connection information is verified.

The Band Data 2 connection information has been proven to work.

© Steve Nance – K5FR
Nov., 2007

RS-232 Cable Pin-Out for Flex Data Decoder Utility

© Steve Nance – K5FR
Nov., 2007

Sample Parallel Wiring Diagram

PC COMx
DB9F

1	
2	RD
3	TD
4	DTR
5	Gnd
6	DSR
7	RTS
8	CTS
9	


SteppIR
DB9F

1	
2	RD
3	
4	
5	Gnd
6	
7	Jmp
8	
9	Jmp

Palstar AT-Auto
DB9M

1	
2	RD
3	TD
4	DTR
5	Gnd
6	DSR
7	RTS
8	CTS
9	

Palstar AT-Auto
Wiring Diagram

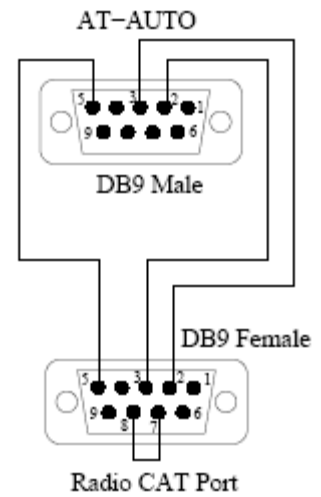

AT-AUTO to CAT Cable
for Kenwood, Yaesu, etc.