


SOFTWARE SERVER'S INSTALLATION


Nom	Modifié le	Type	Taille
midas.dll	02/07/2008 16:36	Extension de l'app...	291 Ko
Software_file_description.docx	28/06/2018 20:38	Document Micros...	747 Ko
YNClient.exe	30/09/2010 18:22	Application	10 224 Ko
YNServer.exe	30/09/2010 18:21	Application	4 264 Ko

Server's file Installation

After launch (click on « Next »

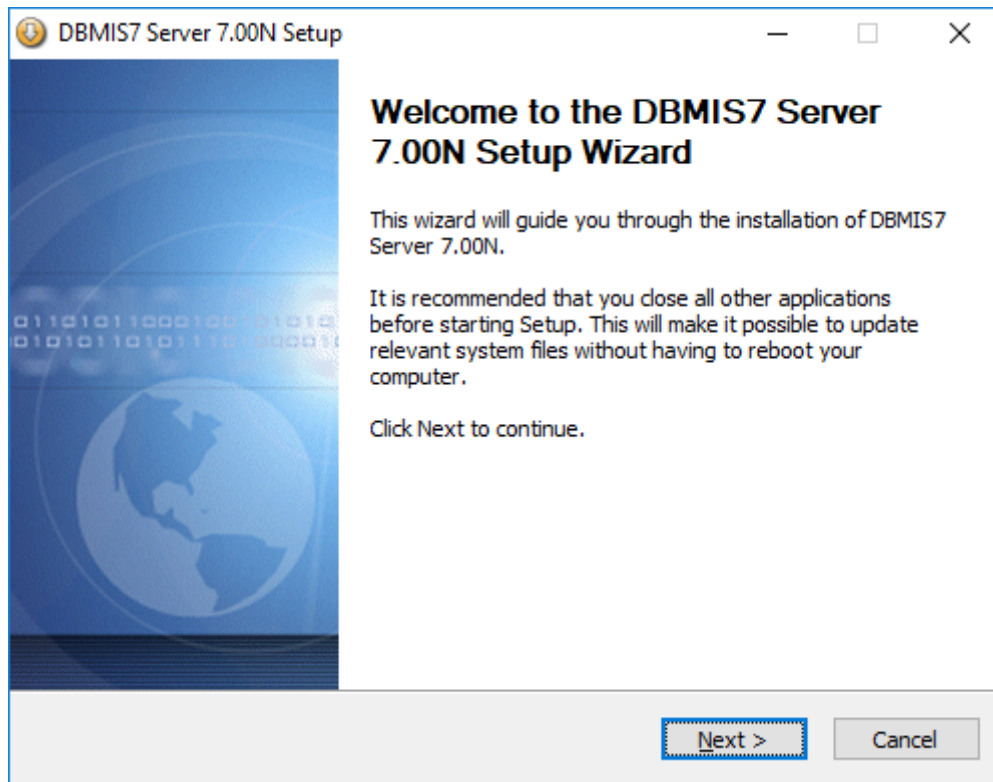

Click on « I Agree »


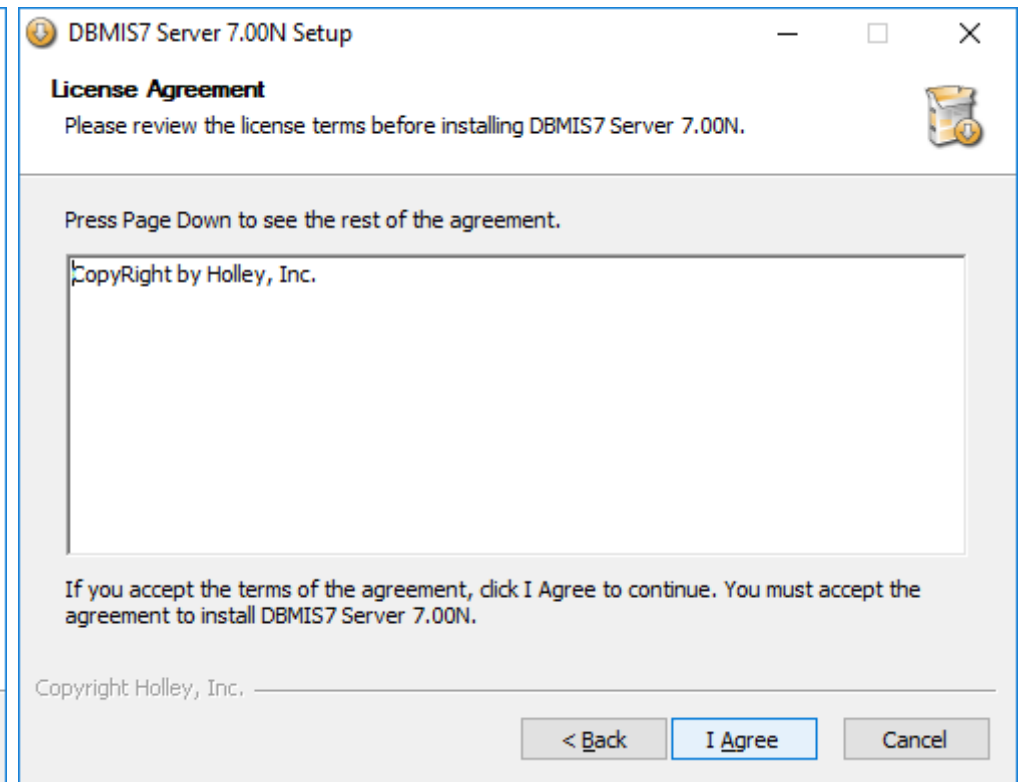


Select destination directories and click on « install »

免费软件交流联系 softbase@qq.com 或者 pc-software@qq.com

enter the information for sqlserver configuration if we have (else, try this)

And click on « Next »

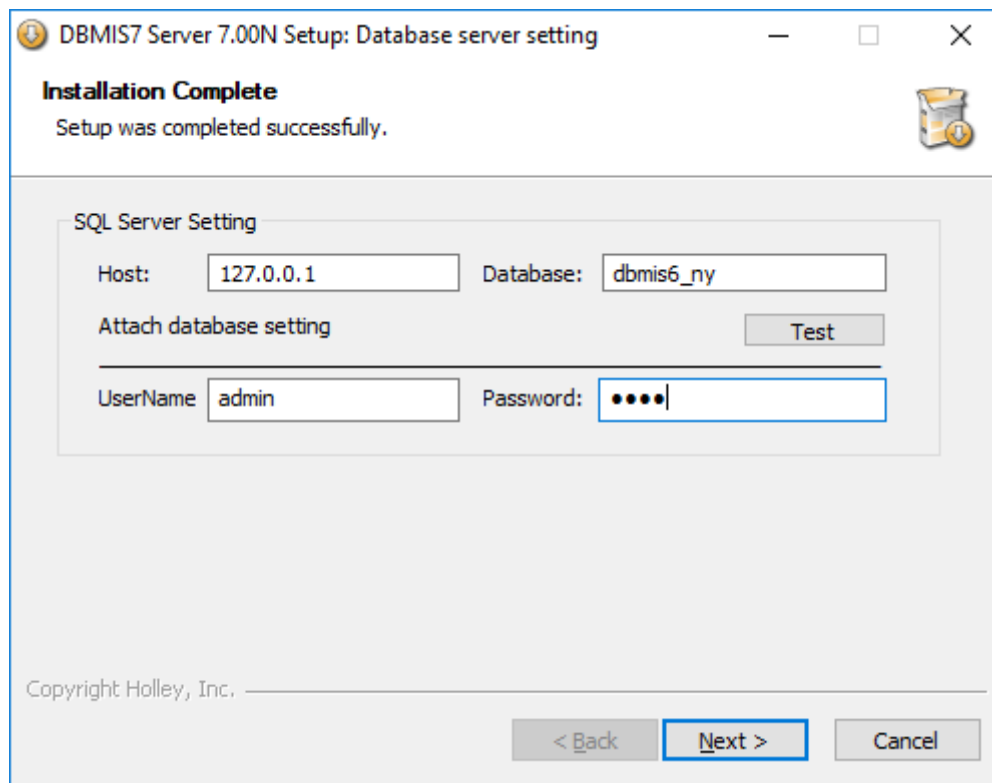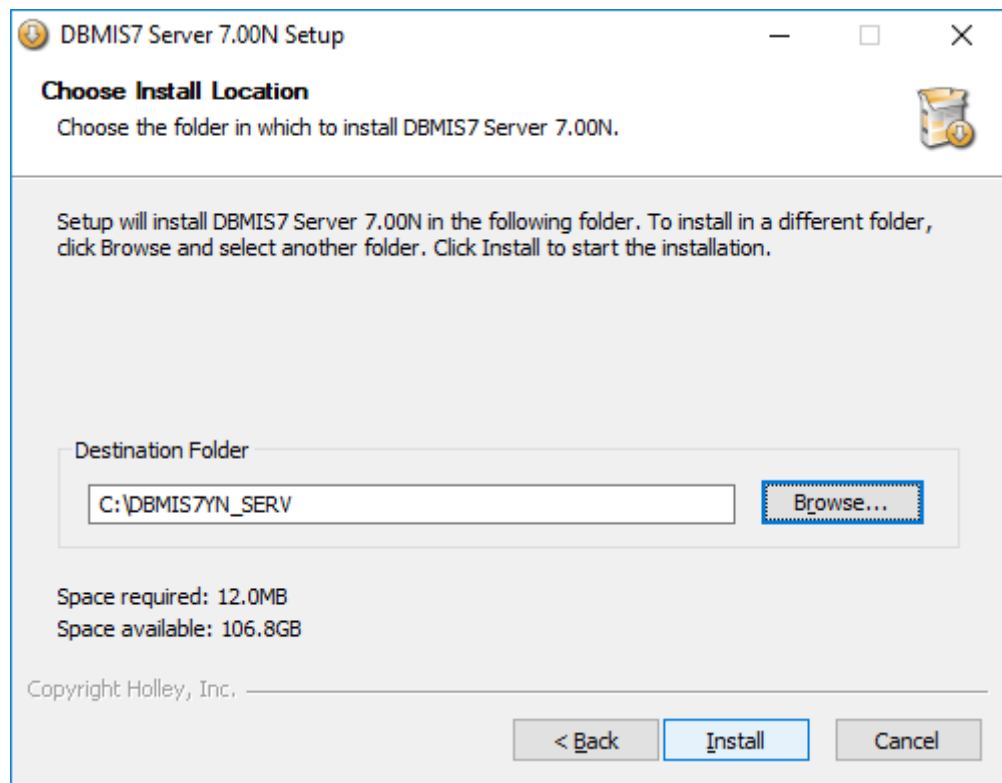


We have this error because the sql is not exist


click on « finish »

(or the connexion on the sql server is bad)


Click on « OK » to continue

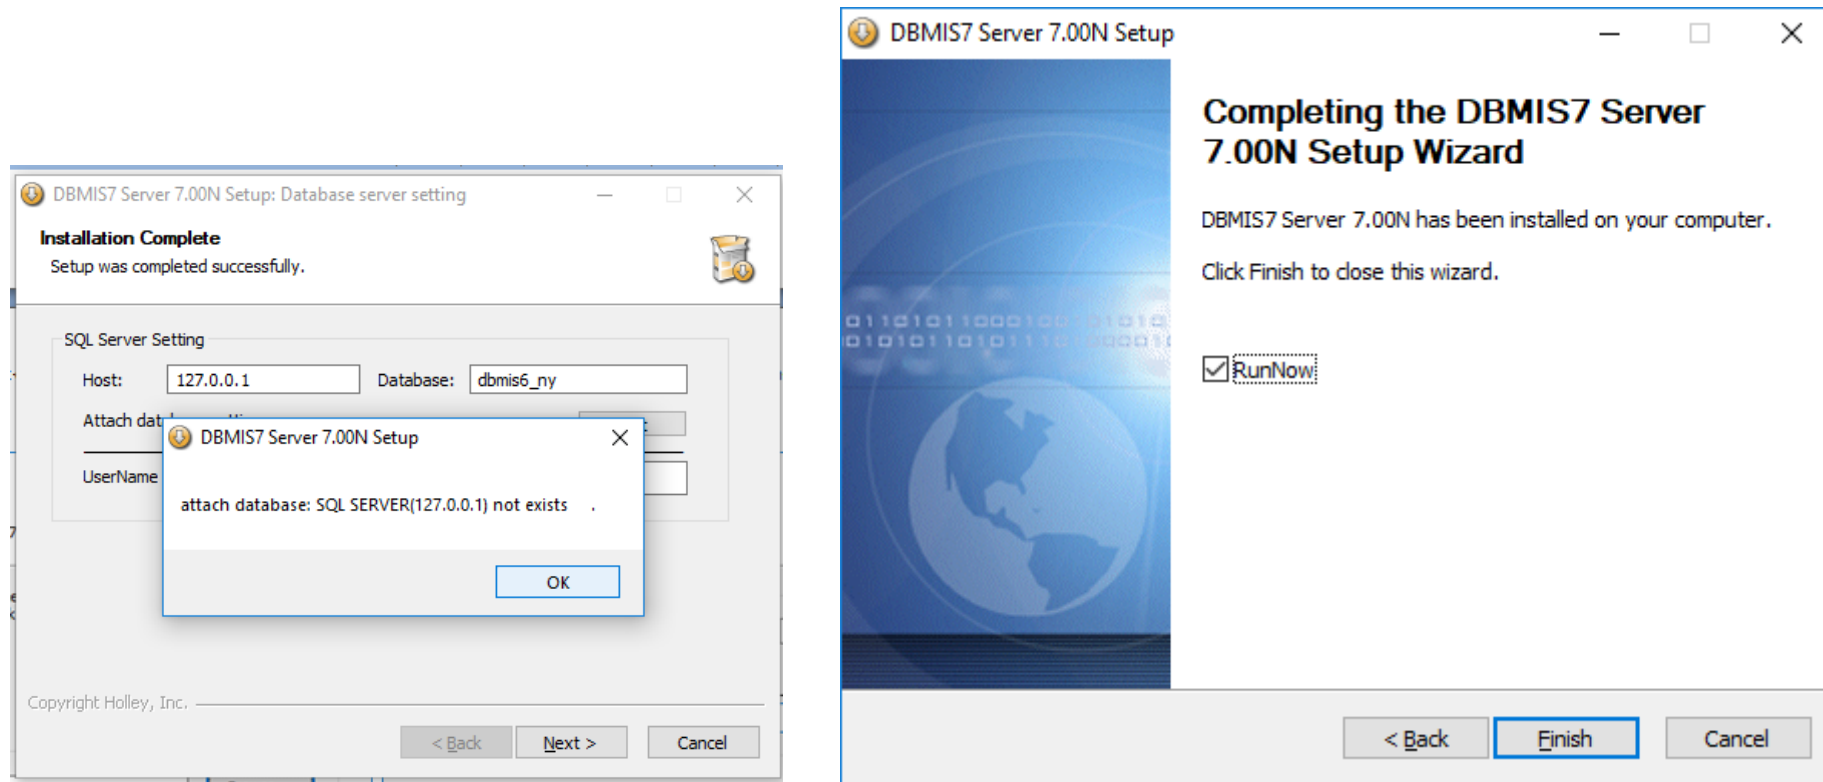

We have this ERROR, if the ET199 dongle is not connected or it's bad

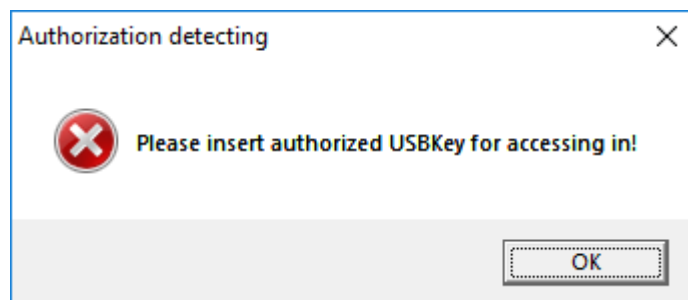

If the ET199 dongle 's GOOD, the server's software is open (we have the shortcut to task bar)

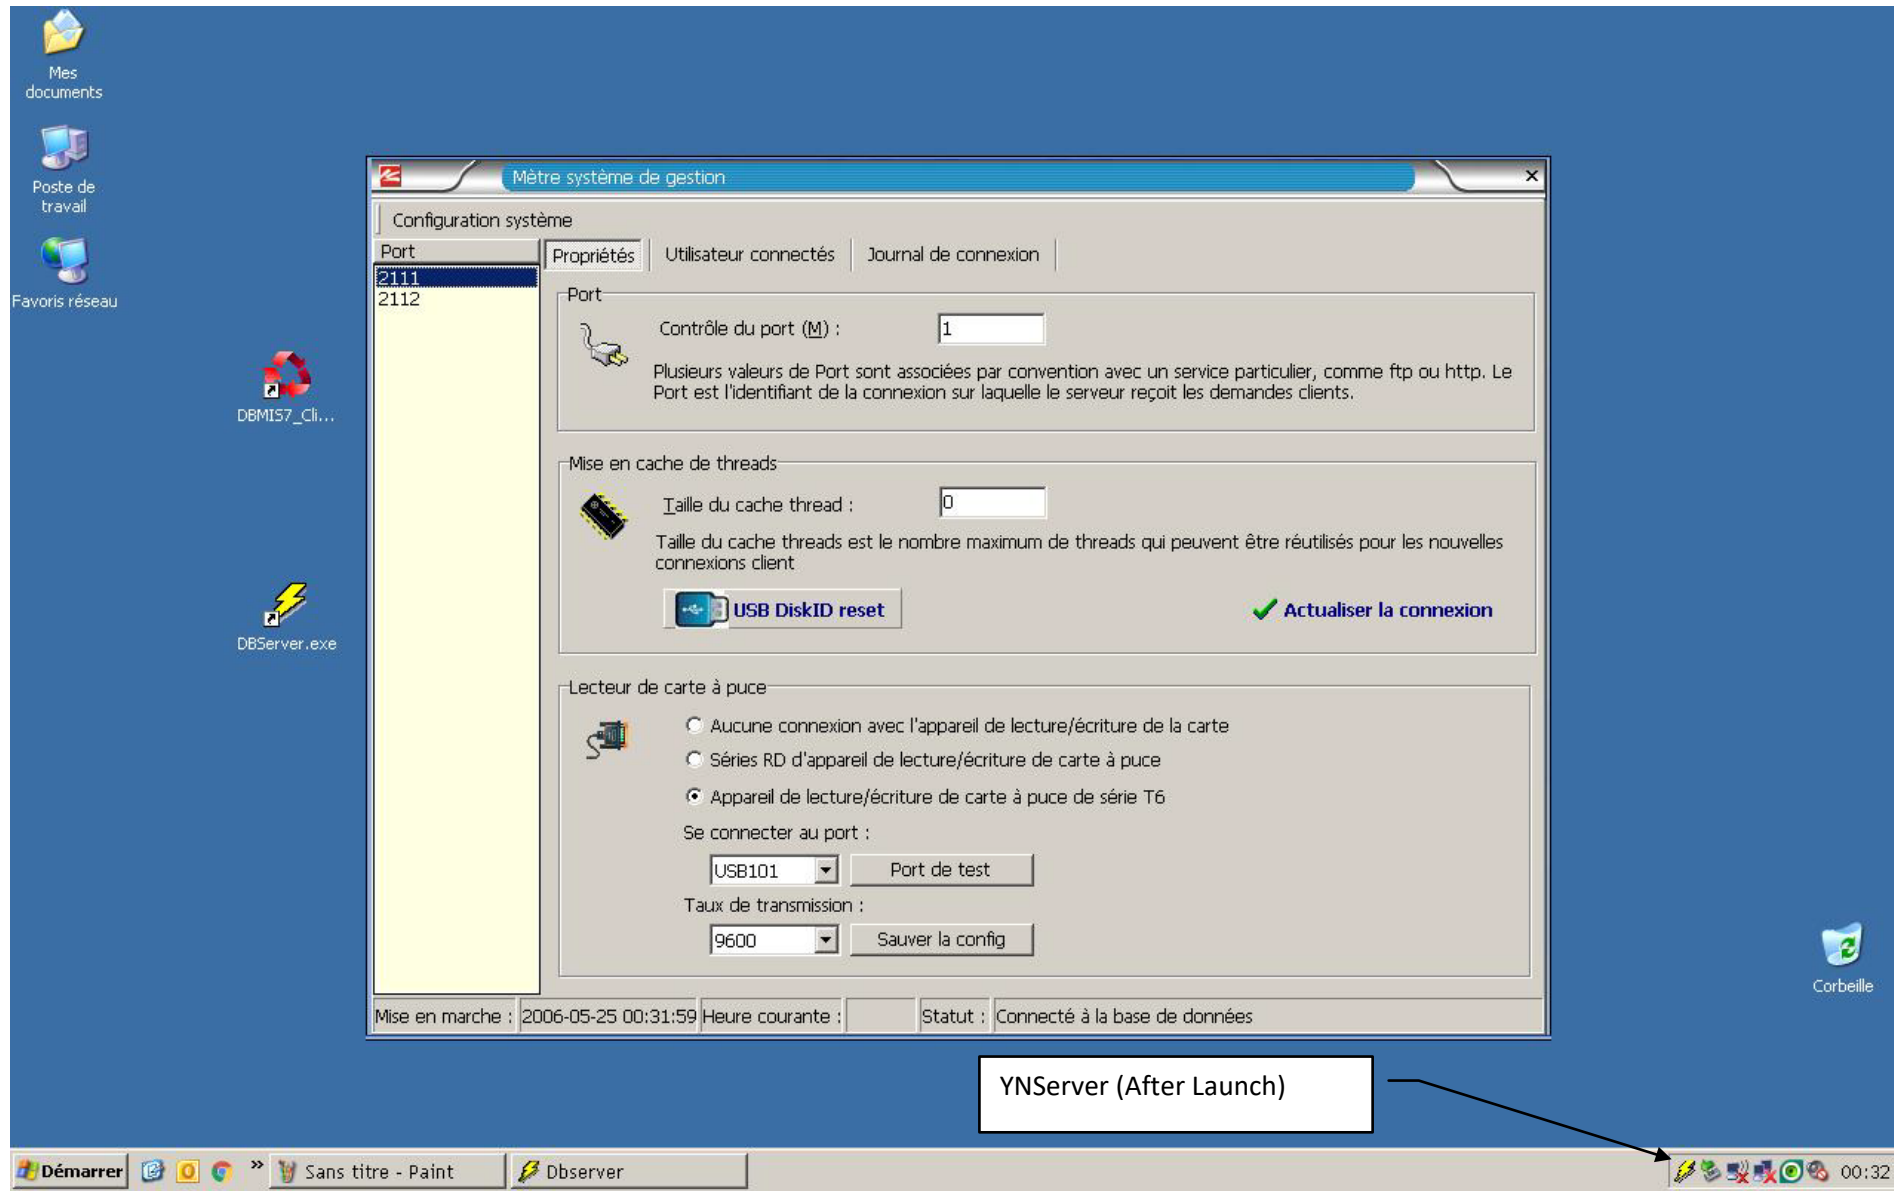

SOFTWARE CLIENT'S INSTALLATION


Nom	Modifié le	Type	Taille
midas.dll	02/07/2008 16:36	Extension de l'app...	291 Ko
Software_file_description.docx	28/06/2018 20:38	Document Micros...	747 Ko
YNClient.exe	30/09/2010 18:22	Application	10 224 Ko
YNServer.exe	30/09/2010 18:21	Application	4 264 Ko

Client's file Installation


Click on the « Next »




Click on « I Agree »

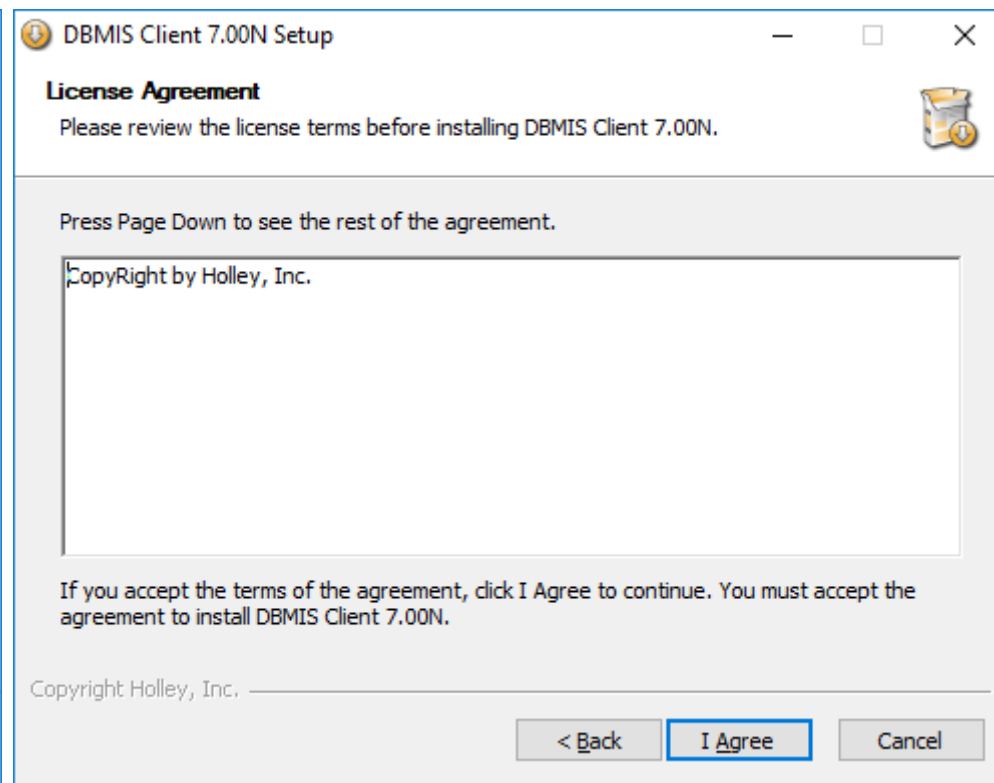


Select the directories destination_and (click on « Installation »)

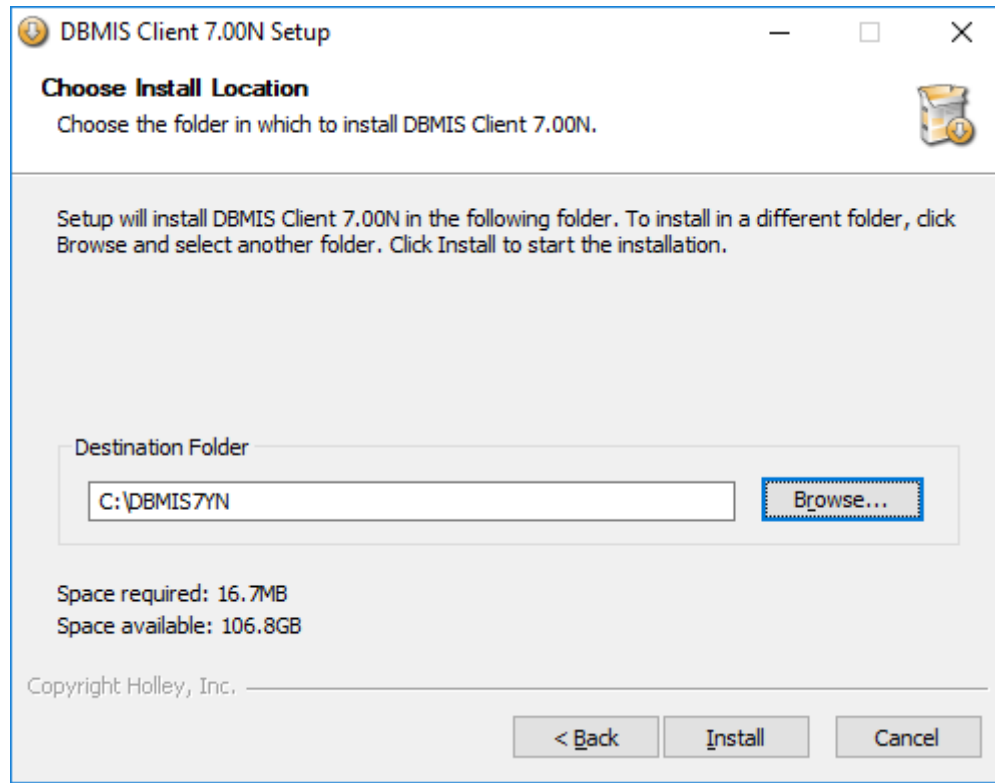


enter the server's Ip adress (if is the same pc try it) click on « Next »

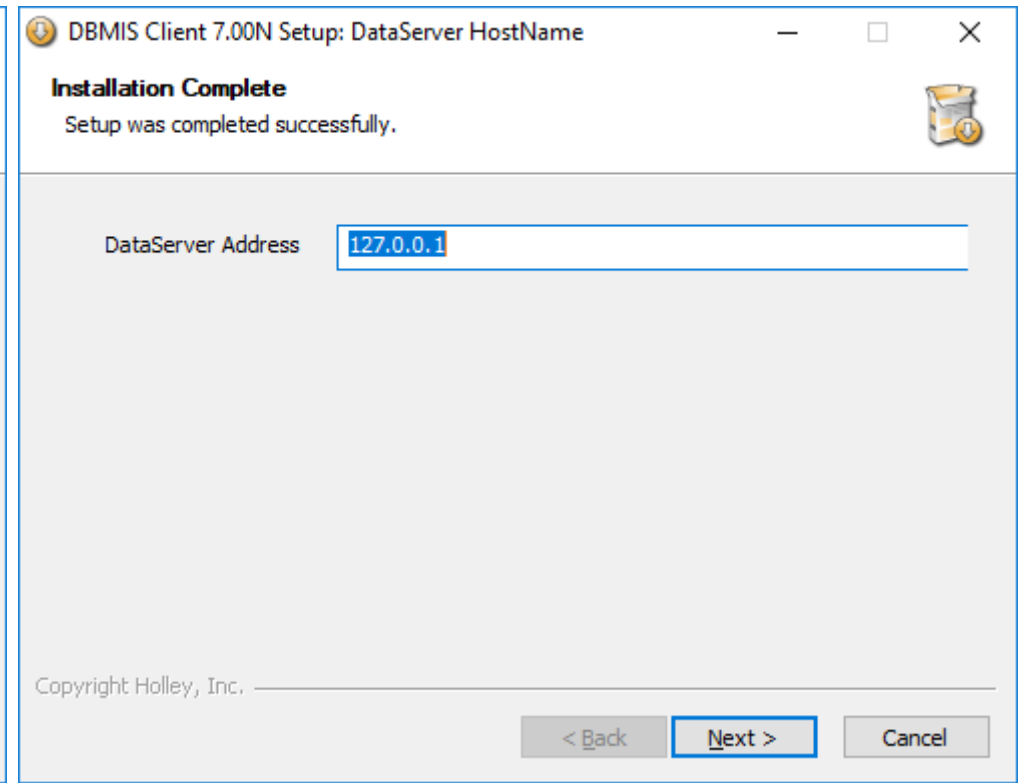

Click on « Finish »

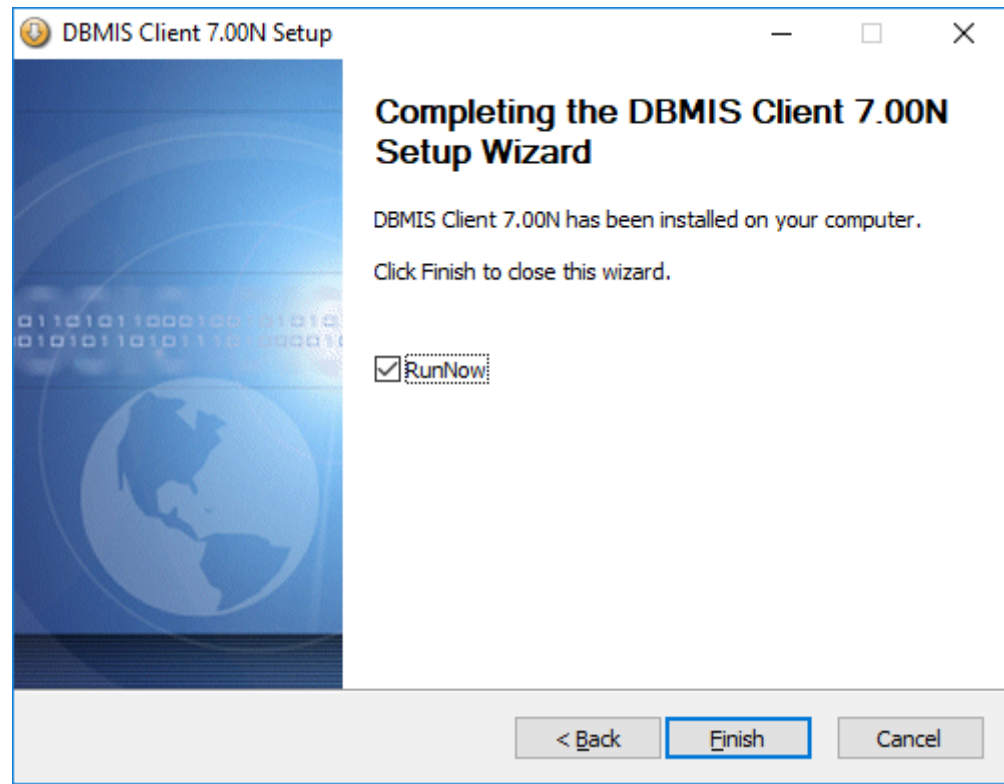


SOFTWARE PRESENTATION AFTER INSTALLATIONS :

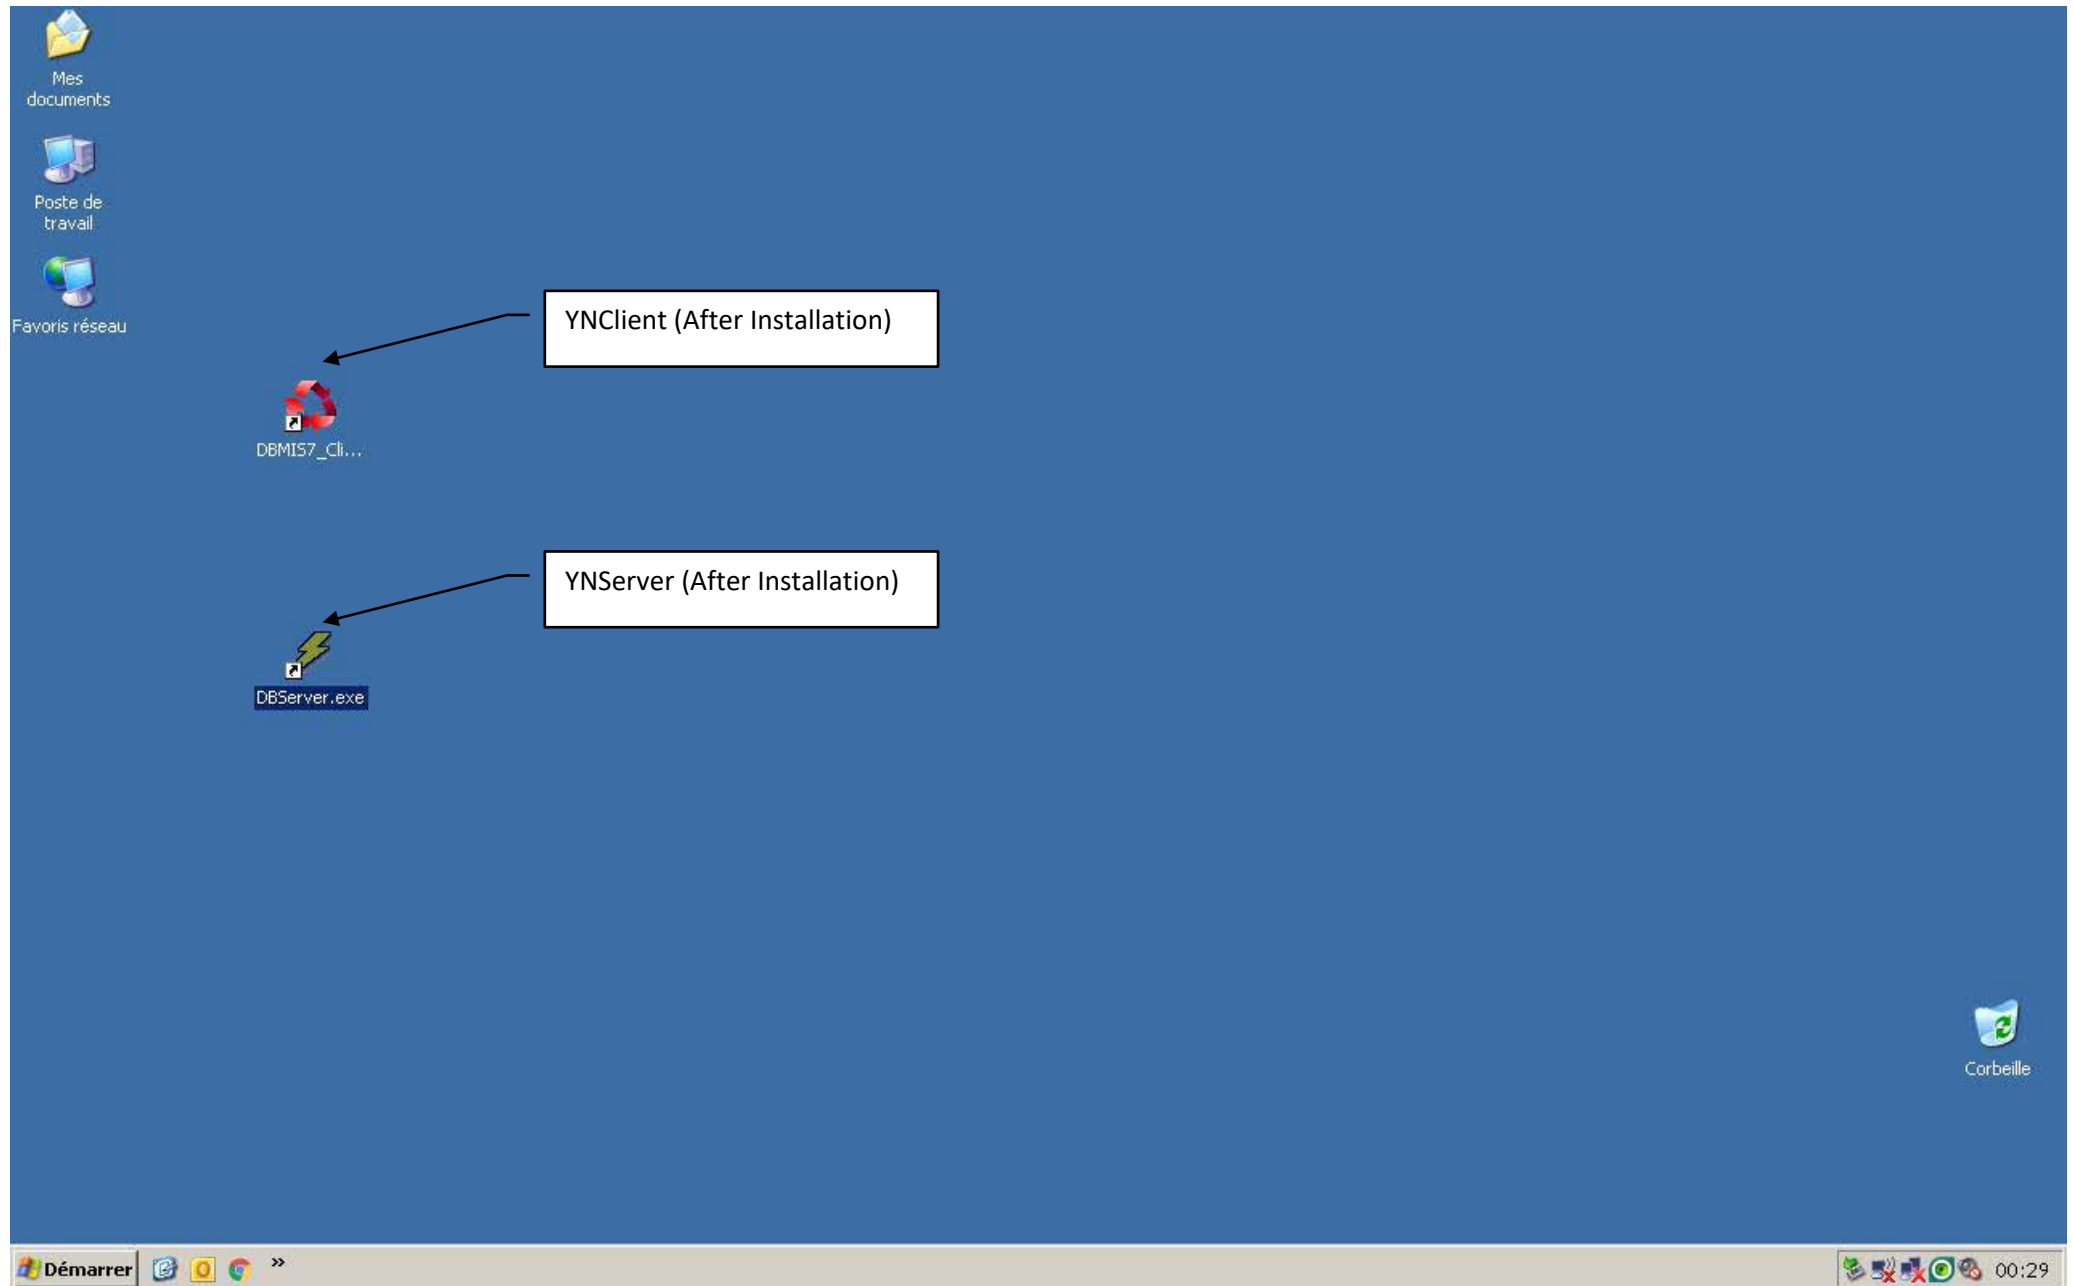


Before launch the client's software, it must to reset (initialise) the dongle ;

In the server is pc :

- 1- Move or disconnect the ET199 's dongle.
- 2- **CONNECT OTHER ET199'S DONGLE OR INSERT THE SAME DONGLE**
- 3- Open the server's software (double click) on the shortcut on task bar
- 4- And click on the button « USB DiskID Reset »

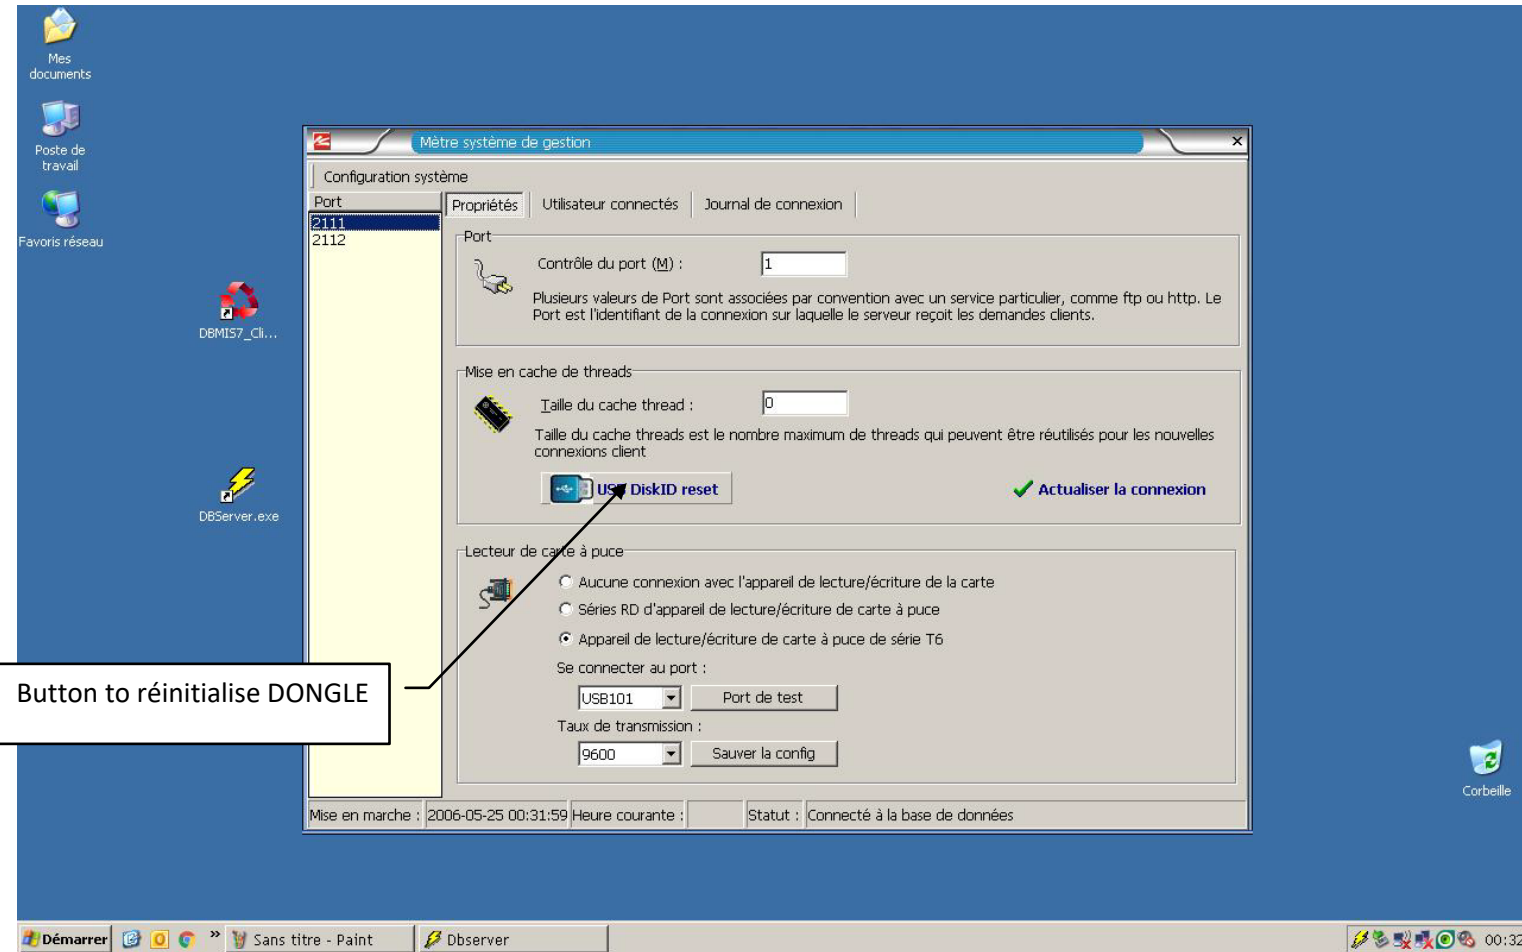


If the dongle is not connected or it's bad, we have this error

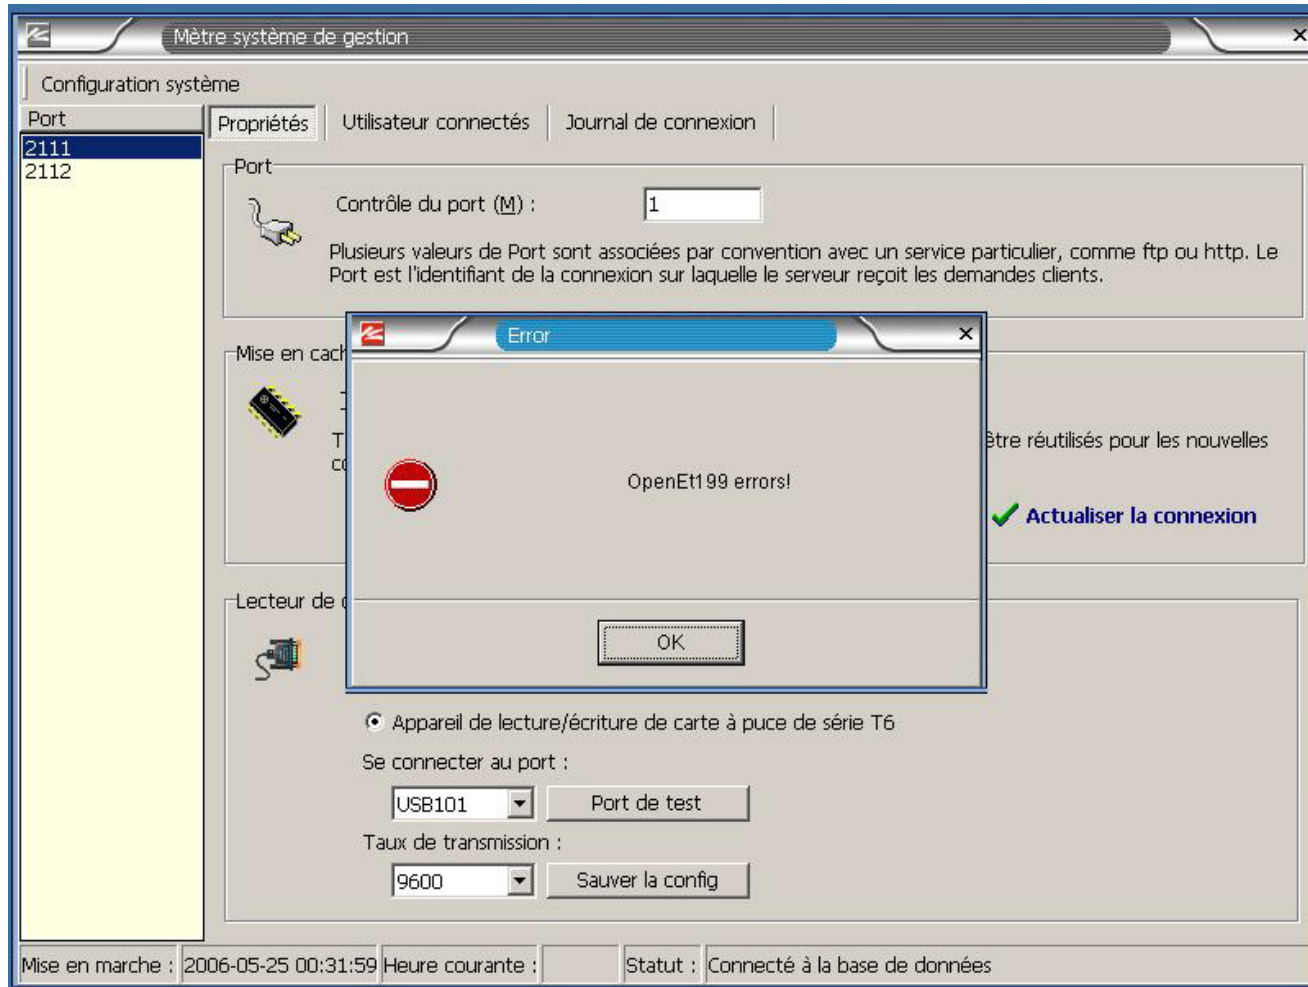


Else, if the ET199's GOOD, we have this message (the dongle is reset and ready to use on the new client's pc)

(to launch client's software on the same pc with server's software, we move (disconnect) and connect the dongle and after, launch client's software

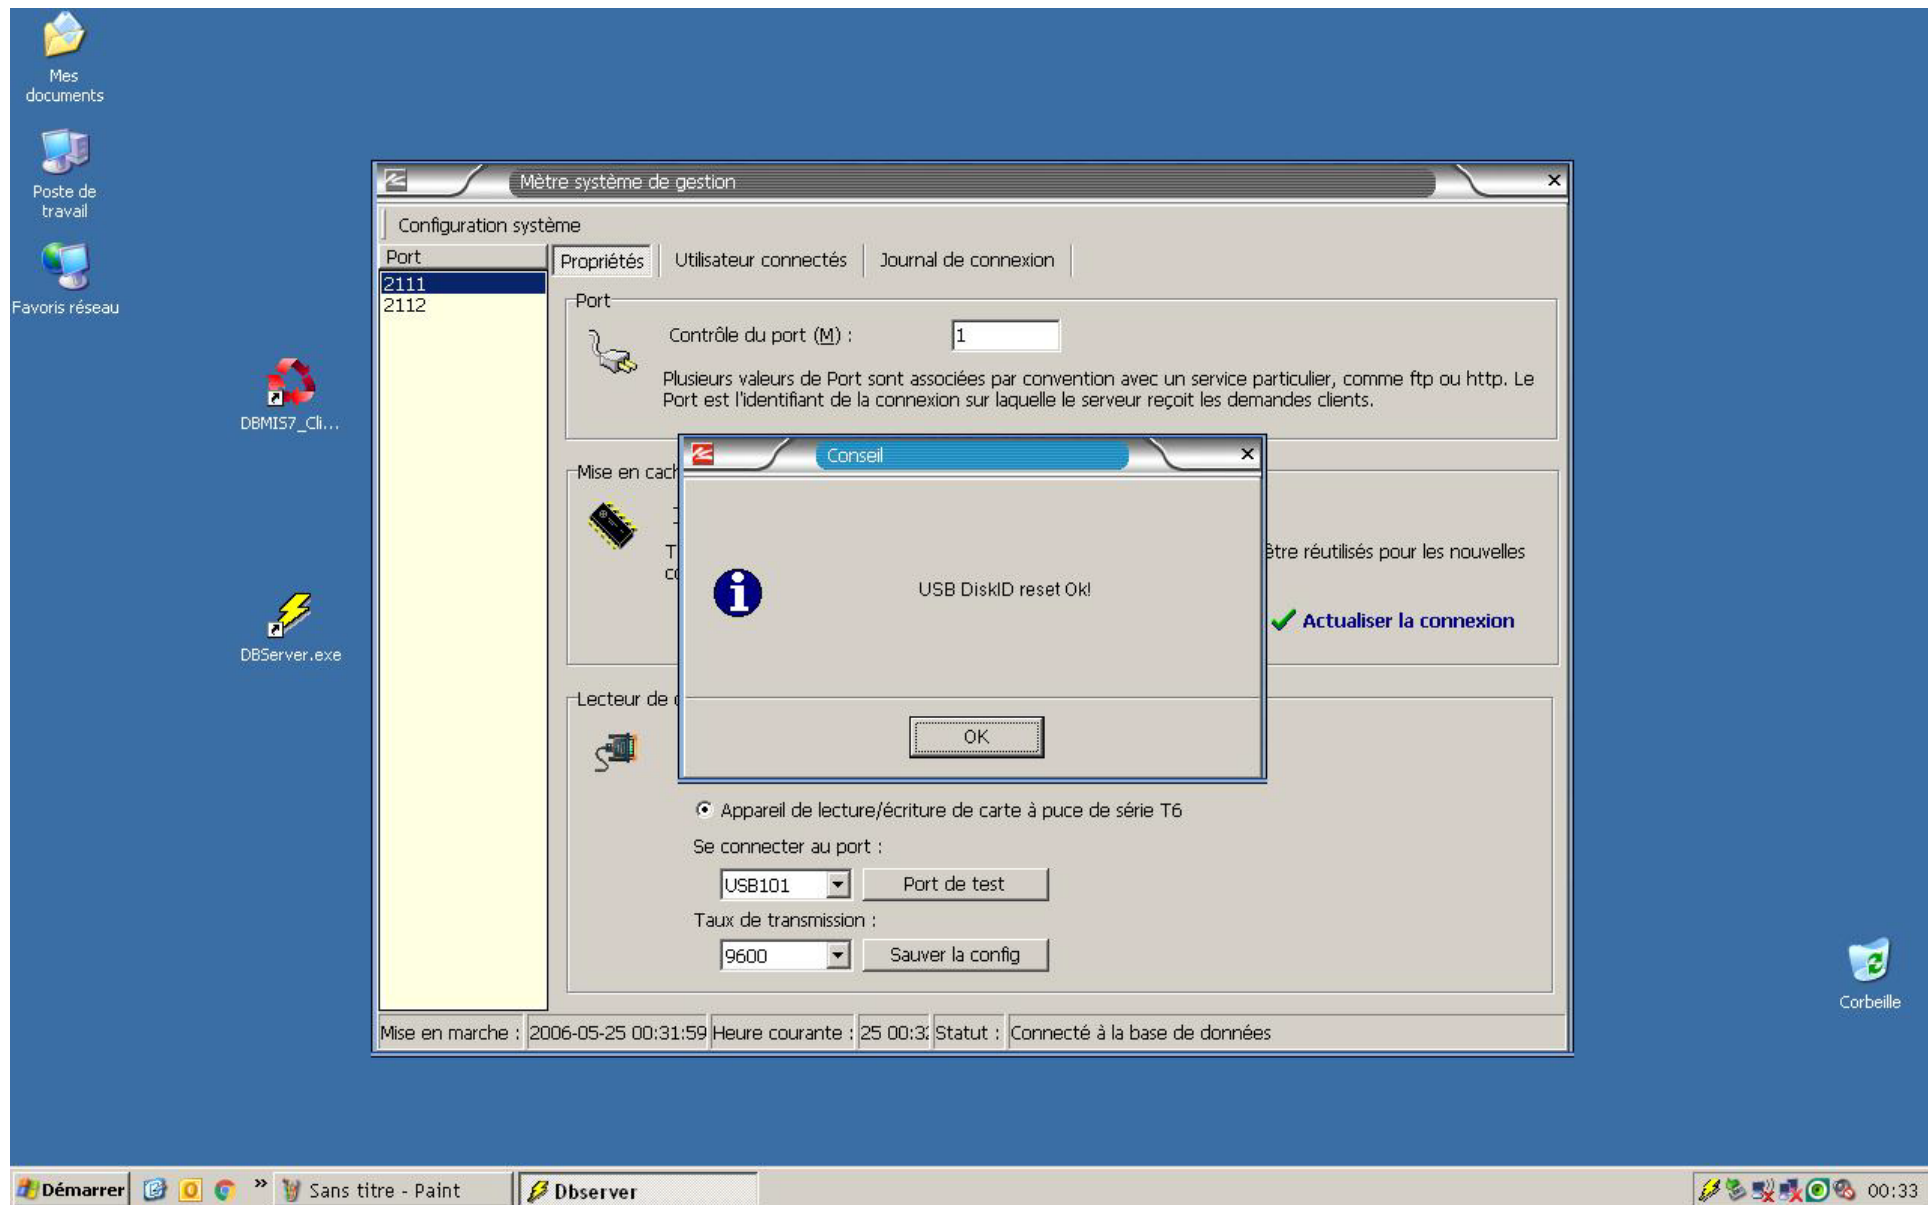

LAUNCH DBMIS7_CLIENT :

If dongle is not good or not connected, he display this error message :

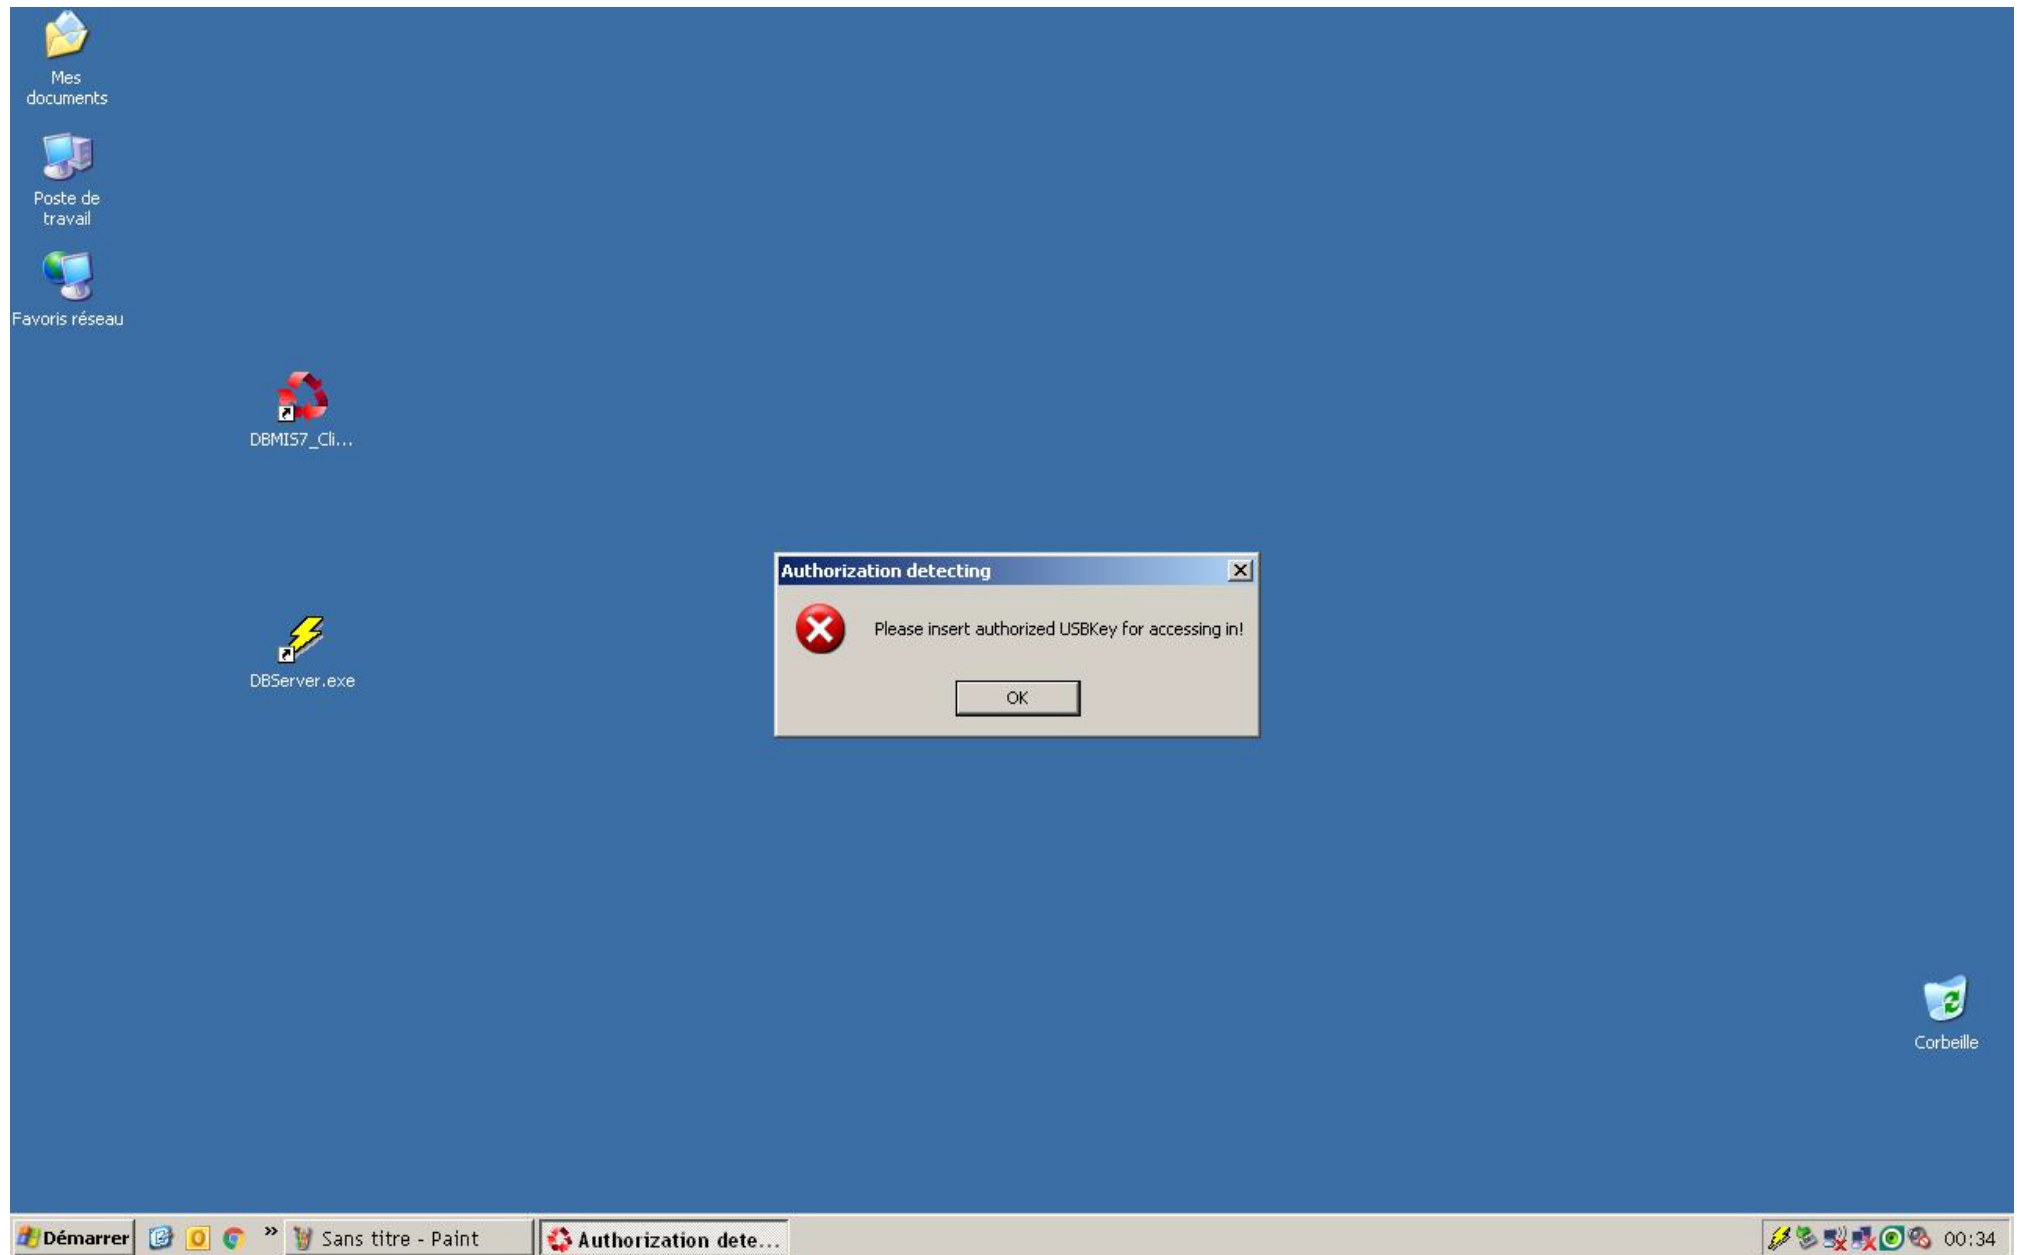

Else the client's software is open (if the database is exist, else the message request sql error is display)

