



1. Location of the communication YC01-003-143PCB

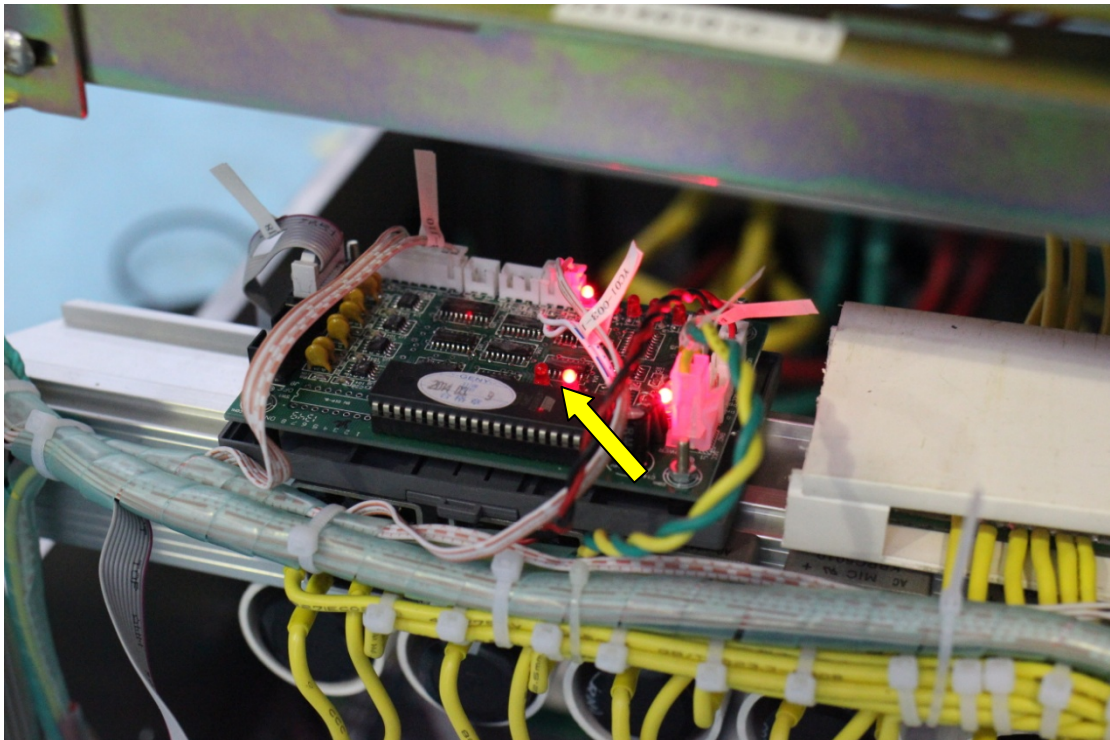

Descriptions: When sending order by VFD or by computer, the two indications light will star blinking. If communication errors exist, the lights will not blink or only one of them is blinked.

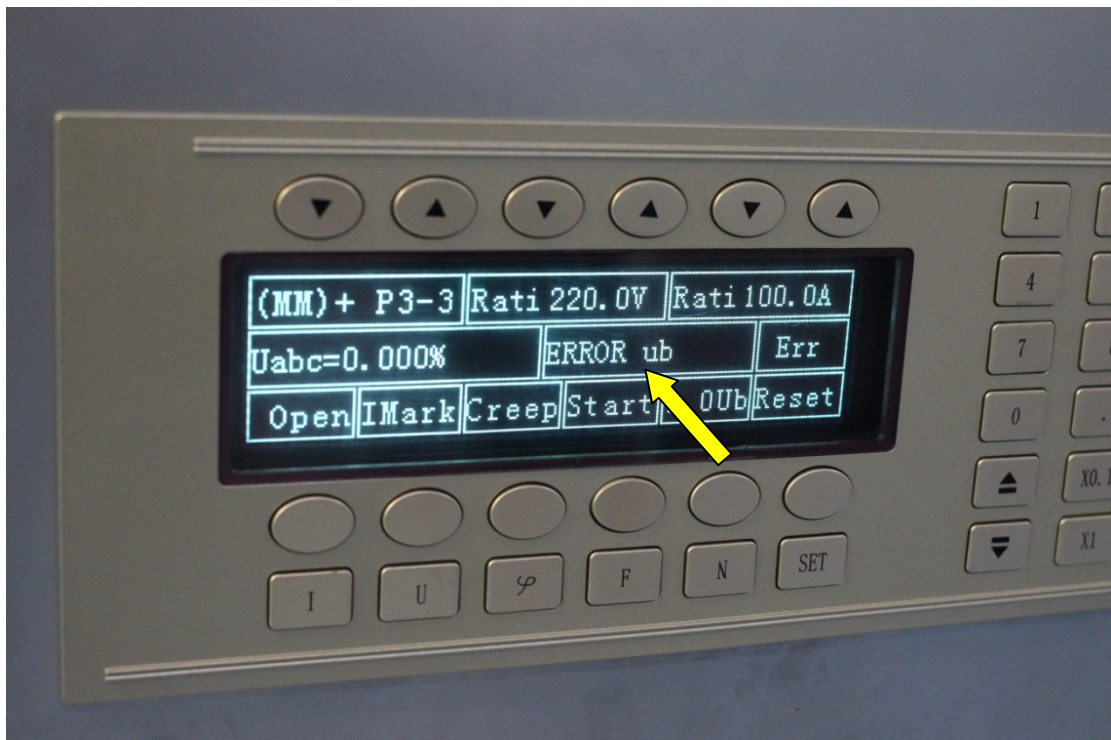

Descriptions : When errors exist, the VFD display will indicate the problem location in each phase.