

De Google Chromecast is de beste manier om live televisie, video en meer naar je tv te streamen. Met de Chromecast kun je live televisie, bijvoorbeeld via de ZiggoGo app, maar ook Netflix, Youtube en NPO op een tv scherm bekijken. Je bedient de Chromecast vanaf je telefoon, tablet of laptop. In dit artikel leg ik uit wat de Chromecast is en hoe die werkt.


Gebruik

Het gebruik van de Chromecast is eenvoudig. Je vanaf je smartphone, tablet of computer met één druk op de knop een gekozen filmpje doorzetten naar de televisie waar de Chromecast is aangesloten.


Het draait allemaal om het volgende icoontje:



In alle apps waarmee je de chromecast kan gebruiken zal het volgende icoontje zichtbaar worden. Meestal rechtsboven in het scherm.

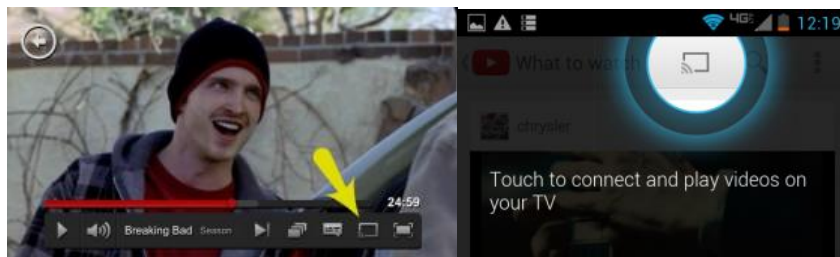

Na het indrukken van het icoontje vraagt het systeem met welke Chromecast je wilt verbinden. De kans is groot dat je er maar 1 in huis hebt, dus er is maar één keuze beschikbaar

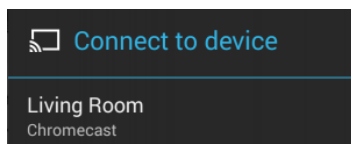

Na deze keuze zal de Chromecast op je televisie het beeld overnemen.





Cast TV programs or video from Chromecast-enabled apps to the TV screen.

Casting to your TV is a simple way to enjoy your favorite apps optimized for the big screen.

Before you begin casting

1. Connect your mobile device, tablet, or computer to the FMH Wi-Fi network.
2. The mobile device, tablet or computer you are using to cast must be on the FMH **Wi-Fi network** as your Chromecast or TV with Chromecast built-in.
3. You must be running the latest version of the Chromecast-enabled app. You can always double check that you are on the latest version by visiting the Google Play Store or Apple App Store and checking for any app updates.
4. Download the Ziggo GO app for access to TV programs.

Cast from Chromecast-enabled apps to your TV

1. Make sure the mobile device, tablet or computer you are using to cast is on the *same Wi-Fi network* as your Chromecast or TV with Chromecast built-in.
2. Open a Chromecast-enabled app.
3. Tap the Cast button . **Note:** The Cast button isn't located in the same place on all Chromecast-enabled apps.
4. Tap the TV device you'd like to cast to.
5. When you're connected, the Cast button will turn color, letting you know you're connected.
6. You can now cast videos, movies and TV shows directly to your Screen.
7. To stop casting, tap the Cast button  **Disconnect**.

Cast from Chromecast-enabled apps from iOS devices running iOS 13

1. Make sure the mobile device, tablet, or computer you are using to cast is on the same Wi-Fi network as your Chromecast or TV with Chromecast built-in.
2. Open a Chromecast-enabled app.
3. If it requires location permissions, tap Yes.

4. Some cast-enabled apps may request location permissions and may not be able to cast if location permissions are not granted.
5. In the Chromecast-enabled app, tap the Cast button Inactive cast extension .
6. he Cast button isn't located in the same place on all Chromecast-enabled apps.
7. Tap the device you'd like to cast to.
8. If you'er unable to cast, you may need to wait for the Chromecast-enabled app to release a new version to support cast on iOS devices running iOS 13.