

ATTN: DAVE LEE

BG-ALB01

FOR NEW PM SHEET LIFT #1

Maintenance procedures

7.3 Maintenance procedures

7.3.1 Lubrication instructions

The vehicle lift must be maintained regularly in accordance with the lubrication instructions (see Table 7.1).

Table 7.1 Lubrication instructions

Maintenance activities	Description	Per month	Per year	Every 2 years
Cylinder	Lubricate piston rod if dry (machine oil)	x		
Check the oil level in the tank	Replenish (only with vehicle lift in the lowest position) with oil type UNIL HVD S15 (ISO VG15)		x	
Pivot points 1, 2, 3 and 4 (see Figure 7.1)	Check for wear (no lubrication)		x	
Sliding surface between block 3 (see Figure 7.1) and track	Grease with Molykote PG-54		x	
Pivot points 5 and 6 (see Figure 7.1)	Grease (general purpose)	x		
Hydraulic oil in the tank	Replace, UNIL HVD S15 (ISO VG15)			x

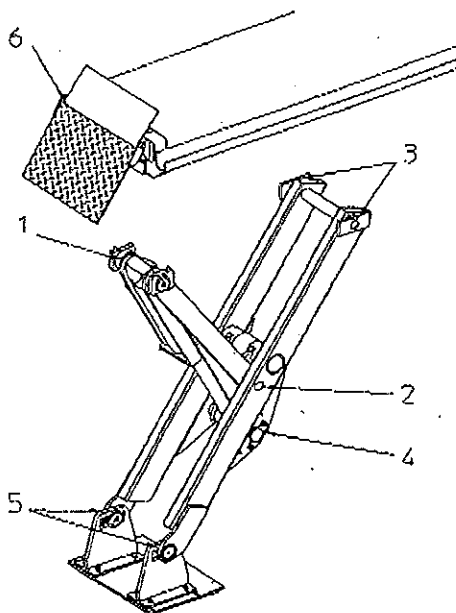


Figure 7.1 Pivot points