

3-5 RELOCATION AND ADDITION OF A FUEL TANK


When relocating or adding a fuel tank is necessary, follow the local regulations.

When installing an additional fuel tank, be sure that the total amount of fuel does not exceed the regulation.

① Location of a fuel tank


- Place a fuel tank somewhere between wheelbase. Do not place it in rear overhang area.

Location of fuel tank

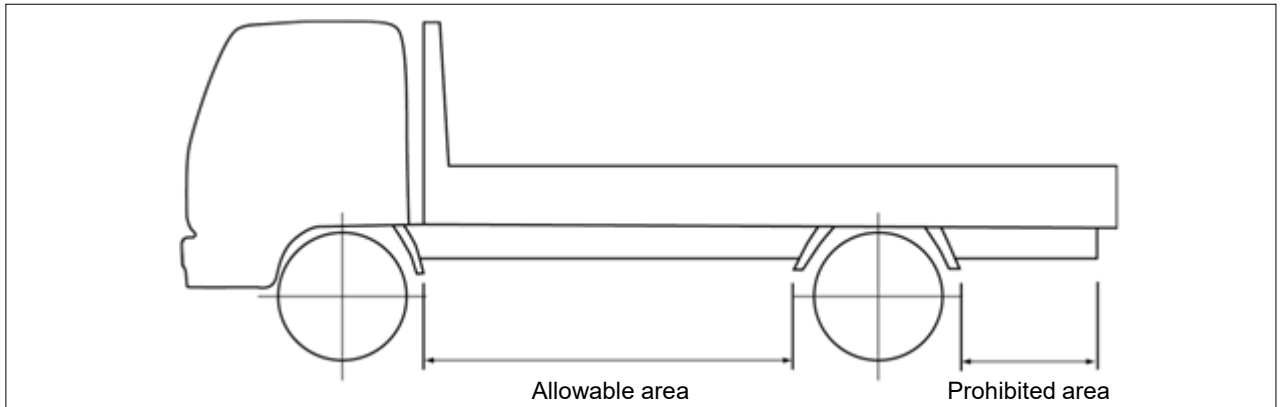

- When lowering the position of the fuel tank, carefully determine the ground height of a fuel tank not to contact the ground with particular attention to the conditions of use.
- Be sure that the breather opening of the relocated fuel tank will not be subjected to water. Refer to "⑥ Breather hose" for cautions on breather.
- Maintain sufficient clearances between the hoses for a fuel tank ("A" in the figure below) and the object to be mounted on a chassis frame such as sub frame, U-bolt and double ended bracket. If contact is anticipated, wrap the hoses with corrugated tubes or protectors.

Hose for fuel tank

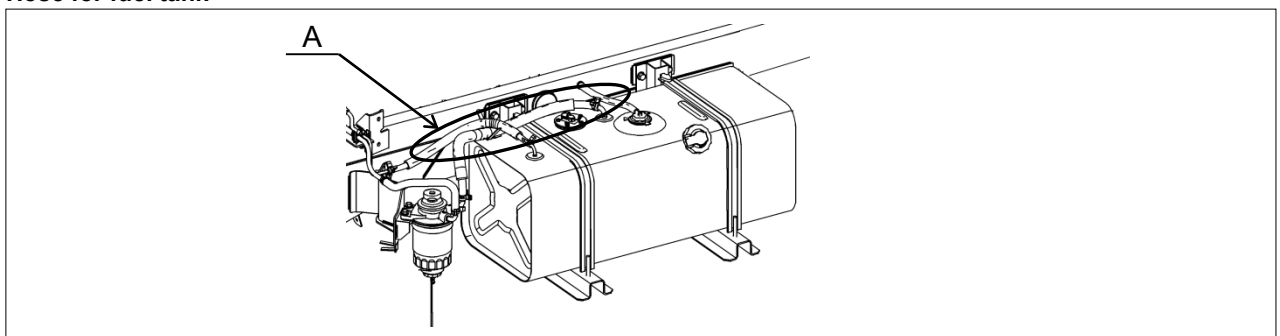

- Be sure that the relocated tank is sufficiently apart from any movable or projecting object.
- The fill opening of a fuel tank should be easily accessible so that its cap can be removed or attached and fuel can be fed without problems.
- Maintain a reasonable clearance between an exhaust system component (front pipe, silencer and tail pipe) and a fuel tank or a fuel hose.