


- When installing additional components, be careful not to damage the harness due to jamming or smashing. If the harness is damaged, have it repaired.
- Do not leave tools or waste cloth, etc. behind in the engine room.
- Do not touch the vent plug of electronic unit (control unit).
- The vent plug might come off from the unit when external force is applied.
- If the vent plug came off, replace unit with new one.
- If the vent plug is reused or left off, foreign substance (water, waste, etc.) may enter inside the electronic unit.

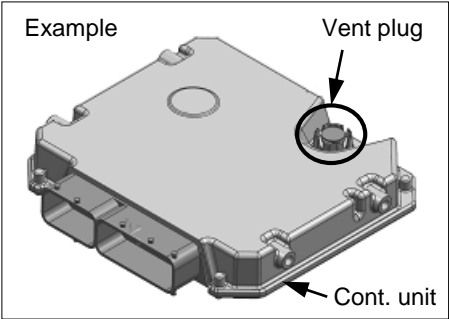

③ Starting up engine

- Confirm whether the gear shift lever is in neutral.
- Start up an engine while pressing the clutch pedal.
- Do not put the combustible in the direction of the exhaust and the vicinity of the hot section.
- If starting engine inside, install exhaust device to release the exhaust gas outdoor.
- Do not work in the direction of the exhaust or place where the exhaust gas collect easily.
- When the engine is on, be careful with the rotation part and the high temperature section, and not to touch, get caught in, or get burnt.

Example of rotation part and high temperature section

Rotation part	High temperature section
Cooling fan and belt Pulley Alternator and belt Cooler compressor, and belt etc.	Exhaust manifold Turbo-charger Intake manifold Intercooler Oil pan Radiator and radiator cap Water hose Exhaust pipe and exhaust silencer Brake drum immediately after running etc.