


- If sufficient clearance between the fuel tank and the exhaust system can not be secured, install a heat protector to protect the fuel tank from heat.
- Do not installing any components on the fuel tank bracket, such as a stay or a side guard for rear body.

② Installation of fuel tank

- If more holes are required, follow "3-1 DRILLING OR WELDING A CHASSIS FRAME".
- When moving the fuel tank vertically, make bracket referring below drawing.
  - Do not install the bracket together with other equipment by sharing same hole.
  - Do not make hole pitch smaller than the original bracket hole pitch vertically or horizontally.

**Additional bracket for relocating fuel tank**

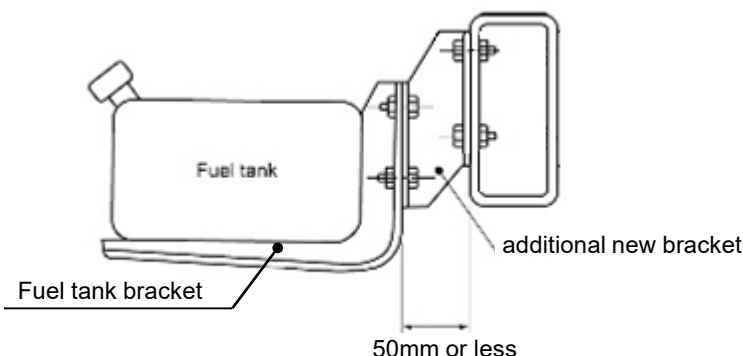

50mm or less

Note: Make sure that adding the new bracket does not make the fuel tank or the fuel tank bracket protrude outward from the outmost side of the vehicle.

- Be sure to air bleed after detaching tank or hose.
- If nylon lock nut is used for band fixing fuel tank, do not reuse it, change to new one. Refer to "⑤ Band tightening, ⑥ Breather hose " for cautions at installing fuel tank.
- When installing an additional fuel tank, follow the instructions below to prevent vehicle fire.
  - Use a genuine ISUZU fuel tank.
  - Fuel must be supplied from the main tank.
  - Never branch from engine supply line. It may affect fuel supply to engine.