



OBTAINING HUMIDITY FROM DHT11


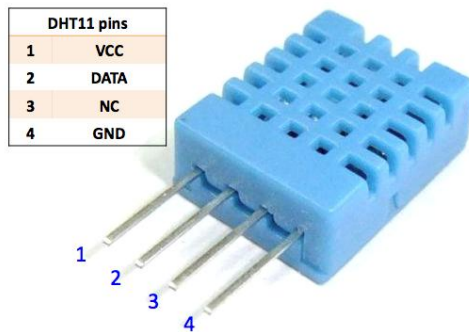


Connections are made accordingly on sensor board provided.

Steps for Importing Library in Arduino.

1. Download library for DHT11 from the link provided
2. Open Arduino go to Sketch > Import Library > Add Library then Browse to the library folder and click open.

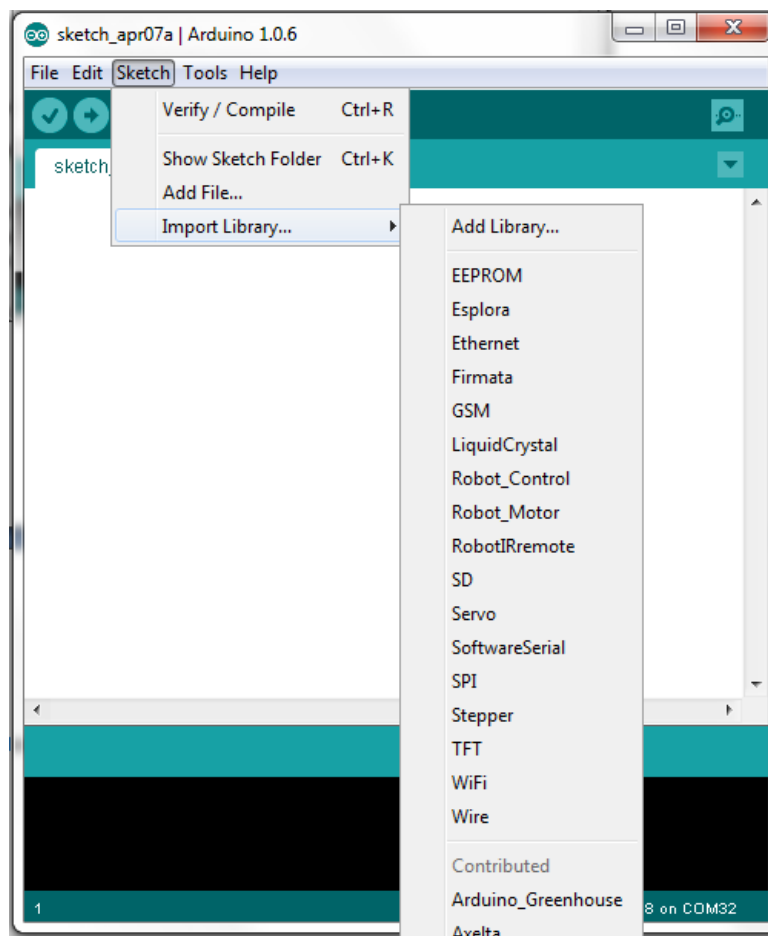

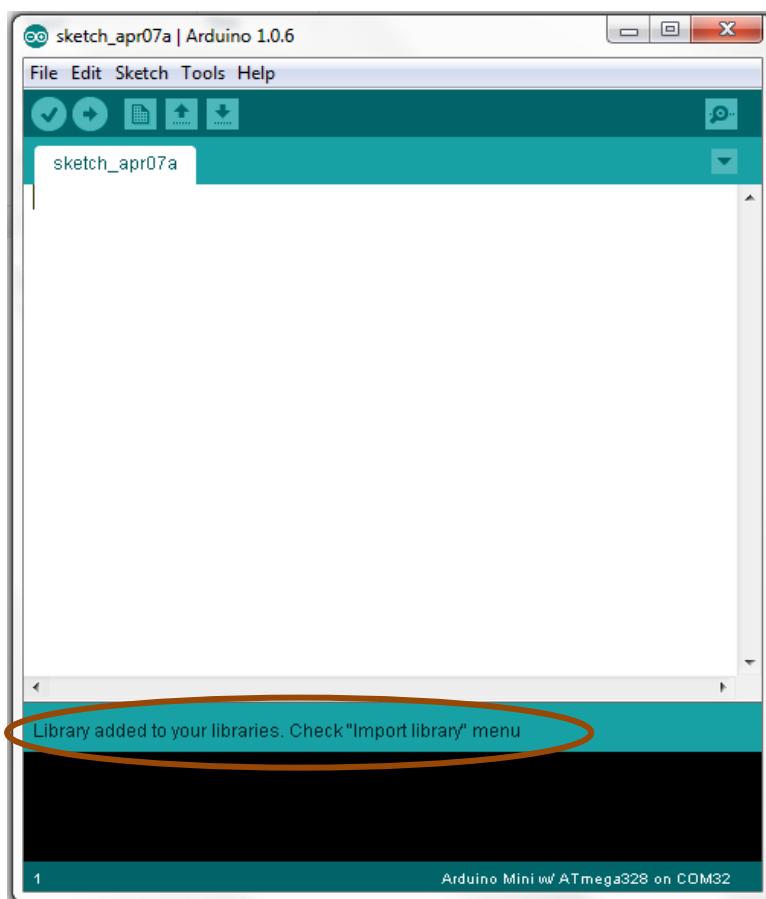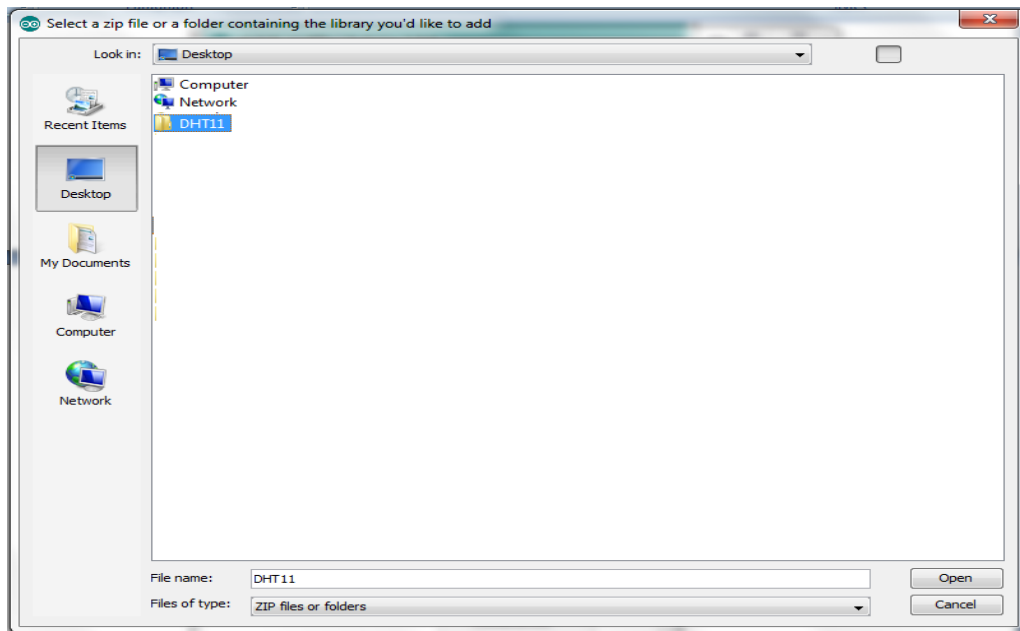

Now we can upload the all sensor practical code and we can see humidity sensor data on our LCD.