

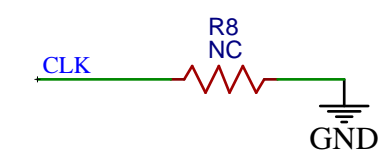
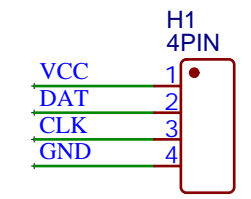



It is recommended to keep pads for R1,R2,R3,R4. If board has limited space,it is ok to delete the pads and get connected directly.

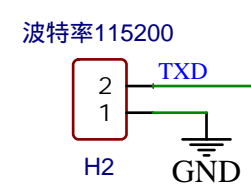


It is no dead zone mode when CLK is suspended.It is dead zone mode when CLK is grounded.

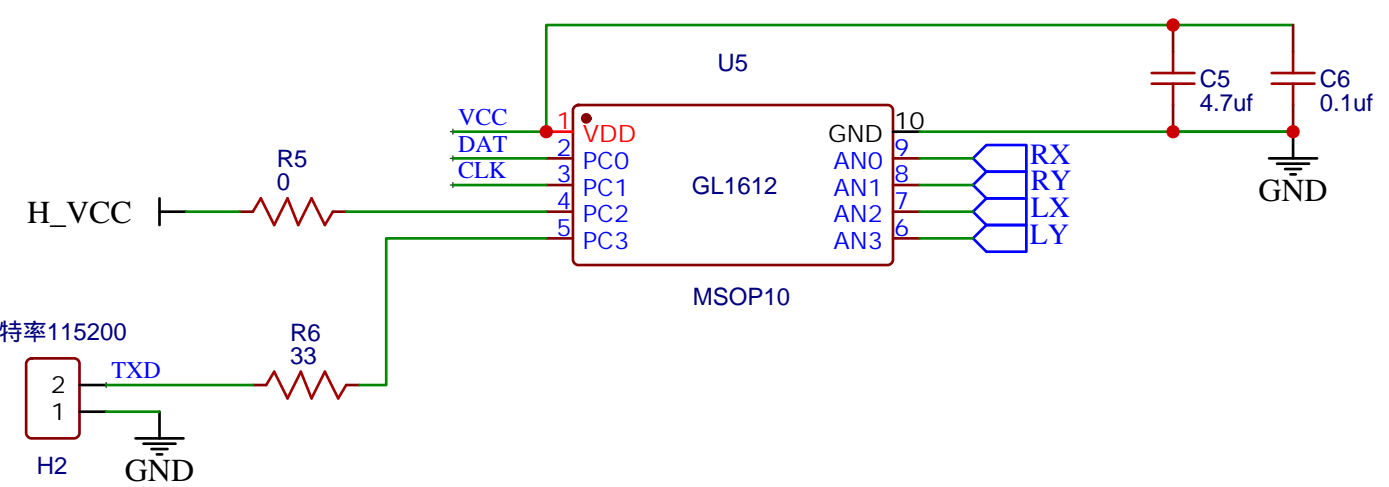

Firmware programming port

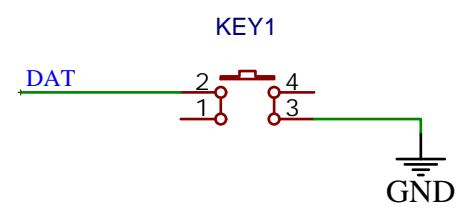

Calibration on joystick under low level, test points to be reserved on PCB,calibration to be made on production or through MCU I / O port,It is high level under normal operation.

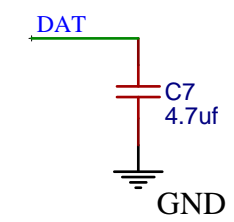

As above, joystick gets calibrated automatically when controller is turned on

TITLE: GL1612		REV: 1.2
	Company: GuliKit	Sheet: 1/1
Date: 2022-10-19		Drawn By: gl