


Additive Crosstalk

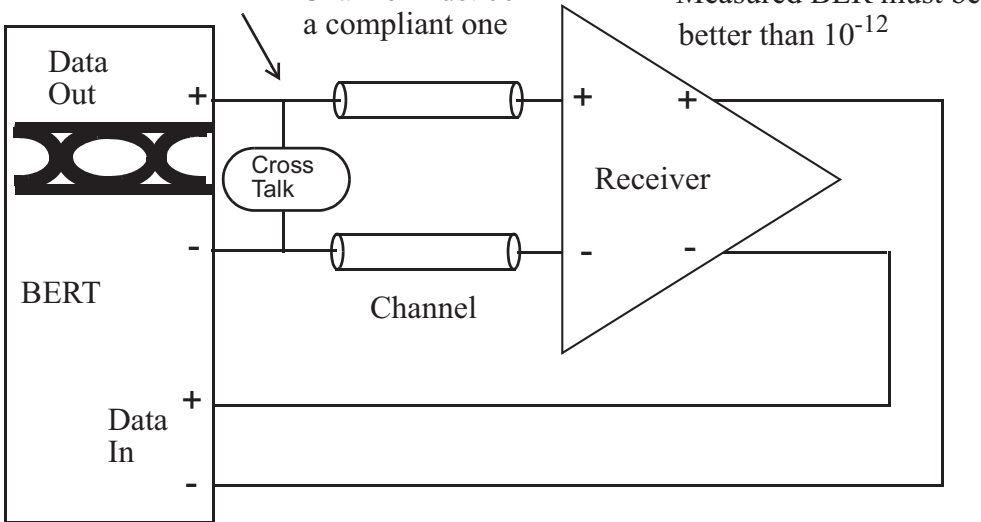

Crosstalk is added if the compliant channel used does not close the reference model receiver equalizer output eye to the specified minimum amplitude. The crosstalk amplitude is determined using the receiver reference model.