

# Survivor Multi-Tool

1. Section 1: Introduction .....	4
1.1: Welcome to Manual .....	4
1.2: What is Survivor Multi-Tool? .....	4
2. Section 2: Getting Started .....	5
2.1: Unboxing .....	5
2.2: Initial Inspection .....	5
2.3: Familiarization .....	5
2.4: Battery Installation .....	5
2.5: Safety Precautions .....	5
2.6: Maintenance .....	5
3. Section 3: Using the Knife .....	7
3.1 Safety Precautions .....	5
3.2 Deploying the Knife .....	7
3.3 Cutting and Slicing .....	7
3.4 Sharpening the Knife .....	7
3.5 Storing the Knife .....	7
4. Section 4: Using the Saw .....	8
4.1: Locating the Saw .....	8
4.2: Using the Saw .....	8
4.3: Safety Precautions .....	5
4.4: Maintenance .....	5
4.5: Troubleshooting .....	8
5. Section 5: Starting Fire .....	9
5.1 Fire Starter Location .....	9
5.2 Using the Fire Starter .....	9
5.3 Safety Precautions .....	5
5.4 Maintenance and Care .....	9
6. Section 6: Using Other Features .....	10
6.1 Using the Saw .....	8
6.2 Using the Fire Starter .....	9
6.3 Using the Knife .....	10
6.4 Using Other Tools .....	10
7. Section 7: Maintenance .....	11
7.1 Cleaning .....	11
7.2 Sharpening .....	11

7.3 Lubrication .....	11
7.4 Storage .....	11
7.5 Inspection .....	11
7.6 Battery Replacement .....	11
8. Section 8: Troubleshooting .....	13
8.1 The knife is not sharp enough .....	13
8.2 The fire starter is not igniting .....	13
8.3 The saw blade is getting stuck .....	14
9. Section 9: Warranty Information .....	15
9.1 Warranty Coverage .....	15
9.2 Making a Warranty Claim .....	15
9.3 Warranty Exclusions .....	15
9.4 Warranty Process .....	15
9.5 Return Process .....	15
9.6 Limitations of Liability .....	15
9.7 Contact Information .....	16

# 1. Section 1: Introduction

---

## 1.1: Welcome to Manual

Welcome to this manual for the Resilience Gear Survivor Multi-Tool. This manual will help you to understand how to use your Survivor Multi-Tool effectively in various survival situations. Please read carefully and follow the instructions to avoid injury or damage.

## 1.2: What is Survivor Multi-Tool?

The Survivor Multi-Tool is a versatile and durable tool designed to help you in survival situations. It features a knife, saw, fire starter, and more. With its compact design, it is easy to carry with you on outdoor adventures. Whether you are camping, hiking, or facing an emergency situation, the Survivor Multi-Tool is designed to help you in your time of need.

## 2. Section 2: Getting Started

---

### 2.1: Unboxing

Congratulation on your purchase the amazing Resilience Gear Survivor Multi-Tool. Open the package with caution, and take out the multi-tool and examine it for any damage. Please do not try to use the multi-tool if it appears to be damaged as this may cause injury. Contact customer service for any damage to the product.

### 2.2: Initial Inspection

Inspect the Survivor Multi-Tool for all parts. Ensure all the parts are present and that there are no visible defects. Take extra care to inspect the knife, saw, and fire starter as these are the main features. If there are any issues, please contact Resilience Gear customer service immediately.

### 2.3: Familiarization

Familiarize yourself with the main components of the Survivor Multi-Tool. This includes the knife, saw, fire starter, and other tools. Also, become familiar with the locations of the buttons and the maneuvering of the controls, ensuring that you understand how to access each feature of the multi-tool.

### 2.4: Battery Installation

The Survivor Multi-Tool does not require any batteries as it is a traditional multi-tool. However, if you have a battery-operated version, please follow the specific instructions in the battery installation section of this manual.

### 2.5: Safety Precautions

Always handle the Survivor Multi-Tool with care, keeping your fingers away from the sharp edges of the knife and saw. Do not use the fire starter near flammable materials and always make sure it is fully extinguished after use. Do not attempt to disassemble or modify the multi-tool as this may void the warranty and result in injury.

### 2.6: Maintenance

Regularly clean and oil the moving parts of the Survivor Multi-Tool to ensure smooth operation. Keep the blades sharp and replace any worn or damaged parts as soon as

possible. Store the multi-tool in a dry place and avoid exposure to extreme temperatures or moisture.

## 3. Section 3: Using the Knife

---

The knife on the Survivor Multi-Tool is an essential tool for various tasks, including cutting, slicing, and carving. Please note that the knife blade is extremely sharp and should be handled with caution at all times.

### 3.1 Safety Precautions

When using the knife, always ensure that the blade is fully extended and locked in place before use. Avoid making sudden or jerky movements with the knife to prevent accidental cuts. Keep the knife away from children and handle it with care to avoid injury.

### 3.2 Deploying the Knife

To deploy the knife, locate the knife release button on the handle. Press the button firmly to release the blade from its locked position. Carefully extend the blade to its full length until you hear a click, indicating that it is securely in place.

### 3.3 Cutting and Slicing

When using the knife for cutting or slicing tasks, hold the multi-tool firmly in one hand with a secure grip. Use the other hand to guide the knife blade, applying gentle and controlled pressure for precise cutting. Always cut away from your body to avoid accidental injuries.

### 3.4 Sharpening the Knife

The knife blade may become dull with extended use. To sharpen the blade, use a sharpening stone or a knife sharpener. Hold the blade at the appropriate angle and carefully run it along the sharpening surface to restore its sharpness.

### 3.5 Storing the Knife

When not in use, always securely lock the knife blade back into its housing on the multi-tool. Store the multi-tool in a dry and secure location, keeping it out of reach of children.

## 4. Section 4: Using the Saw

---

Welcome to section 4 of the Resilience Gear Survivor Multi-Tool manual. In this section, we will go over how to use the saw feature of the multi-tool. Please follow the instructions carefully for safe and effective use.

### 4.1: Locating the Saw

The saw feature of the Survivor Multi-Tool is located on the side of the tool, opposite to the knife. It is identified by its jagged blade and is positioned in a slot for easy access.

### 4.2: Using the Saw

To use the saw, first, ensure that the tool is fully extended and locked in place. Then, grip the handle firmly and use the saw in a back and forth motion against the material you wish to cut. The sharp teeth of the saw blade will effectively cut through small branches and other materials.

### 4.3: Safety Precautions

When using the saw, it is important to exercise caution to avoid injury. Always wear protective gloves and eyewear when using the saw feature. Keep the blade away from your body and be mindful of your surroundings to prevent accidents.

### 4.4: Maintenance

After each use, clean the saw blade with a dry cloth to remove any debris. Apply a small amount of oil to the blade to prevent rust and ensure smooth operation. Keep the saw feature folded when not in use to prevent accidental contact.

### 4.5: Troubleshooting

If you encounter any issues with the saw feature, such as difficulty in cutting or the blade becoming dull, please contact Resilience Gear customer support for assistance.



## 5. Section 5: Starting Fire

---

Welcome to Section 5 of the Survivor Multi-Tool user manual. This section will guide you through the process of using the fire starter feature of your multi-tool.

### 5.1 Fire Starter Location

The fire starter feature is located on the top side of the multi-tool, identified by its red handle. You can easily access it by sliding the protective cover to reveal the fire starter rod.

### 5.2 Using the Fire Starter

To start a fire using the Survivor Multi-Tool, follow these steps:

1. Hold the fire starter rod firmly in one hand and the striker in the other hand.
2. Position the rod close to the tinder and firmly scrape the striker along the length of the rod to create sparks.
3. Continue striking the rod until the sparks ignite the tinder and start a fire.

### 5.3 Safety Precautions

When using the fire starter feature, please keep these safety precautions in mind:

- Ensure the area around the fire starter is clear of any flammable materials.
- Use caution to prevent any accidental sparks from igniting unintended materials.
- Do not touch the end of the rod immediately after use, as it may still be hot.

### 5.4 Maintenance and Care

To maintain the efficiency of the fire starter feature, periodically clean the rod and striker to remove any buildup of debris. Additionally, ensure that the protective cover is securely closed to prevent accidental activation.

## 6. Section 6: Using Other Features

---

### 6.1 Using the Saw

The saw feature of the Survivor Multi-Tool is located on the right-hand side of the tool. To use the saw, ensure that the tool is securely in your hand, and then carefully pull the saw blade back and forth against the material you wish to cut. The saw blade is extremely sharp, so use caution when handling it.

### 6.2 Using the Fire Starter

The fire starter feature of the Survivor Multi-Tool is located at the bottom of the handle. To use the fire starter, hold the tool with the fire starter facing down, and then using the back of the knife blade, strike the fire starter rod to create sparks that can be used to start a fire.

### 6.3 Using the Knife

The knife feature of the Survivor Multi-Tool is located in the center of the tool. To use the knife, carefully pull the knife blade out from the tool and use it for cutting and slicing tasks. Remember to use caution when handling the knife blade, as it is extremely sharp.

### 6.4 Using Other Tools

The Survivor Multi-Tool also includes various other tools such as pliers, screwdrivers, and a bottle opener. Each tool can be accessed by carefully opening the corresponding section of the tool and using the specific tool for its intended purpose.

## 7. Section 7: Maintenance

---

### 7.1 Cleaning

To keep your Survivor Multi-Tool in top condition, it is essential to clean it regularly. After each use, wipe the tool with a damp cloth to remove any dirt or debris. Pay special attention to the knife blade, saw, and fire starter, as these are the parts that often get the dirtiest.

### 7.2 Sharpening

To ensure the knife and saw remain sharp and effective, it is important to sharpen them regularly. Use a sharpening stone or file to carefully sharpen the blade, following the existing angle of the edge. Be sure to also sharpen the fire starter to maintain its effectiveness.

### 7.3 Lubrication

Regular lubrication of moving parts is crucial to keep your Survivor Multi-Tool operating smoothly. Apply a small amount of oil to the pivot points of the knife and saw, as well as to the fire starter mechanism. This will prevent rust and corrosion, and ensure the tool functions properly when needed.

### 7.4 Storage

When not in use, store your Survivor Multi-Tool in a cool, dry place. Avoid leaving it in damp or humid conditions, as this can lead to rust and corrosion. Additionally, it is recommended to store the tool in its protective carrying case to prevent damage and maintain its overall condition.

### 7.5 Inspection

Regularly inspect your Survivor Multi-Tool for any signs of wear, damage, or malfunction. Check the locking mechanism of the knife and saw to ensure they are secure, and inspect the fire starter for any signs of wear. If any issues are found, discontinue use of the tool and contact Resilience Gear for assistance.

### 7.6 Battery Replacement

The Survivor Multi-Tool does not require batteries, therefore this maintenance section does not apply.

## 8. Section 8: Troubleshooting

---

### 8.1 The knife is not sharp enough

If you are experiencing issues with the sharpness of the knife on the Survivor Multi-Tool, please follow these steps:

1. **Check Blade Position:** Ensure that the knife blade is properly positioned and locked in place. Using the diagram below as a reference, make sure the blade is securely locked in the open position.
2. **Sharpening:** If the blade is properly positioned but still not sharp enough, you may need to sharpen it. Use a knife sharpener to carefully sharpen the blade. Be sure to follow proper safety precautions when sharpening the knife.
3. **Replacement:** If the blade is unable to hold an edge, it may need to be replaced. Contact Resilience Gear customer support for information on obtaining a replacement blade.

Diagram: Proper Blade Position  
[Survivor Multi-Tool]




### 8.2 The fire starter is not igniting

If you are having trouble igniting the fire starter on the Survivor Multi-Tool, please try the following steps:

1. **Check Position:** Ensure that the fire starter is positioned correctly. Refer to the diagram below for the proper position of the fire starter.
2. **Dry Surface:** Make sure the surface of the fire starter is dry. If it has come into contact with moisture, use a cloth to dry it off before attempting to ignite it.

3. **Strike Firmly:** When using the fire starter, strike firmly and consistently along the length of the fire starter rod. Apply pressure and use a consistent motion to generate sparks.
4. **Contact Customer Support:** If you are still unable to ignite the fire starter, please contact Resilience Gear customer support for further assistance.

Diagram: Proper Fire Starter Position  
[Survivor Multi-Tool]

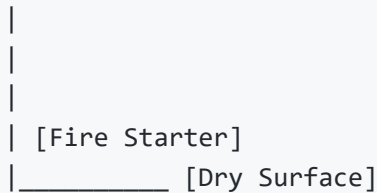

## 8.3 The saw blade is getting stuck

If the saw blade on the Survivor Multi-Tool is getting stuck during use, please follow these troubleshooting steps:

1. **Clear Debris:** Check the saw blade for any debris or obstructions. Clear away any material that may be causing the saw blade to stick.
2. **Proper Technique:** Ensure that you are using the saw blade with the proper technique. Apply steady and consistent pressure while sawing to prevent the blade from getting stuck.
3. **Inspect Blade:** Examine the saw blade for any signs of damage or wear. If the blade is damaged, it may need to be replaced. Contact Resilience Gear customer support for information on obtaining a replacement blade.

## 9. Section 9: Warranty Information

---

### 9.1 Warranty Coverage

The Resilience Gear Survivor Multi-Tool comes with a limited lifetime warranty, covering any defects in materials and workmanship under normal use. This warranty does not cover damages caused by misuse, abuse, or unauthorized modifications.

### 9.2 Making a Warranty Claim

To make a warranty claim, please contact our customer service team at [warranty@resiliencegear.com](mailto:warranty@resiliencegear.com). You will need to provide proof of purchase and a description of the issue.

### 9.3 Warranty Exclusions

The warranty does not cover the following:

- Normal wear and tear
- Damage caused by improper use
- Loss or theft of the multi-tool
- Damage caused by exposure to extreme conditions

### 9.4 Warranty Process

In the event of a warranty claim, our customer service team will assess the issue and determine if it falls within the coverage of the warranty. If the issue is deemed to be covered, we will repair or replace the multi-tool at no cost to you.

### 9.5 Return Process

If a return is necessary, we will provide you with instructions on how to return the product. Please ensure that the multi-tool is securely packaged to prevent any damage during transit.

### 9.6 Limitations of Liability

Resilience Gear shall not be liable for any incidental or consequential damages resulting from the use or inability to use the Survivor Multi-Tool. This includes damages to other items or property, and personal injury.

## 9.7 Contact Information

For any questions regarding the warranty or to make a claim, please contact our customer service team at:

- Email: [warranty@resiliencegear.com](mailto:warranty@resiliencegear.com)
- Phone: 1-800-555-1234