


13. Addendum

13.1 Reference Diagrams

The diagrams in this section are to intended to aid in product installation and troubleshooting. For more information contact LORD MicroStrain® Technical Support ([see Technical Support on page 52](#)).

13.1.1 Sensor Dimensions and Origin

This diagram describes the sensor physical specification including the measurement point of origin.

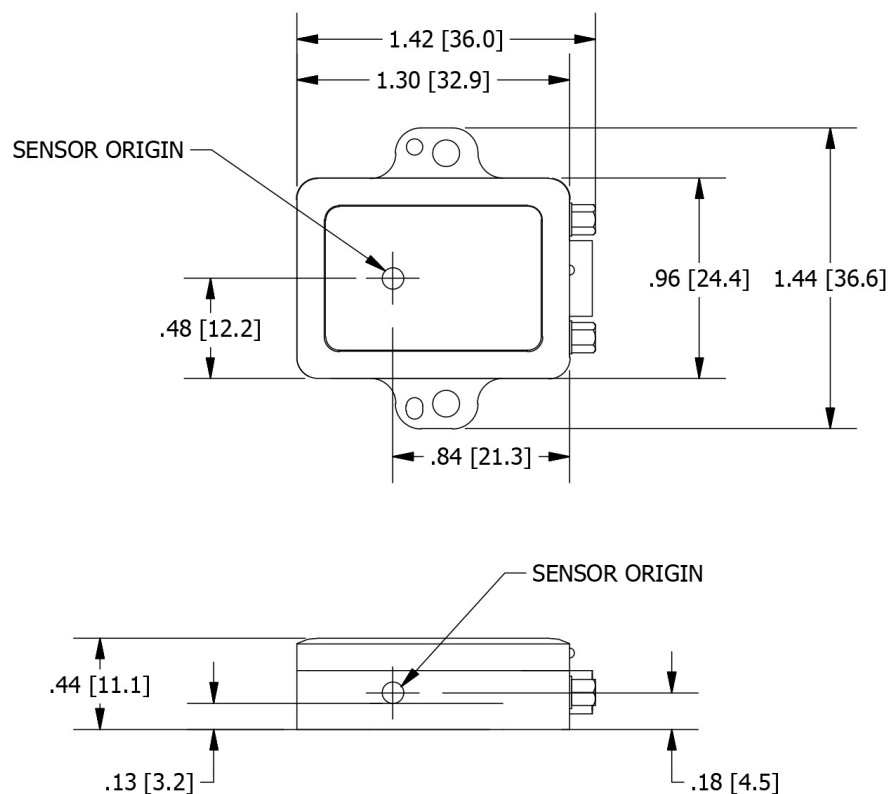

ALL DIMENSIONS ARE IN INCHES [mm]

Figure 34 - 3DM-GX4™ Sensor Origin