

NexECMRtx

License Activation step by step

(NET series and OEM platforms are no need to do license activation)

Manual Rev.: 1.1


Revision Date: July, 3rd, 2015

Part No:

Revise note:

Date	Ver	Description
2014/12/8	1.0	Create this document
2015/7/3	1.1	Change Document format, Add NET/OEM description

Activation flow chart

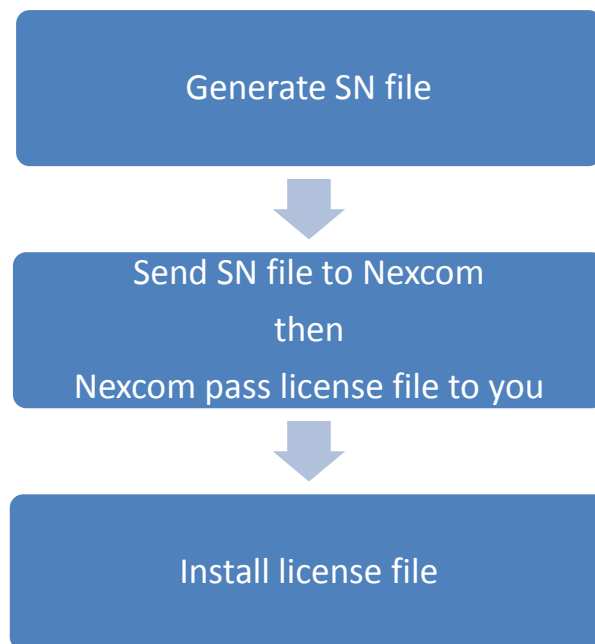

NexECMRtx Activation Step by Step

Step1: Open the NexCAT utility. If the warning window “Load NexECMRtx” is showed, please click ”Yes” to load the NexECMRtx.rtss

Step2: Open the “License Installer” windows by clicking the “License” in the top menu.

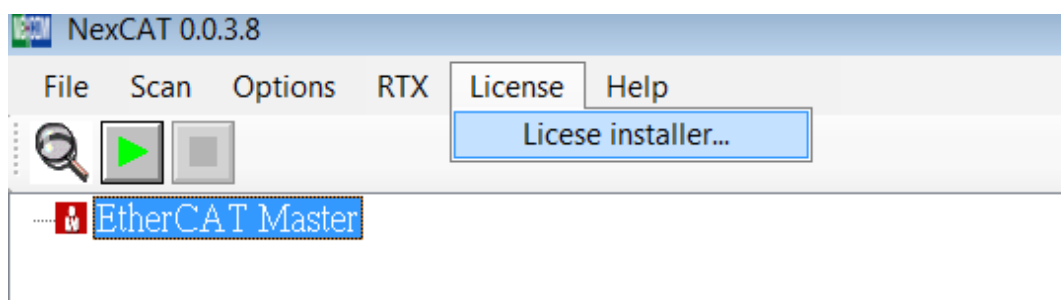


Fig. Open the License installer window

Step3: Click “Get SN File” on the window to get the “NexCAT.sn” file.

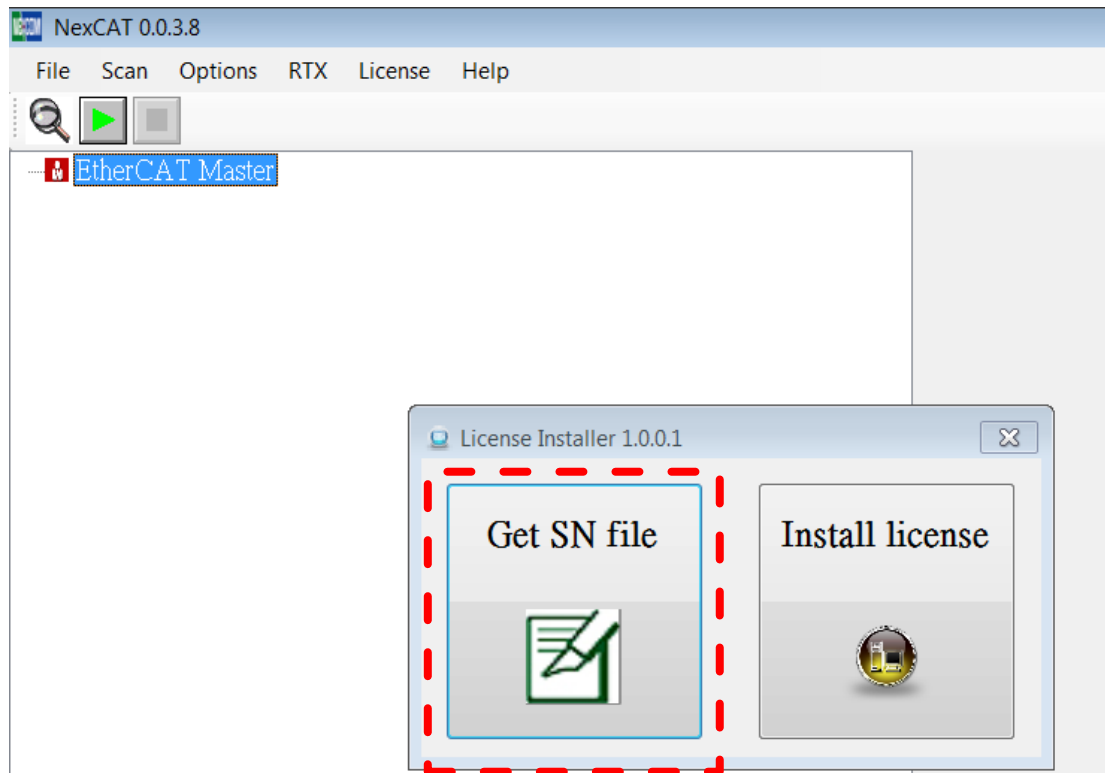


Fig. License installer window

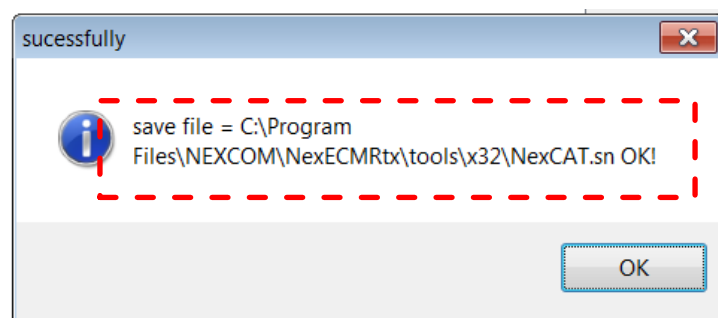


Fig. NexCAT.sn storing path

Step4: Contact to us and pass the “NexCAT.sn” file to us to get the “NexCAT.lcs” file.

Step5: After get the “NexCAT.lcs” file, open the “License Installer” window again.

Step6: Click the “Install license” , the browse window will jump out.

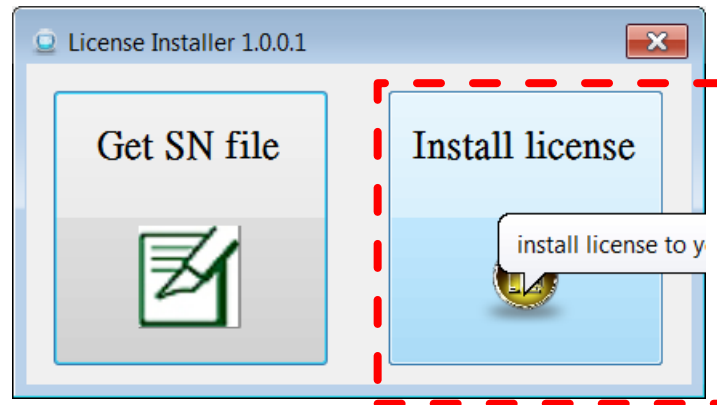


Fig. Install license

Step7: Please browse to the path in which the “NexCAT.lcs” is and click “OK” to activate, and then restart NexCAT utility.

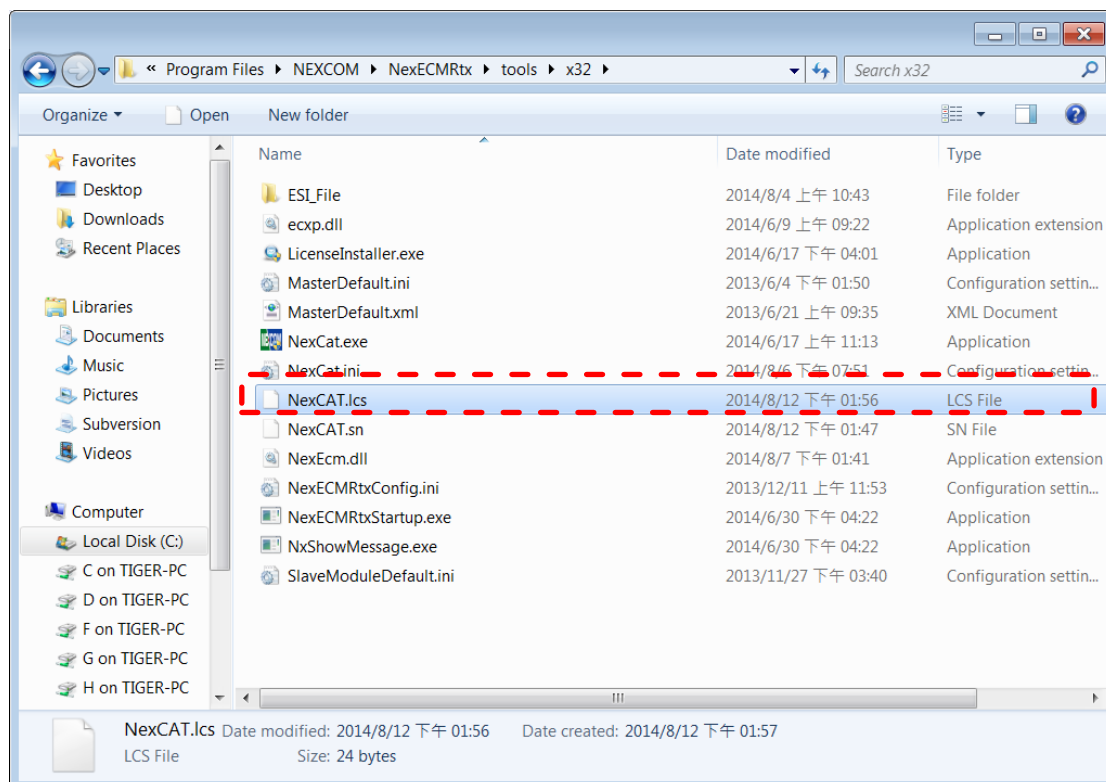


Fig. The path in which the “NexCAT.lcs” is

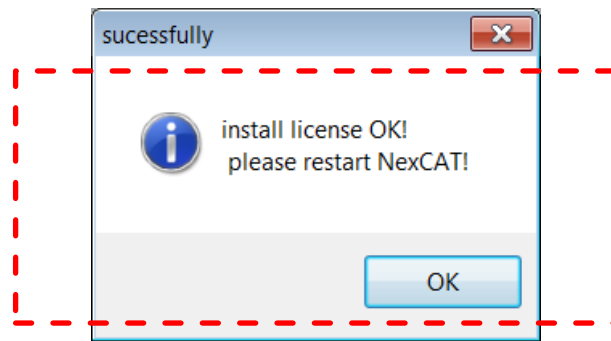


Fig. Activation successful