



MoreFun



MF66终端用户手册

(Terminal User Manual)

在使用前请阅读用户手册
(Please read the user manual before using)

■ 装箱清单

本机完整的包装盒中应包括以下部件，开箱时请检查是否齐全：

- | | |
|-----------------|----|
| (1)MF66主机（连电源线） | 1台 |
| (2)用户手册 | 1份 |

■ 注意事项

1. 安全注意事项：

- ◇请勿拆机以防终端无法正常使用。
- ◇终端内置电池，请注意防水防火。
- ◇请勿用酒精或其他腐蚀性液体清洁本机。

2. 密码输入防偷窥注意事项：


- ◇本机只能在安全有保障的环境下使用；
- ◇在输入密码时，请用手和身体遮挡可能被窥视的视角，防止输密码时被其他人偷窥；
- ◇请勿在可能被摄像设备拍摄到按键区域的环境下输入密码；

3. 声明

对于本设备的任何改良更新，我方保留随时更改文档而不另行通知的权利。请勿自行拆解设备，否则，我司不承担保修和更换设备的权利。

福建魔方电子科技有限公司对本手册涵括的商标，享有商标权并受法律保护。

■ 产品外观

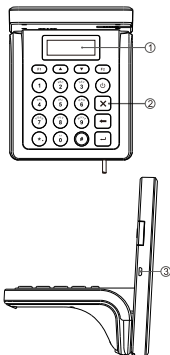

1. 数码管显示屏

2. 按键区



3. MicroUSB口
(可用于充电)

4. SIM卡槽

5. 扬声器


6. 液晶

7. 非接感应区

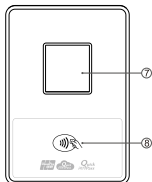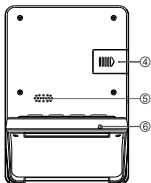


■ 充电图示

底座电源线usb口接入适配器或电脑主机U口进行供电

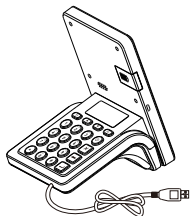

■ 安装SIM卡（GPRS版）

注意！

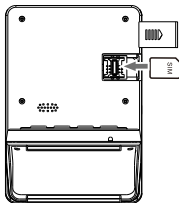

◇ 安装或拆卸SIM卡应确保本机处于关机状态，否则可能损坏卡片；

◇ SIM卡不可粘贴不干胶、标签等介质影响卡片厚度，否则可能导致SIM卡的装入或卸出不能顺利进行；

■ WIFI连接设置（WIFI版）



图1



图2





图3



图4





图5

1. 待机界面，按F1,进入操作界面，选择“管理”--->“通讯参数设置”菜单，选择“WIFI”菜单（图1）
2. 选择“1.路由器列表”搜索附近WLAN（等待搜索完成）（图2）
3. 显示路由器列表，通过按键“

■ 射频卡、支持NFC手机操作

将卡片、手机放在面盖上印有“”的读卡区域，即可进行快速支付交易操作。




图1



图2

■ 二维码支付

机器联机获取二维码后，液晶显示二维码，手机进行扫码支付。



■ 开关机

开机：关机状态下，按住电源键“⏻”，约2秒后看到显示启动画面则开机成功，此时可以松开电源键；

关机：开机状态下，按住电源键“⏻”2秒以上，当看到关机提示界面时，松开电源键，此时在提示界面选择确认关机即可关机；

注意：

- 1.如果遇到不响应的情况，请拔掉充电电源，长按电源键5秒以上关机。
- 2.关机前请确保重要的交易操作已经完成，避免不必要的数据丢失。

魔方产品保修凭证

尊敬的用户

您好！

非常感谢您购买魔方产品，为了让您更好地使用本产品，我们按照以下服务承诺，为您提供专业、快捷、真诚的服务。为了维护您的权益，请务必要求销售单位按要求填写并盖章（销售单位），凭此保修凭证您将获得我公司客户服务中心及指定授权维修中心的售后服务。

魔方产品保修服务

自购机之日起，在7天内出现非人为损坏的性能故障，凭有效购机发票及有效保修凭证，客户可以选择修理或更换同型号同规格产品（要保证原主机的完好及所有配件齐全）。

在保修期内，出现非人为损坏的性能故障，凭有效购机发票及有效的保修卡，到我司指定的客户服务中心或授权维修中心进行免费维修；

自购机之日起，主机保修一年。

自购机之日起，内置电池保修6个月。

保修期满后或不属于免费保修范围，我司将为用户提供有偿维修服务。

在保修期间，如有下列情况，不属于免费保修范围：

◇ 浸水或人为因素造成的损坏；

◇ 未按说明书指示要求使用造成的损坏；

◇ 自行拆卸维修而造成的损坏；

◇ 由于自然原因等外部因素所造成的损坏。

◇ 未能提供有效购机发票或有效保修凭证，或未按
要求填写凭证内容。

■ 产品保修卡

（此页为保修的基本凭证，需销售单位盖章后才能生效，请认真填写并妥善保存）

用户姓名/住址	
用户联系电话	
型号	
序列号	条 码 与 主 机 一 致
充电器	
电池（内置）	
天 线	
其 它	
发票号码	
销售单位名称 (请加盖公章)	
销售单位地址	
经办人	
购机日期	年 月 日

用
户
保
存

魔方电子保留对产品技术规格、外观设计改进和改变的权利；
配件供应因市场而有不同，请与当地经销商联系查询；
所有图片仅供参考，产品以实物为准。

■ Packing List

The complete package of the machine should include the following parts, please check if anything missing:

- | | |
|-----------------------------------|--------|
| (1) MF66 device (with power cord) | 1 set |
| (2) User Manual | 1 copy |

■ Attentions

1.Safe Attentions:

◇ Do not disassemble, to prevent the terminal can not be used normally.

◇ Battery built-in, please pay attention to water and fire prevention.

◇ Do not clean the machine with alcohol or other corrosive liquids.

2.Attention for password input privacy:

◇ The machine can only be used in a safe and secure environment;

◇ When entering the password, use hand and body to block the perspective that may be peep;


◇ Do not enter the password in the environment where may be photographed the keypad area by camera;

3.Statement:

For any changes or updates to this device, we reserve the right to change the documents at any time without notice .Do not disassemble the equipment by yourself or we will not responsible for the warranty and replacement of the equipment.

Fujian Morefun Electronic Technology Co., Ltd own the trademark right and legal protection on the trademarks covered in this manual.

■ Product appearance

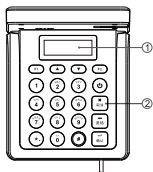

1.Digital tube display screen

2.Keypad area

3.Micro USB interface




(Can be used for charging)

4. SIM card slot

5. Speaker


6. Liquid crystal screen

7. NFC card reading area

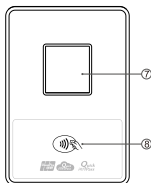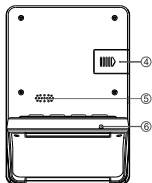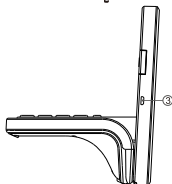

■ Charging icon

Let the power core's USB port switch in adapter or computer host U port for power supply.

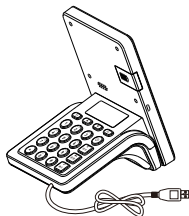


■ Install SIM (GPRS version)

Attention !

◇ The machine must be power off before installing or removing SAM or SIM card , otherwise may cause card damaged;

◇ SIM cards can not be affixed stickers, labels and other media affect the thickness of the card, or may result in SIM card loading or unloading can not be carried out smoothly;

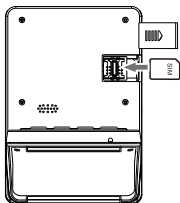

WIFI connection settings (WIFI version)




Figure 1




Figure 2




Figure 3




Figure 4




Figure 5

1. Standby interface, press F1 to enter the operation interface, select "Management" ---> "Communication Parameter Settings" menu, select "WIFI" menu (Figure 1)
2. Select "1. Router List" to search for nearby WLAN (wait for search to complete) (Figure 2)
3. Display router list, through the key "▼" to choose to connect to the WLAN, press the confirm key to view the selected wlan s pecific information
4. Press the Enter key to enter the wifi password input interface, connect the selected WIFI and authentication, authentication through the prompt connection is successful. (Figure 3)
5. Select "2. Router List" to see the details of the currently connected router; (Figure 4)
6. Select "3. Device Information" to view the device information (Figure 5)
7. The upper left corner of the interface wifi signal icon "📶" shows that is not connected; "📶" shows that is connected.

■ RF card, support NFC mobile phone operation


Please put card or phone on the reading area like this picture “”, which can be used for quick payment transaction operation.



图1



图2

■ QR code payment

After the machine online access to the QR code, the liquid crystal display QR code, the mobile phone can perform scanning payment.



■ Starting up & Shutdown

Starting up: Press the power key “⏻” when it’s off state, after about 2 seconds you will see starting up screen, it means booting successfully, then you can release the power button;

Shutdown: Press the power key “⏻” more than 2 seconds when it’s on state. It will shows the shutdown prompt interface, please release the power button then select to confirm the shutdown.;

Attention:

1.If encounter crashes, please, Please unplug the charging power, press the power button for more than 5 seconds to shut down.

2.Please make sure that important transaction operations have been completed before the shutdown, to avoid data loss.



MoreFun



福建魔方电子科技有限公司

Fujian Morefun Electronic Technology Co.,Ltd.

地址：福州市高新区海西高新技术产业园创新园10号楼A-602
电话：0591-23507080 网址：www.morefun-et.com

Address: A-602, No.10 Building, HaiXi Innovation Park, High-Tech Zone, Fuzhou, Fujian, China
Tel: 0086-591-23507080 Web: www.morefun-et.com