



Hood Prop may be located on either side of the engine compartment, depending on model year.  
Installation is the same on either side.

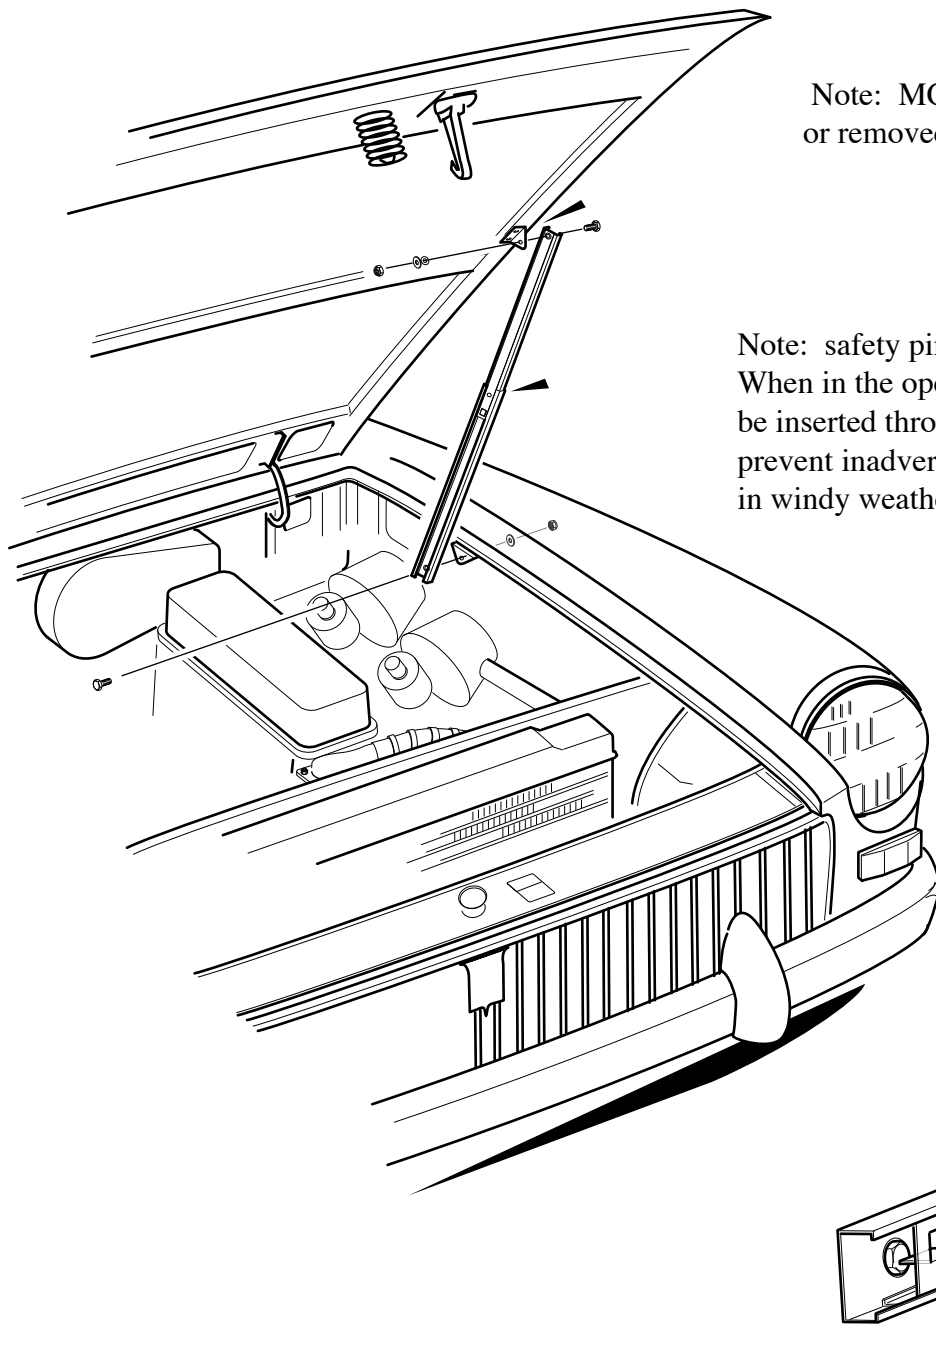

Note: MGB hood bracket may be bent inward, or removed and reversed for added clearance.

Note: safety pin holes are provided on these props. When in the open/latched position, a safety pin may be inserted through the inner and outer channels to prevent inadvertent unlatching of the prop (use this in windy weather!).

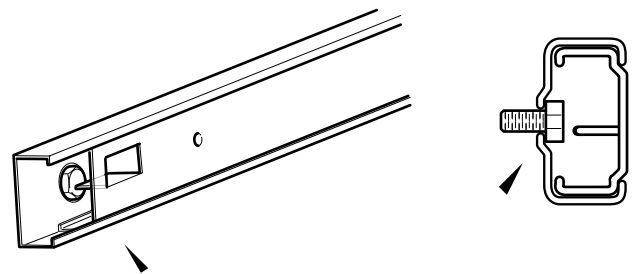

### Problems?

Note how the bolt head must sit in the recess to avoid interference with the striker.  
If your hood will not close, and it appears the prop is hitting the radiator shroud, this is the true problem.

You may grind the bolt head down for extra clearance, if desired.