




1、System Block Diagram:

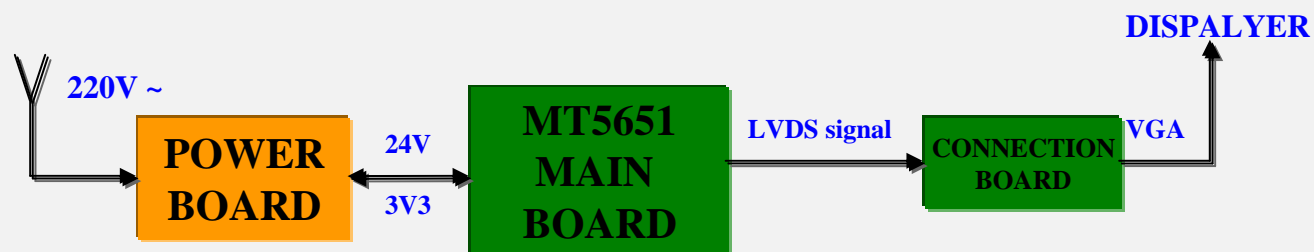

Product Photo:

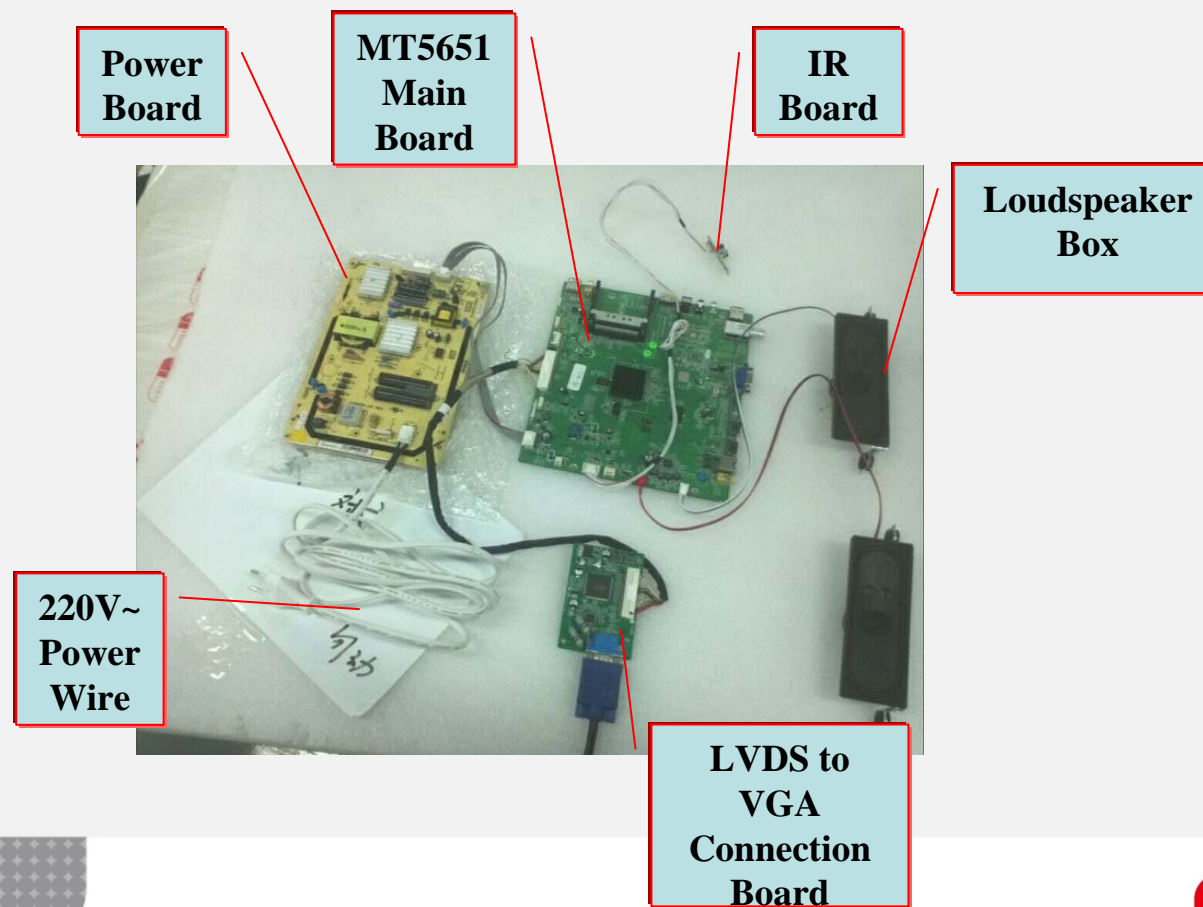

Please connect the board as the photo below:

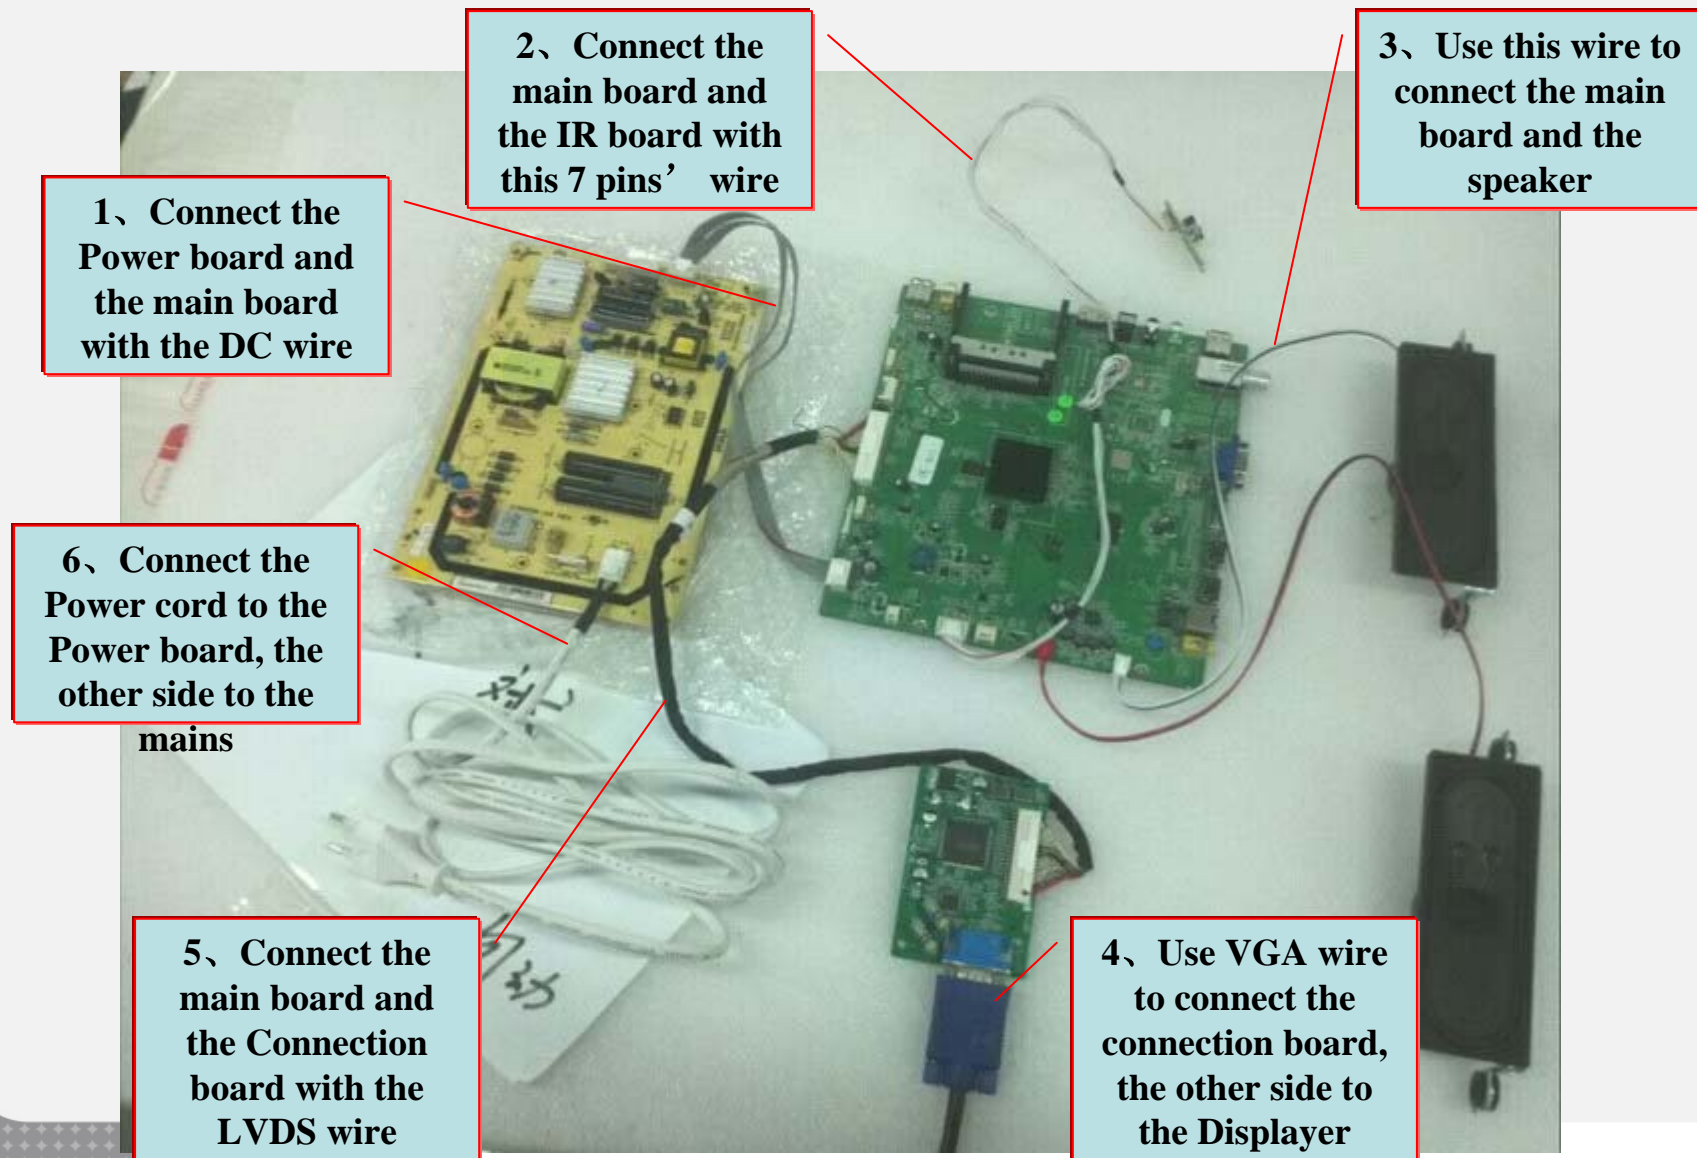

2、 Operation instruction of the development boards :

FIRST: Use VGA wire connect the connection board and the displayer;

Second: Insert the power wire into the AC socket (220-240V~);

Third: Turn on the displayer ,you can see the MT5651 OSD and control it through the remote control unit;

3、 Additional remarks

First: If the OSD isn't at the center of the display, please give signal to the main board and then adjust the displayer (auto adjust);

Second:



If the display is incorrect, please toggle the two buttons (JEDIA_SEL or GND, FULLHD_SEL or GND);
Note: In general keep it the original state.

Third:



Do not touch any electronic components of the Power board!
When you finished the connection of the wires, you'd better cover it with something non-conducting before plug the AC wire into mains.

Thank you!