

ASSIGNMENT-4

Assignment Date	02 October, 2022
Student name	Gowshini B
Student Roll no	727819TUIT021
Maximum marks	2 marks

QUESTION:

Write Code and connections in wokwi for ultrasonic sensor. whatever distance is less than 100 cms send “Alert” to ibm cloud aand display in device recent events

CODING:

```
//Pins
```

```
const int TRIG_PIN = 7 ;
```

```
const int ECHO_PIN = 8;
```

```
//Anything over 400 cm (23200 us pulse) is "out of range"
```

```
const unsigned int MAX_DIST = 23200;
```

```
void setup() {
```

```
// The Trigger pin will tell the sensor to range find
```

```
Pin Mode(TRIG_PIN, OUTPUT);
```

```
digital Write(TRIG_PIN, LOW);
```

```
//Set Echo pin as input to measure the duration of
```

```
//pulses coming back from the distance sensor
```

```
pinMode(ECHO_PIN, INPUT ) ;
```

```
// We'll use the serial monitor to view the sensor output
```

```
Serial.begin(9600);
```

```
}
```

```
void loop() {
```

```
unsigned long t1;
```

```
unsigned long t2;
```

```
unsigned long pulse_width;
```

```
float cm;
```

```
float inches;
```

```
// Hold the trigger pin high for at least 10 us
```

```
digitalWrite(TRIG_PIN, HIGH);  
delayMicroseconds(10);  
digitalWrite(TRIG_PIN, LOW);  
  
// Wait for pulse on echo pin  
while (digitalRead( ECHO_PIN )==0 );  
  
// Measure how long the echo pin was held high (pulse width)  
// Note: the micros() counter will overflow after-70 min  
t1= micros ();  
while (digitalRead(ECHO_PIN) == 1);  
t2= micros ();  
pulse_width = t2-t1;  
  
// Calculate distance in centimeters and inches. The constants  
//are found in the datasheet, and calculated from the assumed speed  
// of sound in air at sea level (- 340m/s)  
cm=pulse_Width / 58 ;  
inches = pulse_width/148.0;  
  
// Print out results
```

```
if (pulse_width > MAX_DIST ){
  Serial.println("Out of range");
} else {
  Serial.println("*****");
  Serial.print("The Measured Distance in cm: ");
  Serial.println(cm);


  if( cm < 100 ){
    //while(true){
      Serial.println("Alert!!");
    //}
  }

  Serial.print("*****");
}

//wait at least 1000ms before next measurement
Delay(1000);
}
```


OUTPUT:

1.If the distance is less than 100 cms ,it alerts.

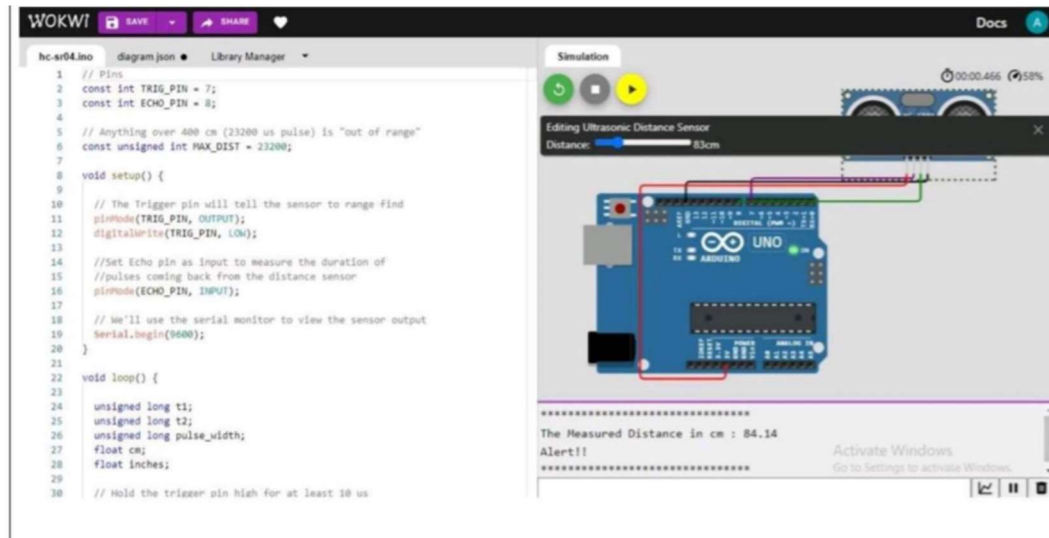


Activate Windows

2.If the distance is more than 100 cms,it won't alert

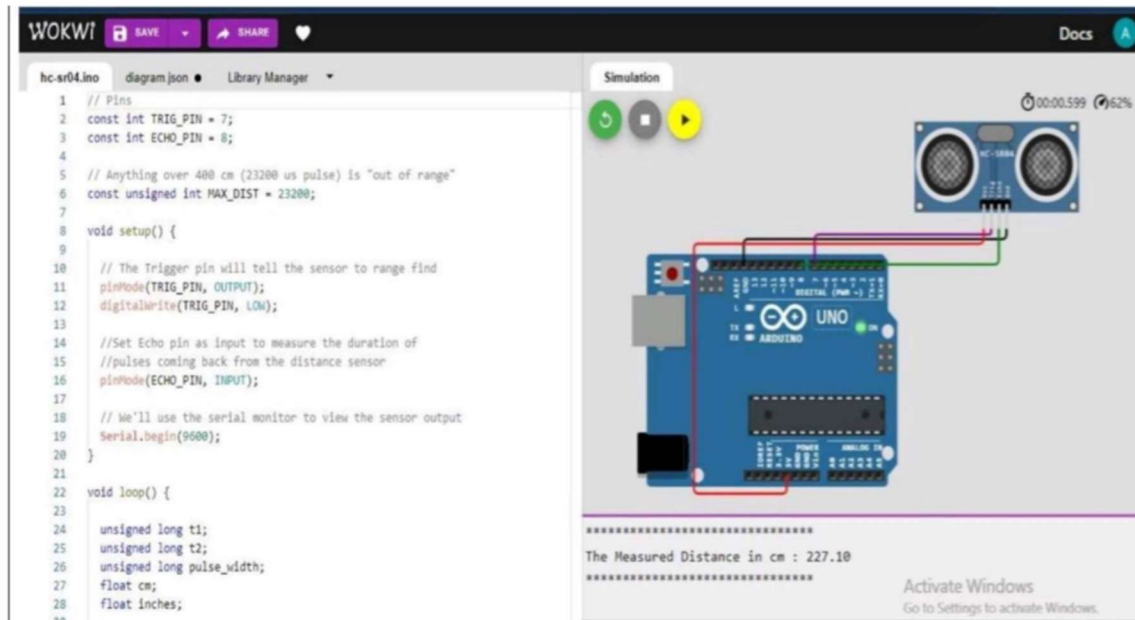

Activate Windows
Go to Settings to activate Windows.

3.Simulation and code execution

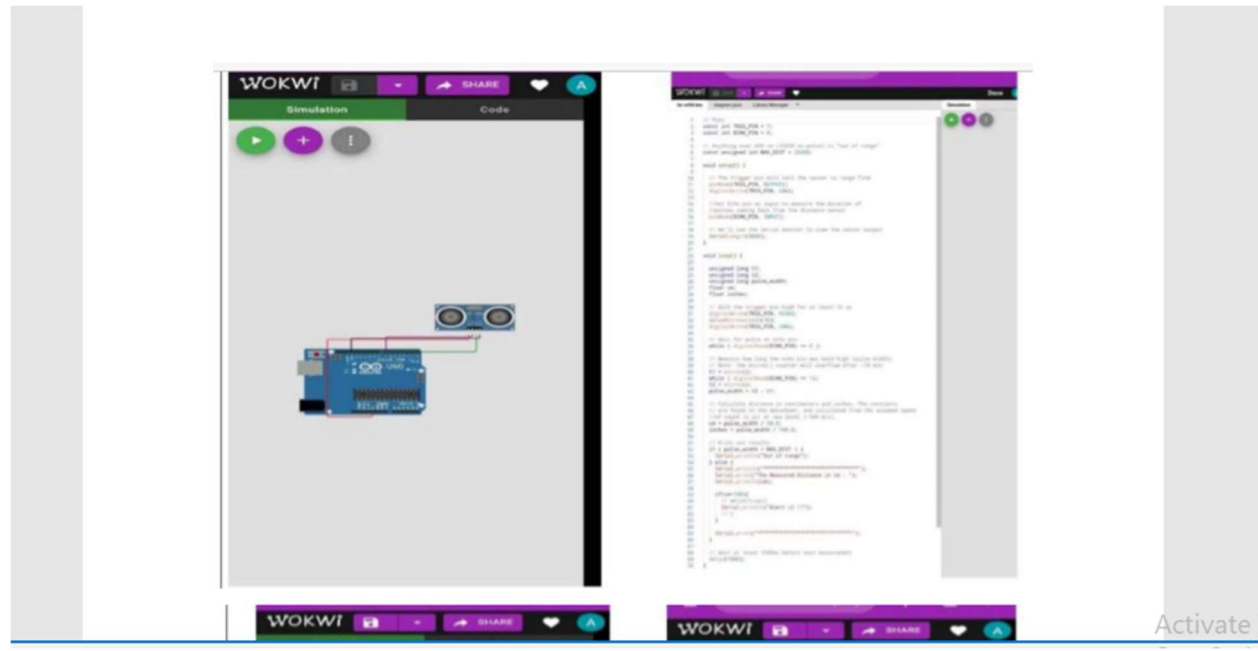

Activate

