



WINCC LICENSE TRANSFER (OFFLINE)

Doc Number : ICP-DOC-WINCC

Revision : 0

Last Modified : 08-Nov-2023

WINCC LICENSE TRANSFER (OFF LINE) SUPPORTING DOCUMENT

COPY RIGHT

All rights reserved by ICPro Solutions Pvt. Ltd. Reproduction or issue is not permitted without the written permission of ICPro Solutions Pvt. Ltd



WINCC LICENSE TRANSFER (OFFLINE)

Doc Number : ICP-DOC-WINCC

Revision : 0

Last Modified : 08-Nov-2023

Project Name:

WINCC -OFFLINE LICENSE TRANSFER SUPPORTING DOCUMENT

End Customer Name:

N/A

Document No:

ICP-DOC-WINCC

Document Title:

WINCC – LICENSE TRANSFER OFFLINE MANUAL

Prepared by:

ICPro Solutions Pvt. Ltd.

REVISION HISTORY

Initial Release for Review	00	08-11-2023	PK		
REVISION DETAILS	REVISION	REV. DATE	PREP. BY	CHECKED	APPROVED



Contents

1. Introduction	4
1.1 Purpose.....	4
2. Overview of the steps for Offline transfer	4
2.1 From Source PC (Start Code – File 1):.....	4
2.2 From Target PC (Request Code – File 2) :	7
2.3 From Source PC (Activation Code – File 3):.....	10
2.4 From Target PC (License Key Activate – By File 3):	13

1. Introduction


1.1 Purpose

The Purpose of this document is transferring a Wincc License from one PC to another PC by Offline method and also here we explained the step-by-step procedure for Transfer license from Source PC to Target PC.


2. Overview of the steps for Offline transfer

2.1 From Source PC (Start Code – File 1):


- Open the **Automation License Manager** (Run as an Administrator)

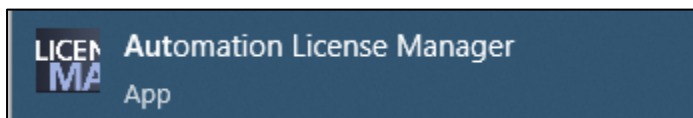

- Click the **License Key** in the title bar.

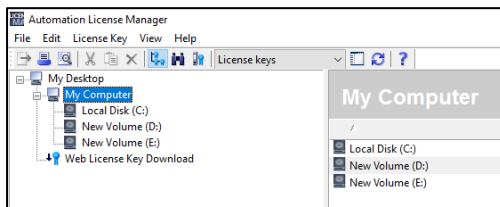

- Select the **Offline Transfer**

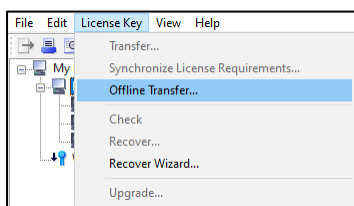

- Insert the License key (Pen drive) in Laptop / PC, it shown in the My desktop, with the new USB Drive.
- Open the folder named by License number and found that License file is available in the **“License Keys”**





WINCC LICENSE TRANSFER (OFFLINE)

Doc Number : ICP-DOC-WINCC

Revision : 0


Last Modified : 08-Nov-2023

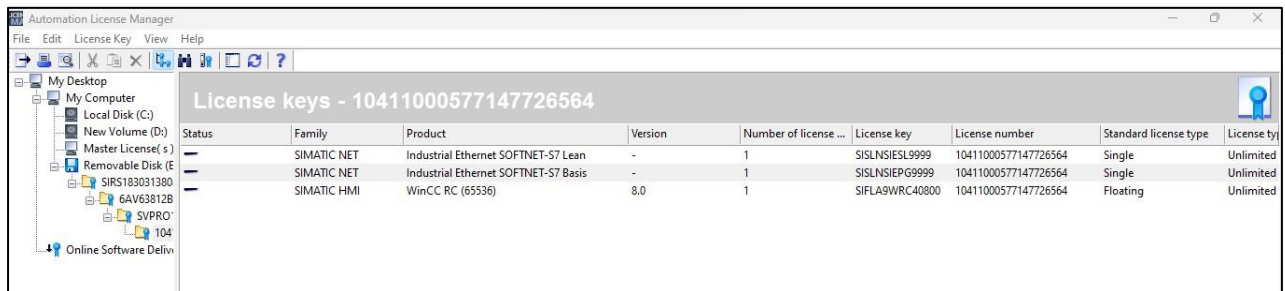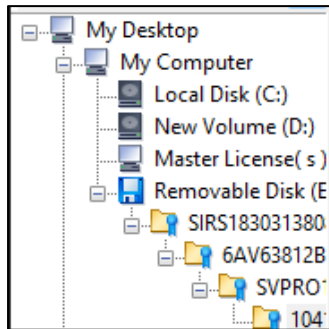

- Here in this Pen drive it has three license keys.

Note: In Pen drive the respective License Key certificate should be available.


- In Offline Transfer is we mentioned as Two PC/Laptop,
- Source
- Target
- Source means that PC have a License Keys,
- Target is mean that PC need a License (By offline method),
- The following Options for Offline transfer
- Generate start code,
- Generate request code,
- Generate activation code,
- Active license Key(s),

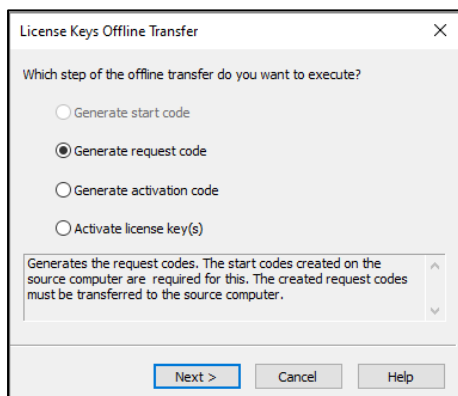


Note: We transferred the offline Lince transfer, Source PC Automation License Manager not same version in the Target PC Automation License Manager

- Source PC—Version 6.0 SP11 64-bit edition
- Target PC – Version 6.0 + SP9 + Upd3 64-bit edition
- Select the "Generate start code" option and click "Next". The "Wizard for Sending License Key(s)" dialog opens. The list contains the start codes of all available license keys.

Select the license keys you want to transfer in the table and click the "Save" button.

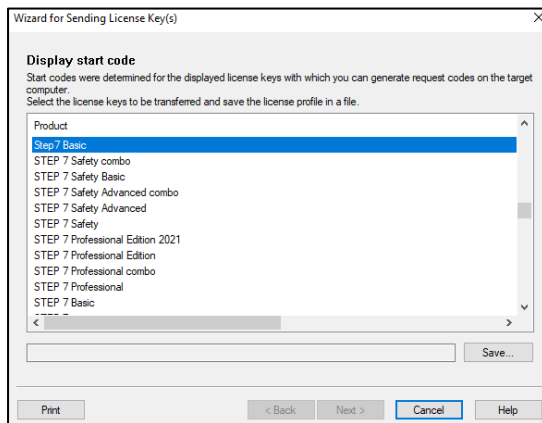

- Select the path and the license profile file in which the start codes will be saved and click "Save" is **File-1**

This PC > Documents > Wincc Offline License Transfer Files				
Name	Date modified	Type	Size	
 AutoLMList1.aut	08-11-2023 16:20	AUT File	3 KB	

- . Click the "Next" button
- Transfer the start codes to the target computer.

For example:

- The license profile file by e-mail
- The start codes by phone
- A printout by fax
- If you want to close the dialog and enter the request codes later, click "Cancel Or click "Next".



WINCC LICENSE TRANSFER (OFFLINE)


Doc Number : ICP-DOC-WINCC

Revision : 0


Last Modified : 08-Nov-2023

2.2 From Target PC (Request Code – File 2) :


- Save a start code file (File-1) from source PC to “Respective Folder” in Target PC.

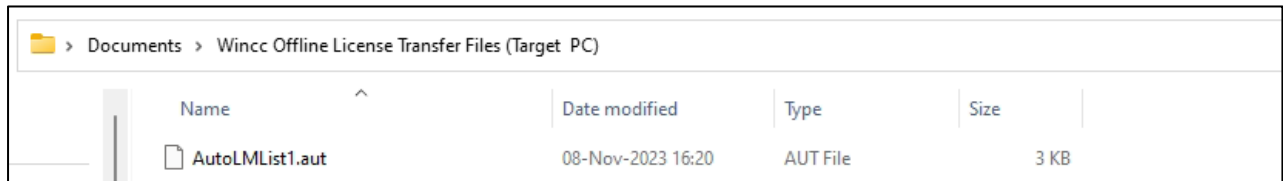


- Open the **Automation License Manager** (Run as an Administrator)




- Click > License key > Offline Transfer > Generate Request code

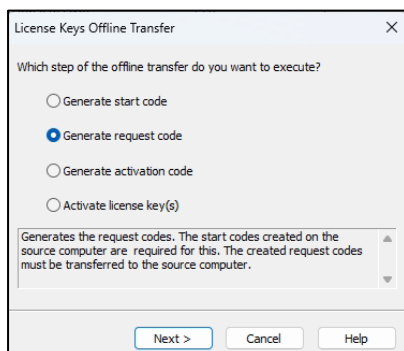



- Click **Next > Load > The file-1** from source PC (AutoLMist1.aut),

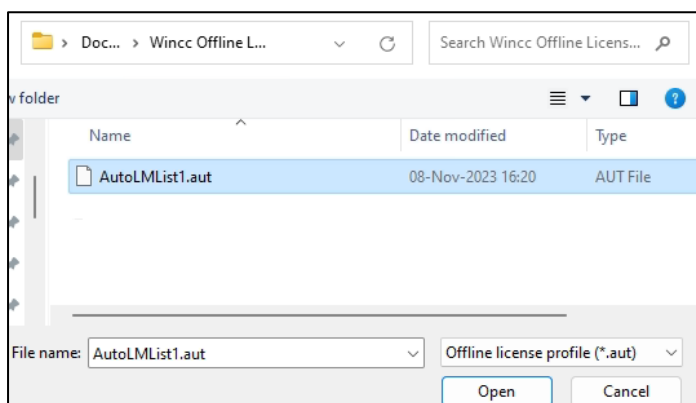

- After the loading a file (File-1), Click “Yes” the Load file.

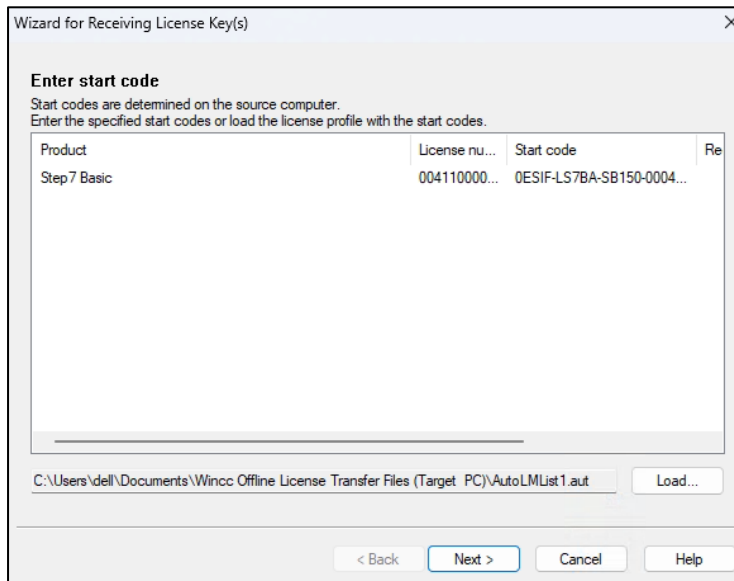

- Click Next

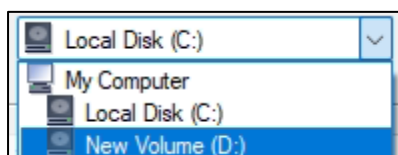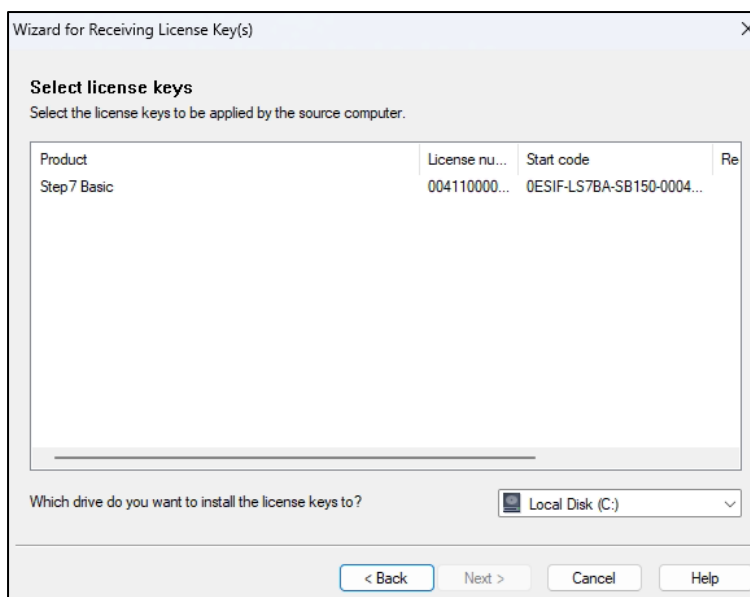

- Select the which Drive want to install License Keys, it depends on PC from PC, here we installed.

Select license keys

Select the license keys to be applied by the source computer.

Product	License nu...	Start code	Re
Step7 Basic	004110000...	0ESIF-LS7BA-SB150-0004...	

Which drive do you want to install the license keys to?

Local Disk (C:) ▼

< Back Next > Cancel Help

- Click the License in product,
- Click next and Save the File **(File-2)**

The screenshot shows a Windows File Explorer 'Save As' dialog. The current location is 'Doc... > Wincc Offline L...'. The left sidebar shows the 'wincc OG offline' folder selected. The main pane displays a table of files:

Name	Date modified	Type
AutoLMList1.aut	08-Nov-2023 16:20	AUT File

At the bottom, the 'File name' field contains 'AutoLMList2.aut' and the 'Save as type' is set to 'Offline license profile (*.aut)'. The 'Save' button is highlighted.

- Send or paste this file (File-2) in Source PC file path as existing folder,



WINCC LICENSE TRANSFER (OFFLINE)

Doc Number : ICP-DOC-WINCC

Revision : 0

Last Modified : 08-Nov-2023

This PC > Documents > Wincc Offline License Transfer Files (Source PC)				
	Name	Date modified	Type	Size
	AutoLMList1.aut	08-11-2023 16:20	AUT File	3 KB
	AutoLMList2.aut	08-11-2023 16:56	AUT File	3 KB

- Click next in target Pc for Load file,

Wizard for Receiving License Key(s)

Display request code
Request codes were determined for the license keys to be transferred.
Save the license profile to a file.
Determine the activation code on the source computer.

Product	License nu...	Start code	Re
Step7 Basic	004110000...	0ESIF-LS7BA-SB150-0004...	18:

C:\Users\dell\Documents\Wincc Offline License Transfer Files (Target PC)\AutoLMList2.aut Save...

Print < Back Next > Cancel Help

2.3 From Source PC (Activation Code – File 3):

- Open a File (**File-2**) Sent from the target pc,
- Load the same file (**File-2**) in Source PC,

Wizard for Sending License Key(s)

Enter request code
Determine the request code on the target computer.
Load your license profile with the start codes and supplement the request code
or read in the license profile with the request codes.

Product	License nu...	Request code	Ste
Step7 Basic	004110000...	000-000-0000-0000	0E

< >

Load...

Print < Back Next > Abort Help




WINCC LICENSE TRANSFER (OFFLINE)


Doc Number : ICP-DOC-WINCC

Revision : 0


Last Modified : 08-Nov-2023

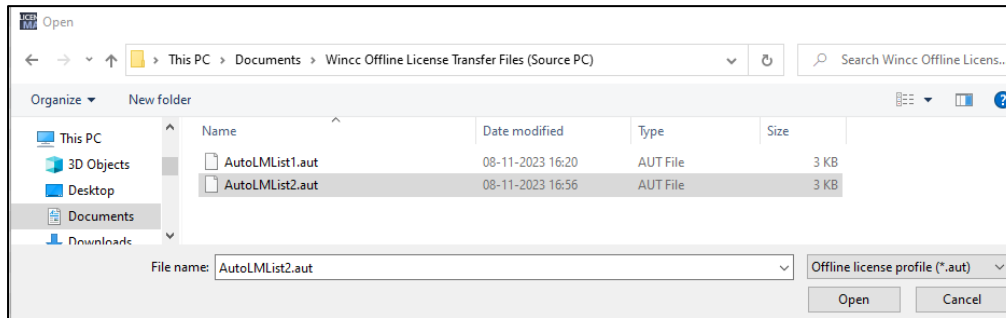


- Click Load confirm for File **(File-2)** “Yes”,

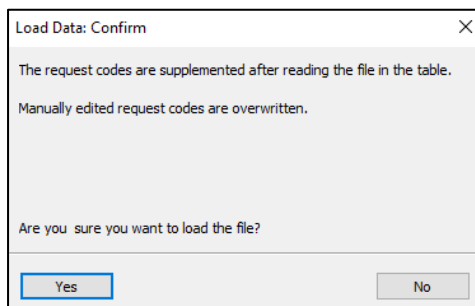


- In request code, Click Next,

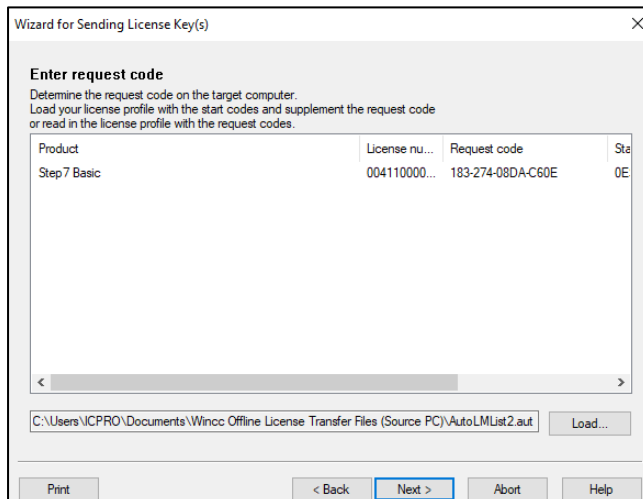


- Click Save for the save the file **(File-2)**,

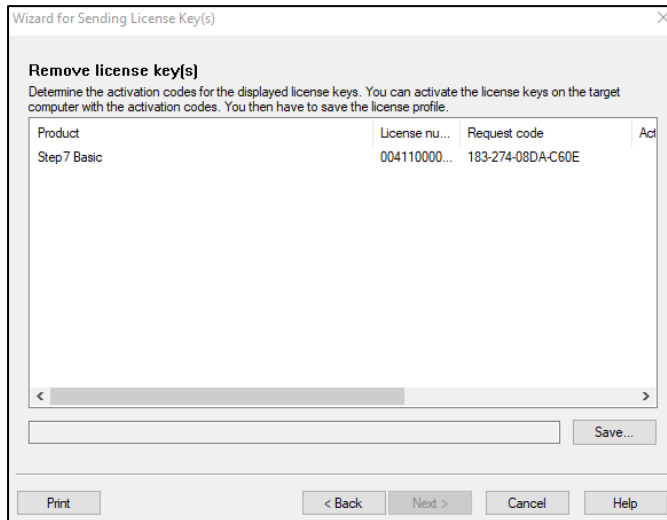


- After next, the new File will be generated is **File-3**,
- **Save the file and send to the Target PC, with same folder for License activate**

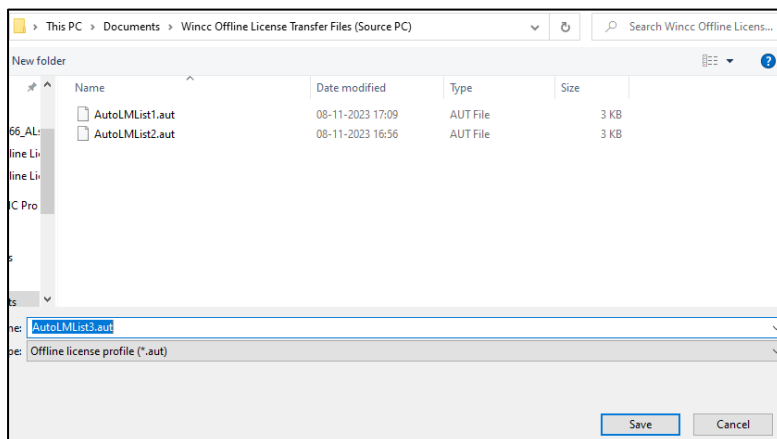

- Click Next,
- Give **Yes** for delete the License keys, if press **No** again it come under the current step.

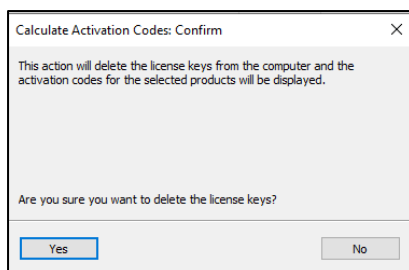


- Click **Finish for Activation Code in Source PC.**

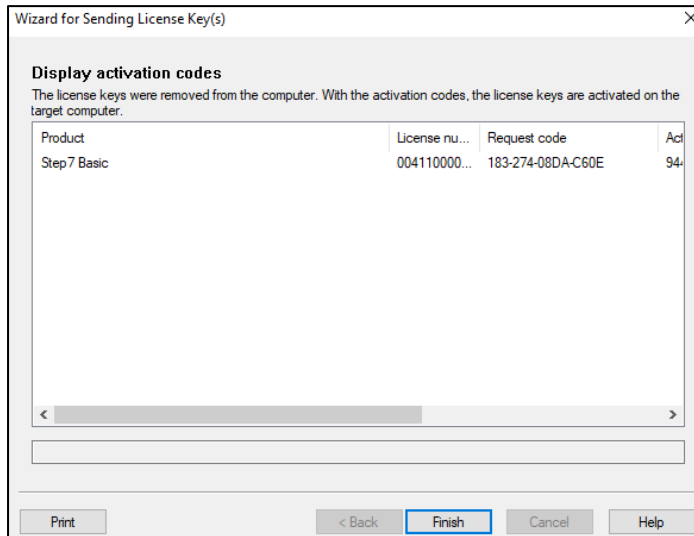



2.4 From Target PC (License Key Activate – By File 3):

- Save the file (**File-3**) from the Source PC in same folder created for License transfer file,

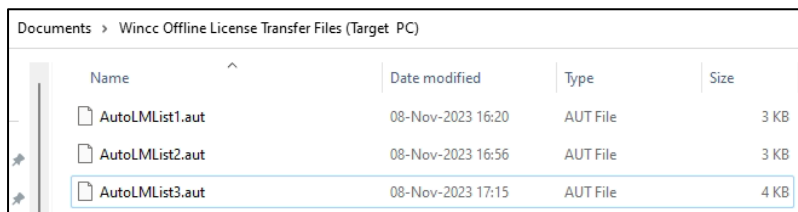


- Load the file (**File-3**) In target PC,

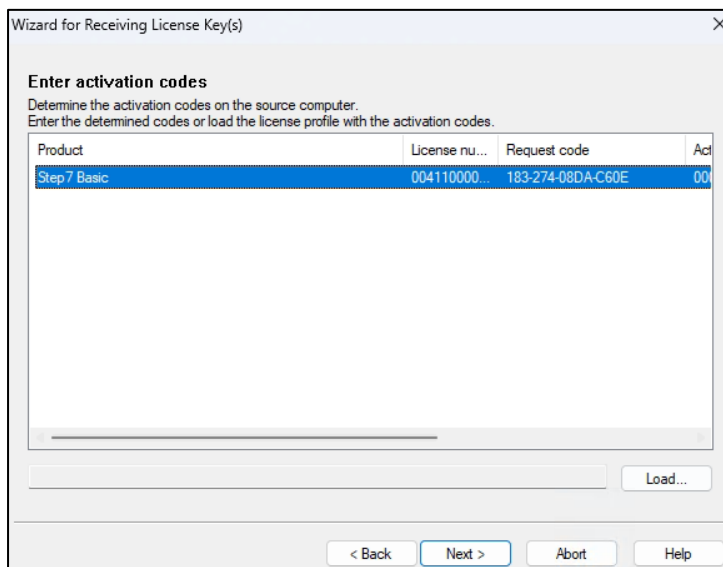


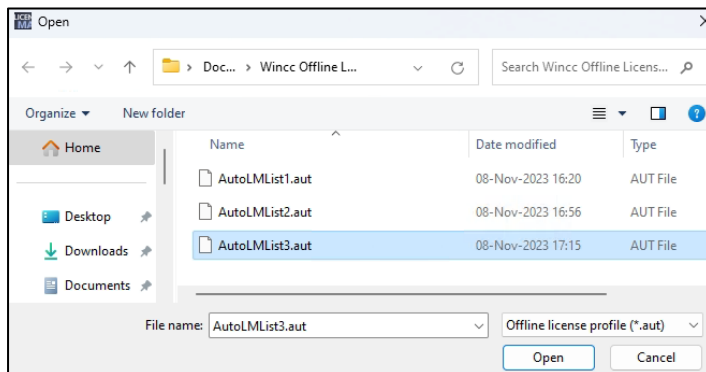

- Click **Yes** for Load data,

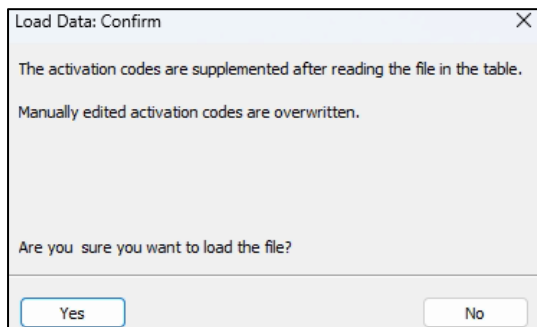

- Click **Yes** for the file **(File-3)** load,

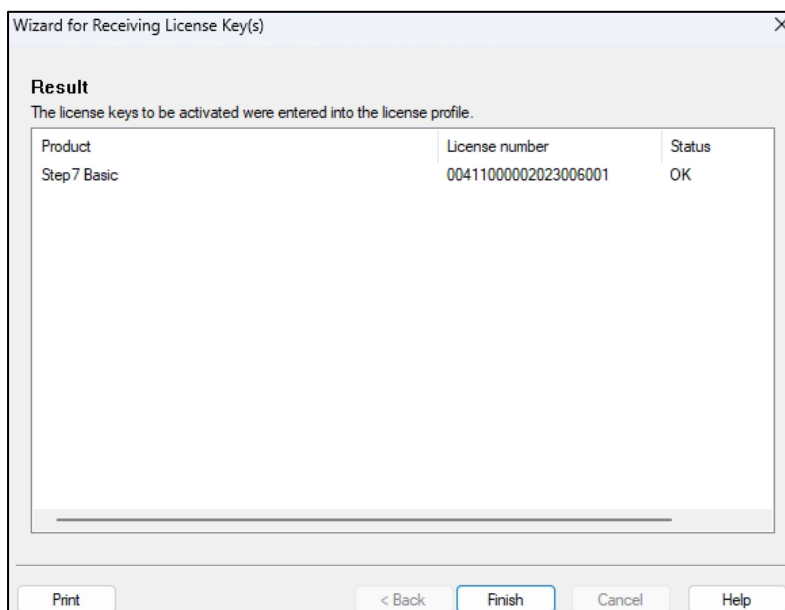

- Click **Finish** for the License is **“OK”**



WINCC LICENSE TRANSFER (OFFLINE)

Doc Number : ICP-DOC-WINCC

Revision : 0

Last Modified : 08-Nov-2023

- In Target PC, the **License Key is Transfer Successfully** and **verified in the license keys** in Automation License Manager.

Status	Family	Product	Version	Number of license ...	License key	License number	Standard license type	License ty
—	SIMATIC HMI	WinCC RT Advanced (8192)	15.0	1	SIFLWCRTO61500	00411000002021005020	Floating	Unlimited
—	SIMATIC HMI	WinCC RT Professional (max.)	15.0	1	SIFLWCRP021500	00411000002021005020	Floating	Unlimited
—	SIMATIC HMI	WinCC Professional (65536)	15.0	1	SIFLWCPRO61500	00411000002021005020	Floating	Unlimited
—	SIMATIC HMI	WinCC Professional (max.) combo	15.0	1	SIFLWCPRC21500	00411000002021005020	Floating	Unlimited
—	SIMATIC STEP 7	STEP 7 Professional Edition 2017	15.0	1	SIFLS7PROF1500	00411000002021005020	Floating	Unlimited
—	SIMATIC Step7	Step7 Basic	15.0	1	SIFLS7BASB1500	00411000002023006001	Floating	Unlimited
—	SIMATIC HMI	WinCC flexible Advanced combo	15.0	1	SIFLA9XEP11500	00411000002021005020	Floating	Unlimited
—	SIMATIC S7	PID Professional combo	15.0	1	SIFLA1PPRC1500	00411000002021005020	Floating	Unlimited
—	SIMATIC STEP 7	STEP 7 Safety Advanced combo	15.0	1	SIFLA1DSAV1500	00411000002021005020	Floating	Unlimited