




Precitec Macro Documentation

04 Move Z Collimator


■ Changelog

Date	Version	Autor	Tested on	Description
2022-04-13	A	Wre	5.16.0	New documentation
2022-06-09	B	Wre	5.16.16	UserLevels Bug fixed

■ Description

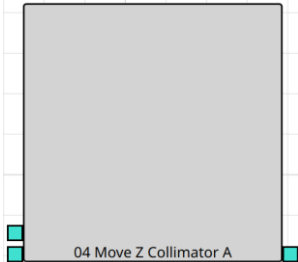	<p>Moves Z collimator to input target position when X/Y position is reached.</p> <p>I1: Z Position in mm</p> <p>I2: Position reached (e.g. from Macro "04 Move Scanner to Position")</p> <p>O1: Zcol pos in mm with rank</p>
---	---

■ Macro structure

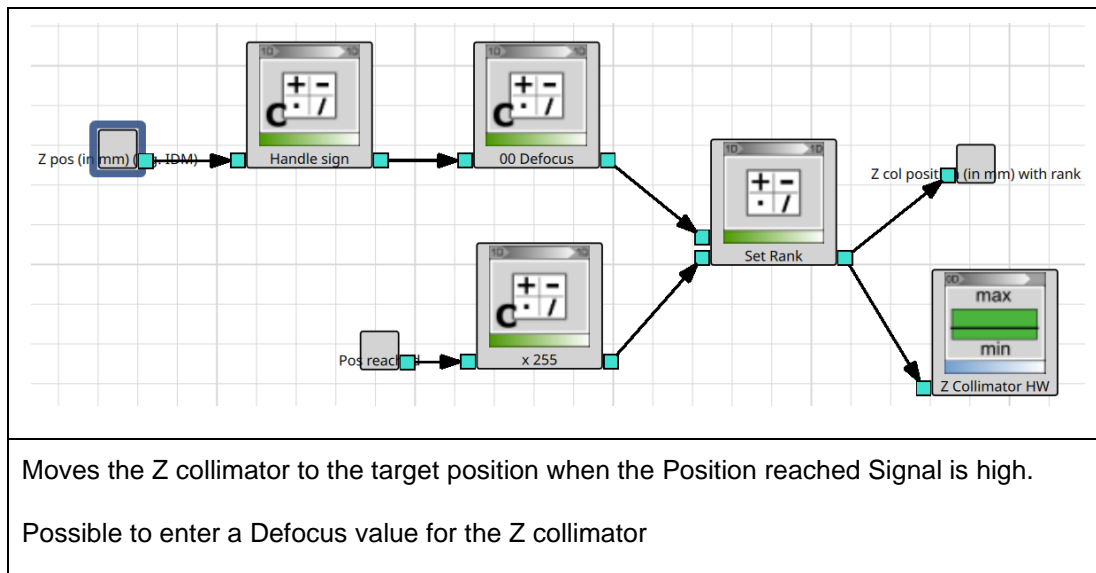

■ Parameter

NAME	VALUE	Description	UserLevel
00 Defocus → Value	0	Defocus value for the ScanMaster (in mm)	Operator