


6 - S31 Ablation result interface

■ Description


Prepares the results of ablation width left/right and ablation intensity left/right, and sends the results to the SOUVIS 6000 interface.

■ Icon



6 S31 Ablation result interface
Transfer the results of ablation width and intensity to Souvis6000 interface.

■ Parameters

Filter Groups of 6 S31 Ablation result interface


There are no parameters to set!

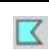
■ Measured values for plotter

119	0 ... xxx	S6K Ablation width min.
120	0 ... 255	S6K Ablation intensity max.

■ Subgraphs interface

IN bridges

OUT bridges

 value	Ablation width left / right Ablation intensity left / right ROI grey valid		
--	--	--	--

■ Graph block diagram

