


6 – S41 Souvis2 leading – Measurements for Cross-section


■ Description

The measured distance between top and bottom seam is sent to the Souvis6000 interface.

■ Icon

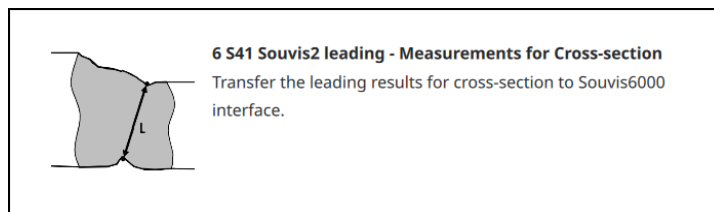

■ Parameters



There are no parameters to set!


■ Measured values for plotter

111	-xxx ... +xxx	S6K Edge position
112	0 ... xxx	S6K Gap width
114	-xxx ... +xxx	S6K Mismatch

Subgraphs interface

IN bridges

OUT bridges

 value	Gap width mm Mismatch mm Ypos cam mm Offset Y um Rank		
---	---	--	--

■ Graph block diagram

