

LCD GUI Tester - User Instructions

Supported Operating Systems

- **Windows 10/11 (64-bit)**
- **Linux x64** (Ubuntu 20.04+ or equivalent with glibc 2.31+)

Prerequisites

Application Pre-requirements

- **SEGGER J-Link Software**

Download and install the J-Link Software and Documentation Pack from:

<https://www.segger.com/downloads/jlink/>

Select the appropriate version for your operating system (Windows, Linux, or macOS).

- **nrfutil 7.x or later** (the new Rust-based version)

Important: The old Python-based nrfutil (version 5.x) is NOT compatible. The application requires the newer version which supports the **device** command.

To check your nrfutil version:

```
nrfutil version
```

Expected output should show version 7.0.0 or higher:

```
nrfutil 7.x.x
```

To download and install the correct version:

- Visit: <https://www.nordicsemi.com/Products/Development-tools/nRF-Util>
- **Windows:** Use winget to install:
 1. Open PowerShell or Command Prompt:
 - Press **Windows + X** and select "Windows PowerShell" or "Terminal"
 - Or press **Windows + R**, type **powershell** or **cmd**, and press Enter
 2. Install nrfutil using winget:

```
winget install nrfutil
```

3. After installation, install the device command package:

```
nrfutil install device
```

- **Linux x64:** Download directly:

```
wget -O nrfutil https://developer.nordicsemi.com/ \
.pc-tools/nrfutil/x64-linux/nrfutil
chmod +x nrfutil
sudo mv nrfutil /usr/local/bin/
nrfutil install device
```

- **macOS:** Download the appropriate version from the Nordic website or use Homebrew if available. After installation, run:

```
nrfutil install device
```

If you have the old Python version installed, uninstall it first:

```
pip uninstall nrfutil
```

Installation Instructions

Windows

1. Download the LCD GUI Tester application for Windows
2. Extract the archive to your desired location
3. Ensure nrfutil is installed (see Prerequisites above)
4. Run `lcd-gui-tester.exe`

Linux

1. Download the LCD GUI Tester application for Linux
2. Extract the archive to your desired location
3. Ensure nrfutil is installed (see Prerequisites above)
4. Make the binary executable if needed:

```
chmod +x lcd-gui-tester
```

5. Run the application:

```
./lcd-gui-tester
```

macOS (Not yet supported)

1. Download the LCD GUI Tester application for macOS
2. Extract the archive to your desired location
3. Ensure nrfutil is installed (see Prerequisites above)
4. Run the application:

```
./lcd-gui-tester
```


Using the Application

Windows: First Run and SmartScreen Warning


When running the application for the first time on Windows, you may encounter a "Windows protected your PC" notification from Microsoft Defender SmartScreen. This occurs because the application is not digitally signed with a Microsoft-recognized certificate.

This is normal and expected behavior. To run the application:

1. When you see the first screen, click on **"More info"**:

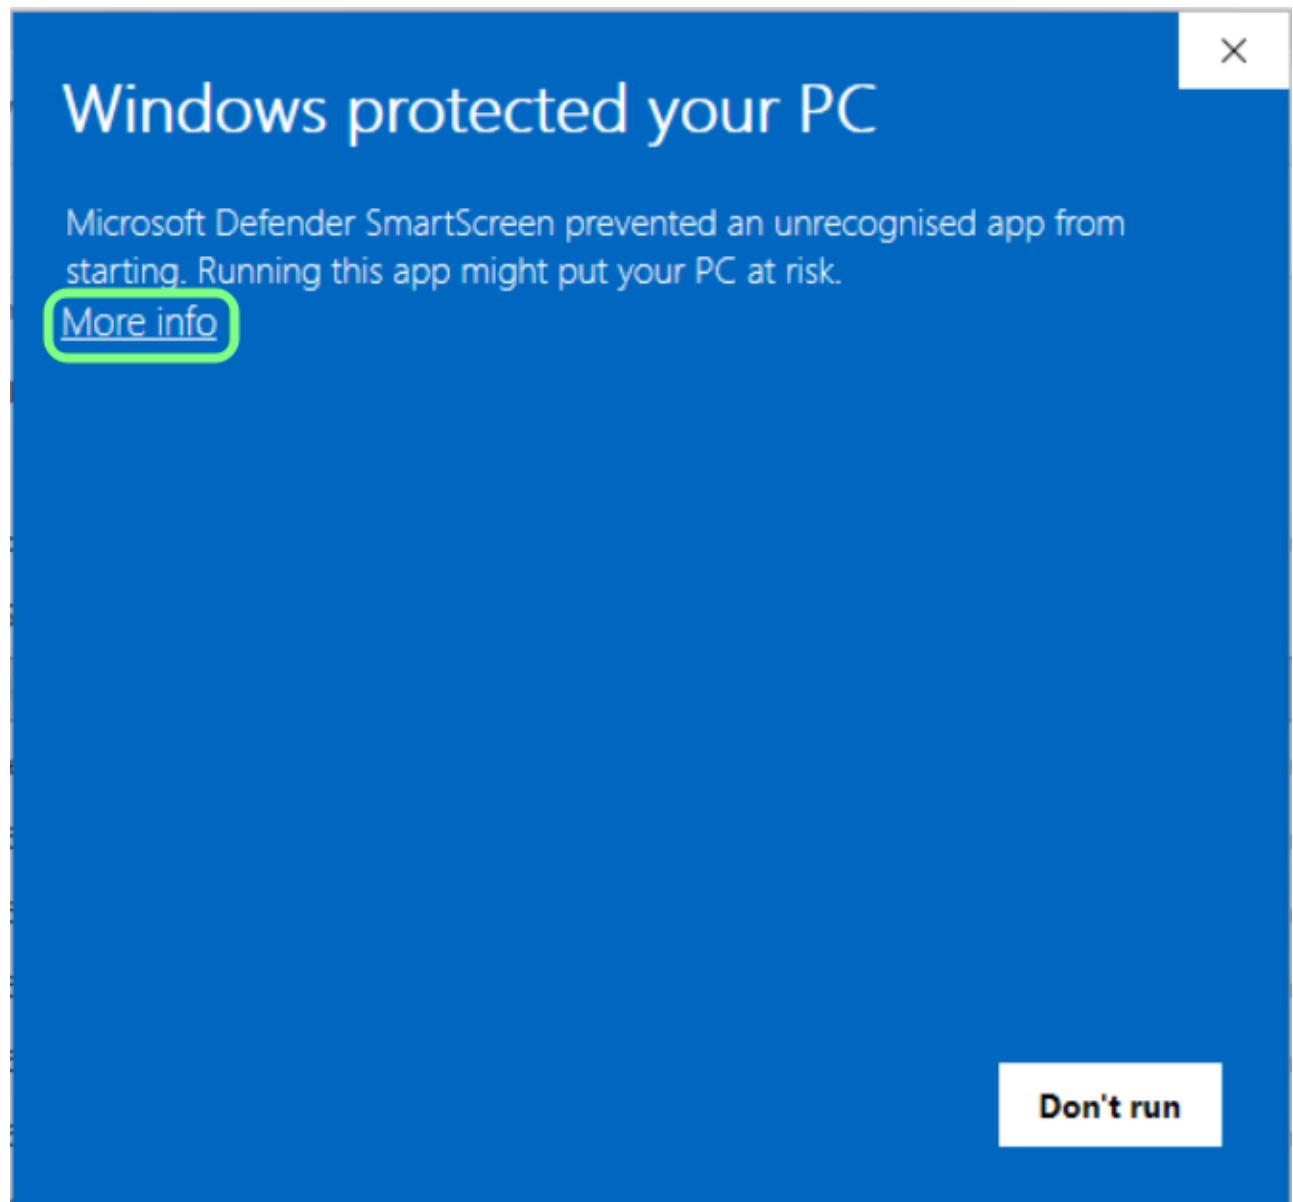

2. After clicking "More info", a "**Run anyway**" button will appear. Click it to launch the application:

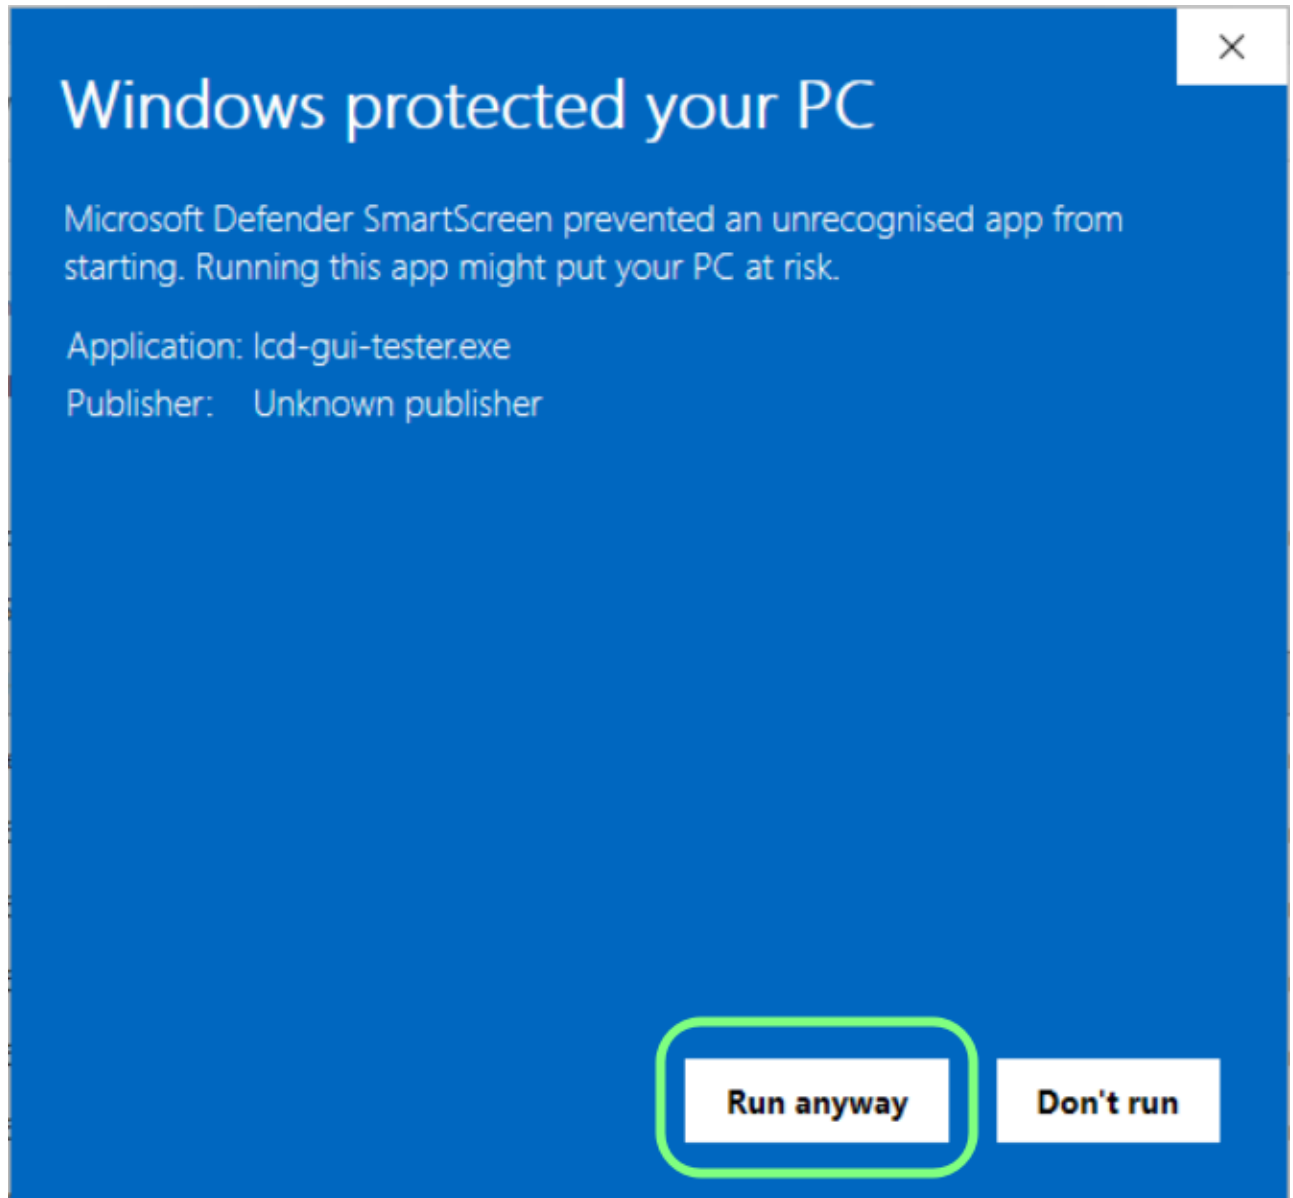

The application is safe to run. The SmartScreen warning appears only because the executable is not signed, not because there is any security risk.

⚠ **NOTE:** When the application is started for the first time, required packages will be downloaded. The download time depends on your internet connection and computer performance. During this process, the download window may temporarily disappear — this is normal. Once all downloads are complete, the application will launch automatically..

Basic Usage

1. Launch the LCD GUI Tester application.
2. The main window provides an interface for LCD GUI testing.
3. Use the image preview feature by dragging and dropping images. ⚠ **NOTE:** Currently only a single image transfer is supported.
4. Click the **UPLOAD** button and wait for the image to be transferred to the test-bench. ⌚ **NOTE:** The first transfer may take a longer time.

Troubleshooting

nrfutil Issues

If you encounter errors related to nrfutil:

- Verify you have the correct version (7.x or later) by running `nrfutil version`
- If you have the old Python-based version, uninstall it with `pip uninstall nrfutil`
- Reinstall the correct version following the instructions in the Prerequisites section

Common Issues

Application won't start

- Check that your system meets the minimum requirements

Firmware flashing fails

- Verify the test-bench is correctly connected and powered
- Check that nrfutil is correctly installed and accessible in your PATH
- Ensure you have the necessary permissions to access USB devices (Linux/macOS may require sudo or udev rules)