

# SocketCAN - Controller Area Network

## Overview / What is SocketCAN

The socketcan package is an implementation of CAN protocols (Controller Area Network) for Linux. CAN is a networking technology which has widespread use in automation, embedded devices, and automotive fields. While there have been other CAN implementations for Linux based on character devices, SocketCAN uses the Berkeley socket API, the Linux network stack and implements the CAN device drivers as network interfaces. The CAN socket API has been designed as similar as possible to the TCP/IP protocols to allow programmers, familiar with network programming, to easily learn how to use CAN sockets.

## Motivation / Why Using the Socket API

There have been CAN implementations for Linux before SocketCAN so the question arises, why we have started another project. Most existing implementations come as a device driver for some CAN hardware, they are based on character devices and provide comparatively little functionality. Usually, there is only a hardware-specific device driver which provides a character device interface to send and receive raw CAN frames, directly to/from the controller hardware. Queuing of frames and higher-level transport protocols like ISO-TP have to be implemented in user space applications. Also, most character-device implementations support only one single process to open the device at a time, similar to a serial interface. Exchanging the CAN controller requires employment of another device driver and often the need for adaption of large parts of the application to the new driver's API.

SocketCAN was designed to overcome all of these limitations. A new protocol family has been implemented which provides a socket interface to user space applications and which builds upon the Linux network layer, enabling use all of the provided queuing functionality. A device driver for CAN controller hardware registers itself with the Linux network layer as a network device, so that CAN frames from the controller can be passed up to the network layer and on to the CAN protocol family module and also vice-versa. Also, the protocol family module provides an API for transport protocol modules to register, so that any number of transport protocols can be loaded or unloaded dynamically. In fact, the can core module alone does not provide any protocol and cannot be used without loading at least one additional protocol module. Multiple sockets can be opened at the same time, on different or the same protocol module and they can listen/send frames on different or the same CAN IDs. Several sockets listening on the same interface for frames with the same CAN ID are all passed the same received matching CAN frames. An application wishing to communicate using a specific transport protocol, e.g. ISO-TP, just selects that protocol when opening the socket, and then can read and write application data byte streams, without having to deal with CAN-IDs, frames, etc.

Similar functionality visible from user-space could be provided by a character device, too, but this would lead to a technically inelegant solution for a couple of reasons:

- **Intricate usage:** Instead of passing a protocol argument to `socket(2)` and using `bind(2)` to select a CAN interface and CAN ID, an application would have to do all these operations using `ioctl(2)`s.
- **Code duplication:** A character device cannot make use of the Linux network queuing code, so all that code would have to be duplicated for CAN networking.
- **Abstraction:** In most existing character-device implementations, the hardware-specific device driver for a CAN controller directly provides the character device for the application to work with. This is at least very unusual in Unix systems for both, char and block devices. For example you don't have a character device for a certain UART of a serial interface, a certain sound chip in your computer, a SCSI or IDE controller providing access to your hard disk or tape streamer device. Instead, you have abstraction layers which provide a unified character or block device interface to the application on the one hand, and a interface for hardware-specific device drivers on the other hand. These abstractions are provided by subsystems like the tty layer, the audio subsystem or the SCSI and IDE subsystems for the devices mentioned above.

The easiest way to implement a CAN device driver is as a character device without such a (complete) abstraction layer, as is done by most existing drivers. The right way, however, would be to add such a layer with all the functionality like registering for certain CAN IDs, supporting several open file descriptors and (de)multiplexing CAN frames between them, (sophisticated) queuing of CAN frames, and providing an API for device drivers to register with. However, then it would be no more difficult, or may be even easier, to use the networking framework provided by the Linux kernel, and this is what SocketCAN does.

The use of the networking framework of the Linux kernel is just the natural and most appropriate way to implement CAN for Linux.

## SocketCAN Concept

As described in [ref: socketcan-motivation](#) the main goal of SocketCAN is to provide a socket interface to user space applications which builds upon the Linux network layer. In contrast to the commonly known TCP/IP and ethernet networking, the CAN bus is a broadcast-only(!) medium that has no MAC-layer addressing like ethernet. The CAN-identifier (`can_id`) is used for arbitration on the CAN-bus. Therefore the CAN-IDs have to be chosen uniquely on the bus. When designing a CAN-ECU network the CAN-IDs are mapped to be sent by a specific ECU. For this reason a CAN-ID can be treated best as a kind of source address.

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 108); [backlink](#)**

Unknown interpreted text role "ref".

## Receive Lists


The network transparent access of multiple applications leads to the problem that different applications may be interested in the same CAN-IDs from the same CAN network interface. The SocketCAN core module - which implements the protocol family CAN - provides several high efficient receive lists for this reason. If e.g. a user space application opens a CAN RAW socket, the raw protocol module itself requests the (range of) CAN-IDs from the SocketCAN core that are requested by the user. The subscription and unsubscription of CAN-IDs can be done for specific CAN interfaces or for all(!) known CAN interfaces with the `can_rx_(un)register()` functions provided to CAN protocol modules by the SocketCAN core (see [ref`socketcan-core-module`](#)). To optimize the CPU usage at runtime the receive lists are split up into several specific lists per device that match the requested filter complexity for a given use-case.

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 124); [backlink](#)**

Unknown interpreted text role "ref".

## Local Loopback of Sent Frames

As known from other networking concepts the data exchanging applications may run on the same or different nodes without any change (except for the according addressing information):

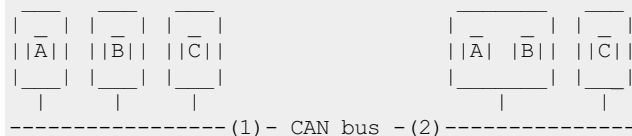

To ensure that application A receives the same information in the example (2) as it would receive in example (1) there is need for some kind of local loopback of the sent CAN frames on the appropriate node.

The Linux network devices (by default) just can handle the transmission and reception of media dependent frames. Due to the arbitration on the CAN bus the transmission of a low prio CAN-ID may be delayed by the reception of a high prio CAN frame. To reflect the correct [\[1\]](#) traffic on the node the loopback of the sent data has to be performed right after a successful transmission. If the CAN network interface is not capable of performing the loopback for some reason the SocketCAN core can do this task as a fallback solution. See [ref`socketcan-local-loopback1`](#) for details (recommended).

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 163); [backlink](#)**

Unknown interpreted text role "ref".

The loopback functionality is enabled by default to reflect standard networking behaviour for CAN applications. Due to some requests from the RT-SocketCAN group the loopback optionally may be disabled for each separate socket. See sockets from the CAN RAW sockets in [ref`socketcan-raw-sockets`](#).

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 173); [backlink](#)**

Unknown interpreted text role "ref".

[\[1\]](#) you really like to have this when you're running analyser tools like 'candump' or 'cansniffer' on the (same) node.

## Network Problem Notifications

The use of the CAN bus may lead to several problems on the physical and media access control layer. Detecting and logging of these lower layer problems is a vital requirement for CAN users to identify hardware issues on the physical transceiver layer as well as arbitration problems and error frames caused by the different ECUs. The occurrence of detected errors are important for diagnosis and have to be logged together with the exact timestamp. For this reason the CAN interface driver can generate so called Error

Message Frames that can optionally be passed to the user application in the same way as other CAN frames. Whenever an error on the physical layer or the MAC layer is detected (e.g. by the CAN controller) the driver creates an appropriate error message frame. Error messages frames can be requested by the user application using the common CAN filter mechanisms. Inside this filter definition the (interested) type of errors may be selected. The reception of error messages is disabled by default. The format of the CAN error message frame is briefly described in the Linux header file "include/uapi/linux/can/error.h".

## How to use SocketCAN

Like TCP/IP, you first need to open a socket for communicating over a CAN network. Since SocketCAN implements a new protocol family, you need to pass PF\_CAN as the first argument to the socket(2) system call. Currently, there are two CAN protocols to choose from, the raw socket protocol and the broadcast manager (BCM). So to open a socket, you would write:

```
s = socket(PF_CAN, SOCK_RAW, CAN_RAW);
```

and:

```
s = socket(PF_CAN, SOCK_DGRAM, CAN_BCM);
```

respectively. After the successful creation of the socket, you would normally use the bind(2) system call to bind the socket to a CAN interface (which is different from TCP/IP due to different addressing - see [red: socketcan-concept](#)). After binding (CAN\_RAW) or connecting (CAN\_BCM) the socket, you can read(2) and write(2) from/to the socket or use send(2), sendto(2), sendmsg(2) and the recv\* counterpart operations on the socket as usual. There are also CAN specific socket options described below.

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\linux-master\Documentation\networking\can.rst, line 222); [backlink](#)**

Unknown interpreted text role "ref".

The Classical CAN frame structure (aka CAN 2.0B), the CAN FD frame structure and the sockaddr structure are defined in include/linux/can.h:

```
struct can_frame {
    canid_t can_id; /* 32 bit CAN_ID + EFF/RTR/ERR flags */
    union {
        /* CAN frame payload length in byte (0 .. CAN_MAX_DLEN)
         * was previously named can_dlc so we need to carry that
         * name for legacy support
         */
        __u8 len;
        __u8 can_dlc; /* deprecated */
    };
    __u8 __pad; /* padding */
    __u8 __res0; /* reserved / padding */
    __u8 len8_dlc; /* optional DLC for 8 byte payload length (9 .. 15) */
    __u8 data[8] __attribute__((aligned(8)));
};
```

Remark: The len element contains the payload length in bytes and should be used instead of can\_dlc. The deprecated can\_dlc was misleadingly named as it always contained the plain payload length in bytes and not the so called 'data length code' (DLC).

To pass the raw DLC from/to a Classical CAN network device the len8\_dlc element can contain values 9 .. 15 when the len element is 8 (the real payload length for all DLC values greater or equal to 8).

The alignment of the (linear) payload data[] to a 64bit boundary allows the user to define their own structs and unions to easily access the CAN payload. There is no given byteorder on the CAN bus by default. A read(2) system call on a CAN\_RAW socket transfers a struct can\_frame to the user space.

The sockaddr\_can structure has an interface index like the PF\_PACKET socket, that also binds to a specific interface:

```
struct sockaddr_can {
    sa_family_t can_family;
    int can_ifindex;
    union {
        /* transport protocol class address info (e.g. ISOTP) */
        struct { canid_t rx_id, tx_id; } tp;

        /* J1939 address information */
        struct {
            /* 8 byte name when using dynamic addressing */
            __u64 name;

            /* pgn:
             * 8 bit: PS in PDU2 case, else 0
             * 8 bit: PF
            */
        };
    };
};
```

```

        * 1 bit: DP
        * 1 bit: reserved
        */
        __u32 pgn;

        /* 1 byte address */
        __u8 addr;
    } j1939;

    /* reserved for future CAN protocols address information */
} can_addr;
};

```

To determine the interface index an appropriate `ioctl()` has to be used (example for `CAN_RAW` sockets without error checking):

```

int s;
struct sockaddr_can addr;
struct ifreq ifr;

s = socket(PF_CAN, SOCK_RAW, CAN_RAW);

strcpy(ifr.ifr_name, "can0");
ioctl(s, SIOCGIFINDEX, &ifr);

addr.can_family = AF_CAN;
addr.can_ifindex = ifr.ifr_ifindex;

bind(s, (struct sockaddr *)&addr, sizeof(addr));

(..)

```

To bind a socket to all(!) CAN interfaces the interface index must be 0 (zero). In this case the socket receives CAN frames from every enabled CAN interface. To determine the originating CAN interface the system call `recvfrom(2)` may be used instead of `read(2)`. To send on a socket that is bound to 'any' interface `sendto(2)` is needed to specify the outgoing interface.

Reading CAN frames from a bound `CAN_RAW` socket (see above) consists of reading a struct `can_frame`:

```

struct can_frame frame;

nbytes = read(s, &frame, sizeof(struct can_frame));

if (nbytes < 0) {
    perror("can raw socket read");
    return 1;
}

/* paranoid check ... */
if (nbytes < sizeof(struct can_frame)) {
    fprintf(stderr, "read: incomplete CAN frame\n");
    return 1;
}

/* do something with the received CAN frame */

```

Writing CAN frames can be done similarly, with the `write(2)` system call:

```

nbytes = write(s, &frame, sizeof(struct can_frame));

```

When the CAN interface is bound to 'any' existing CAN interface (`addr.can_ifindex = 0`) it is recommended to use `recvfrom(2)` if the information about the originating CAN interface is needed:

```

struct sockaddr_can addr;
struct ifreq ifr;
socklen_t len = sizeof(addr);
struct can_frame frame;

nbytes = recvfrom(s, &frame, sizeof(struct can_frame),
    0, (struct sockaddr *)&addr, &len);

/* get interface name of the received CAN frame */
ifr.ifr_ifindex = addr.can_ifindex;
ioctl(s, SIOCGIFNAME, &ifr);
printf("Received a CAN frame from interface %s", ifr.ifr_name);

```

To write CAN frames on sockets bound to 'any' CAN interface the outgoing interface has to be defined certainly:

```

strcpy(ifr.ifr_name, "can0");
ioctl(s, SIOCGIFINDEX, &ifr);
addr.can_ifindex = ifr.ifr_ifindex;
addr.can_family = AF_CAN;

```

```
nbytes = sendto(s, &frame, sizeof(struct can_frame),
               0, (struct sockaddr*)&addr, sizeof(addr));
```

An accurate timestamp can be obtained with an `ioctl(2)` call after reading a message from the socket:

```
struct timeval tv;
ioctl(s, SIOCGSTAMP, &tv);
```

The timestamp has a resolution of one microsecond and is set automatically at the reception of a CAN frame.

Remark about CAN FD (flexible data rate) support:

Generally the handling of CAN FD is very similar to the formerly described examples. The new CAN FD capable CAN controllers support two different bitrates for the arbitration phase and the payload phase of the CAN FD frame and up to 64 bytes of payload. This extended payload length breaks all the kernel interfaces (ABI) which heavily rely on the CAN frame with fixed eight bytes of payload (struct `can_frame`) like the `CAN_RAW` socket. Therefore e.g. the `CAN_RAW` socket supports a new socket option `CAN_RAW_FD_FRAMES` that switches the socket into a mode that allows the handling of CAN FD frames and Classical CAN frames simultaneously (see [ref`socketcan-rawfd`](#)).

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 399); [backlink](#)**

Unknown interpreted text role "ref".

The struct `canfd_frame` is defined in `include/linux/can.h`:

```
struct canfd_frame {
    canid_t can_id; /* 32 bit CAN_ID + EFF/RTR/ERR flags */
    __u8 len; /* frame payload length in byte (0 .. 64) */
    __u8 flags; /* additional flags for CAN FD */
    __u8 res0; /* reserved / padding */
    __u8 res1; /* reserved / padding */
    __u8 data[64] __attribute__((aligned(8)));
};
```

The struct `canfd_frame` and the existing struct `can_frame` have the `can_id`, the payload length and the payload data at the same offset inside their structures. This allows to handle the different structures very similar. When the content of a struct `can_frame` is copied into a struct `canfd_frame` all structure elements can be used as-is - only the `data[]` becomes extended.

When introducing the struct `canfd_frame` it turned out that the data length code (DLC) of the struct `can_frame` was used as a length information as the length and the DLC has a 1:1 mapping in the range of 0 .. 8. To preserve the easy handling of the length information the `canfd_frame.len` element contains a plain length value from 0 .. 64. So both `canfd_frame.len` and `can_frame.len` are equal and contain a length information and no DLC. For details about the distinction of CAN and CAN FD capable devices and the mapping to the bus-relevant data length code (DLC), see [ref`socketcan-can-fd-driver`](#).

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 428); [backlink](#)**

Unknown interpreted text role "ref".

The length of the two CAN(FD) frame structures define the maximum transfer unit (MTU) of the CAN(FD) network interface and skbuff data length. Two definitions are specified for CAN specific MTUs in `include/linux/can.h`:

```
#define CAN_MTU (sizeof(struct can_frame)) == 16 => Classical CAN frame
#define CANFD_MTU (sizeof(struct canfd_frame)) == 72 => CAN FD frame
```

## RAW Protocol Sockets with `can_filters` (SOCK\_RAW)

Using `CAN_RAW` sockets is extensively comparable to the commonly known access to CAN character devices. To meet the new possibilities provided by the multi user SocketCAN approach, some reasonable defaults are set at RAW socket binding time:

- The filters are set to exactly one filter receiving everything
- The socket only receives valid data frames (=> no error message frames)
- The loopback of sent CAN frames is enabled (see [ref`socketcan-local-loopback2`](#))

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 459); [backlink](#)**

- The socket does not receive its own sent frames (in loopback mode)

These default settings may be changed before or after binding the socket. To use the referenced definitions of the socket options for CAN\_RAW sockets, include `<linux/can/raw.h>`.

### RAW socket option CAN\_RAW\_FILTER

The reception of CAN frames using CAN\_RAW sockets can be controlled by defining 0 .. n filters with the CAN\_RAW\_FILTER socket option.

The CAN filter structure is defined in `include/linux/can.h`:

```
struct can_filter {
    canid_t can_id;
    canid_t can_mask;
};
```

A filter matches, when:

```
<received_can_id> & mask == can_id & mask
```

which is analogous to known CAN controllers hardware filter semantics. The filter can be inverted in this semantic, when the CAN\_INV\_FILTER bit is set in can\_id element of the can\_filter structure. In contrast to CAN controller hardware filters the user may set 0 .. n receive filters for each open socket separately:

```
struct can_filter rfilter[2];

rfilter[0].can_id = 0x123;
rfilter[0].can_mask = CAN_SFF_MASK;
rfilter[1].can_id = 0x200;
rfilter[1].can_mask = 0x700;

setsockopt(s, SOL_CAN_RAW, CAN_RAW_FILTER, &rfilter, sizeof(rfilter));
```

To disable the reception of CAN frames on the selected CAN\_RAW socket:

```
setsockopt(s, SOL_CAN_RAW, CAN_RAW_FILTER, NULL, 0);
```

To set the filters to zero filters is quite obsolete as to not read data causes the raw socket to discard the received CAN frames. But having this 'send only' use-case we may remove the receive list in the Kernel to save a little (really a very little!) CPU usage.

### CAN Filter Usage Optimisation

The CAN filters are processed in per-device filter lists at CAN frame reception time. To reduce the number of checks that need to be performed while walking through the filter lists the CAN core provides an optimized filter handling when the filter subscription focusses on a single CAN ID.

For the possible 2048 SFF CAN identifiers the identifier is used as an index to access the corresponding subscription list without any further checks. For the 2<sup>29</sup> possible EFF CAN identifiers a 10 bit XOR folding is used as hash function to retrieve the EFF table index.

To benefit from the optimized filters for single CAN identifiers the CAN\_SFF\_MASK or CAN\_EFF\_MASK have to be set into can\_filter.mask together with set CAN\_EFF\_FLAG and CAN\_RTR\_FLAG bits. A set CAN\_EFF\_FLAG bit in the can\_filter.mask makes clear that it matters whether a SFF or EFF CAN ID is subscribed. E.g. in the example from above:

```
rfilter[0].can_id = 0x123;
rfilter[0].can_mask = CAN_SFF_MASK;
```

both SFF frames with CAN ID 0x123 and EFF frames with 0xxxxxx123 can pass.

To filter for only 0x123 (SFF) and 0x12345678 (EFF) CAN identifiers the filter has to be defined in this way to benefit from the optimized filters:

```
struct can_filter rfilter[2];

rfilter[0].can_id = 0x123;
rfilter[0].can_mask = (CAN_EFF_FLAG | CAN_RTR_FLAG | CAN_SFF_MASK);
rfilter[1].can_id = 0x12345678;
rfilter[1].can_mask = (CAN_EFF_FLAG | CAN_RTR_FLAG | CAN_EFF_MASK);

setsockopt(s, SOL_CAN_RAW, CAN_RAW_FILTER, &rfilter, sizeof(rfilter));
```

### RAW Socket Option CAN\_RAW\_ERR\_FILTER

As described in [ref: socketcan-network-problem-notifications](#) the CAN interface driver can generate so called Error Message



Frames that can optionally be passed to the user application in the same way as other CAN frames. The possible errors are divided into different error classes that may be filtered using the appropriate error mask. To register for every possible error condition CAN\_ERR\_MASK can be used as value for the error mask. The values for the error mask are defined in linux/can/error.h:

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\linux-master\Documentation\networking) can.rst, line 562); [backlink](#)**

Unknown interpreted text role "ref".

```
can_err_mask_t err_mask = ( CAN_ERR_TX_TIMEOUT | CAN_ERR_BUSOFF );

setsockopt(s, SOL_CAN_RAW, CAN_RAW_ERR_FILTER,
           &err_mask, sizeof(err_mask));
```

### RAW Socket Option CAN\_RAW\_LOOPBACK

To meet multi user needs the local loopback is enabled by default (see [ref: socketcan-local-loopback1](#) for details). But in some embedded use-cases (e.g. when only one application uses the CAN bus) this loopback functionality can be disabled (separately for each socket):

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\linux-master\Documentation\networking) can.rst, line 581); [backlink](#)**

Unknown interpreted text role "ref".

```
int loopback = 0; /* 0 = disabled, 1 = enabled (default) */

setsockopt(s, SOL_CAN_RAW, CAN_RAW_LOOPBACK, &loopback, sizeof(loopback));
```

### RAW socket option CAN\_RAW\_RECV\_OWN\_MSGS

When the local loopback is enabled, all the sent CAN frames are looped back to the open CAN sockets that registered for the CAN frames' CAN-ID on this given interface to meet the multi user needs. The reception of the CAN frames on the same socket that was sending the CAN frame is assumed to be unwanted and therefore disabled by default. This default behaviour may be changed on demand:

```
int recv_own_msgs = 1; /* 0 = disabled (default), 1 = enabled */

setsockopt(s, SOL_CAN_RAW, CAN_RAW_RECV_OWN_MSGS,
           &recv_own_msgs, sizeof(recv_own_msgs));
```

Note that reception of a socket's own CAN frames are subject to the same filtering as other CAN frames (see [ref: socketcan-rawfilter](#)).

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\linux-master\Documentation\networking) can.rst, line 611); [backlink](#)**

Unknown interpreted text role "ref".

### RAW Socket Option CAN\_RAW\_FD\_FRAMES

CAN FD support in CAN\_RAW sockets can be enabled with a new socket option CAN\_RAW\_FD\_FRAMES which is off by default. When the new socket option is not supported by the CAN\_RAW socket (e.g. on older kernels), switching the CAN\_RAW\_FD\_FRAMES option returns the error -ENOPROTOOPT.

Once CAN\_RAW\_FD\_FRAMES is enabled the application can send both CAN frames and CAN FD frames. OTOH the application has to handle CAN and CAN FD frames when reading from the socket:

```
CAN_RAW_FD_FRAMES enabled: CAN_MTU and CANFD_MTU are allowed
CAN_RAW_FD_FRAMES disabled: only CAN_MTU is allowed (default)
```

Example:

```
[ remember: CANFD_MTU == sizeof(struct canfd_frame) ]

struct canfd_frame cfd;

nbytes = read(s, &cfd, CANFD_MTU);
```

```

if (nbytes == CANFD_MTU) {
    printf("got CAN FD frame with length %d\n", cfd.len);
    /* cfd.flags contains valid data */
} else if (nbytes == CAN_MTU) {
    printf("got Classical CAN frame with length %d\n", cfd.len);
    /* cfd.flags is undefined */
} else {
    fprintf(stderr, "read: invalid CAN(FD) frame\n");
    return 1;
}

/* the content can be handled independently from the received MTU size */

printf("can_id: %X data length: %d data: ", cfd.can_id, cfd.len);
for (i = 0; i < cfd.len; i++)
    printf("%02X ", cfd.data[i]);

```

When reading with size CANFD\_MTU only returns CAN\_MTU bytes that have been received from the socket a Classical CAN frame has been read into the provided CAN FD structure. Note that the canfd\_frame.flags data field is not specified in the struct can\_frame and therefore it is only valid in CANFD\_MTU sized CAN FD frames.

Implementation hint for new CAN applications:

To build a CAN FD aware application use struct canfd\_frame as basic CAN data structure for CAN\_RAW based applications. When the application is executed on an older Linux kernel and switching the CAN\_RAW\_FD\_FRAMES socket option returns an error: No problem. You'll get Classical CAN frames or CAN FD frames and can process them the same way.

When sending to CAN devices make sure that the device is capable to handle CAN FD frames by checking if the device maximum transfer unit is CANFD\_MTU. The CAN device MTU can be retrieved e.g. with a SIOCGIFMTU ioctl() syscall.

## RAW socket option CAN\_RAW\_JOIN\_FILTERS

The CAN\_RAW socket can set multiple CAN identifier specific filters that lead to multiple filters in the af\_can.c filter processing. These filters are independent from each other which leads to logical OR'ed filters when applied (see [ref: socketcan-rawfilter](#)).

**System Message: ERROR/3 (D: \onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 682); [backlink](#)**

Unknown interpreted text role "ref".

This socket option joins the given CAN filters in the way that only CAN frames are passed to user space that matched *all* given CAN filters. The semantic for the applied filters is therefore changed to a logical AND.

This is useful especially when the filter set is a combination of filters where the CAN\_INV\_FILTER flag is set in order to notch single CAN IDs or CAN ID ranges from the incoming traffic.

## RAW Socket Returned Message Flags

When using recvmsg() call, the msg->msg\_flags may contain following flags:

MSG\_DONTROUTE:

set when the received frame was created on the local host.

MSG\_CONFIRM:

set when the frame was sent via the socket it is received on. This flag can be interpreted as a 'transmission confirmation' when the CAN driver supports the echo of frames on driver level, see [ref: socketcan-local-loopback1](#) and [ref: socketcan-local-loopback2](#). In order to receive such messages, CAN\_RAW\_RECV\_OWN\_MSGS must be set.

**System Message: ERROR/3 (D: \onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 705); [backlink](#)**

Unknown interpreted text role "ref".

**System Message: ERROR/3 (D: \onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 705); [backlink](#)**

Unknown interpreted text role "ref".

## Broadcast Manager Protocol Sockets (SOCK\_DGRAM)



The Broadcast Manager protocol provides a command based configuration interface to filter and send (e.g. cyclic) CAN messages in kernel space.

Receive filters can be used to down sample frequent messages; detect events such as message contents changes, packet length changes, and do time-out monitoring of received messages.

Periodic transmission tasks of CAN frames or a sequence of CAN frames can be created and modified at runtime; both the message content and the two possible transmit intervals can be altered.

A BCM socket is not intended for sending individual CAN frames using the struct `can_frame` as known from the `CAN_RAW` socket. Instead a special BCM configuration message is defined. The basic BCM configuration message used to communicate with the broadcast manager and the available operations are defined in the `linux/can/bcm.h` include. The BCM message consists of a message header with a command ('opcode') followed by zero or more CAN frames. The broadcast manager sends responses to user space in the same form:

```
struct bcm_msg_head {
    __u32 opcode;           /* command */
    __u32 flags;            /* special flags */
    __u32 count;            /* run 'count' times with ival1 */
    struct timeval ival1, ival2; /* count and subsequent interval */
    canid_t can_id;        /* unique can_id for task */
    __u32 nframes;         /* number of can_frames following */
    struct can_frame frames[0];
};
```

The aligned payload 'frames' uses the same basic CAN frame structure defined at the beginning of [ref`socketcan-rawfd`](#) and in the `include/linux/can.h` include. All messages to the broadcast manager from user space have this structure.

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 746); [backlink](#)**

Unknown interpreted text role "ref".

Note a `CAN_BCM` socket must be connected instead of bound after socket creation (example without error checking):

```
int s;
struct sockaddr_can addr;
struct ifreq ifr;

s = socket(PF_CAN, SOCK_DGRAM, CAN_BCM);

strcpy(ifr.ifr_name, "can0");
ioctl(s, SIOCGIFINDEX, &ifr);

addr.can_family = AF_CAN;
addr.can_ifindex = ifr.ifr_ifindex;

connect(s, (struct sockaddr *)&addr, sizeof(addr));

(..)
```

The broadcast manager socket is able to handle any number of in flight transmissions or receive filters concurrently. The different RX/TX jobs are distinguished by the unique `can_id` in each BCM message. However additional `CAN_BCM` sockets are recommended to communicate on multiple CAN interfaces. When the broadcast manager socket is bound to 'any' CAN interface ( $\Rightarrow$  the interface index is set to zero) the configured receive filters apply to any CAN interface unless the `sendto()` syscall is used to overrule the 'any' CAN interface index. When using `recvfrom()` instead of `read()` to retrieve BCM socket messages the originating CAN interface is provided in `can_ifindex`.

## Broadcast Manager Operations

The opcode defines the operation for the broadcast manager to carry out, or details the broadcast managers response to several events, including user requests.

Transmit Operations (user space to broadcast manager):

TX\_SETUP:

Create (cyclic) transmission task.

TX\_DELETE:

Remove (cyclic) transmission task, requires only `can_id`.

TX\_READ:

Read properties of (cyclic) transmission task for `can_id`.

TX\_SEND:

Send one CAN frame.

Transmit Responses (broadcast manager to user space):

TX\_STATUS:

Reply to TX\_READ request (transmission task configuration).

TX\_EXPIRED:

Notification when counter finishes sending at initial interval 'ival1'. Requires the TX\_COUNT\_EVT flag to be set at TX\_SETUP.

Receive Operations (user space to broadcast manager):

RX\_SETUP:

Create RX content filter subscription.

RX\_DELETE:

Remove RX content filter subscription, requires only can\_id.

RX\_READ:

Read properties of RX content filter subscription for can\_id.

Receive Responses (broadcast manager to user space):

RX\_STATUS:

Reply to RX\_READ request (filter task configuration).

RX\_TIMEOUT:

Cyclic message is detected to be absent (timer ival1 expired).

RX\_CHANGED:

BCM message with updated CAN frame (detected content change). Sent on first message received or on receipt of revised CAN messages.

### Broadcast Manager Message Flags

When sending a message to the broadcast manager the 'flags' element may contain the following flag definitions which influence the behaviour:

SETTIMER:

Set the values of ival1, ival2 and count

STARTTIMER:

Start the timer with the actual values of ival1, ival2 and count. Starting the timer leads simultaneously to emit a CAN frame.

TX\_COUNT\_EVT:

Create the message TX\_EXPIRED when count expires

TX\_ANNOUNCE:

A change of data by the process is emitted immediately.

TX\_CP\_CAN\_ID:

Copies the can\_id from the message header to each subsequent frame in frames. This is intended as usage simplification. For TX tasks the unique can\_id from the message header may differ from the can\_id(s) stored for transmission in the subsequent struct can\_frame(s).

RX\_FILTER\_ID:

Filter by can\_id alone, no frames required (nframes=0).

RX\_CHECK\_DLC:

A change of the DLC leads to an RX\_CHANGED.

RX\_NO\_AUTOTIMER:

Prevent automatically starting the timeout monitor.

RX\_ANNOUNCE\_RESUME:

If passed at RX\_SETUP and a receive timeout occurred, a RX\_CHANGED message will be generated when the (cyclic) receive restarts.

TX\_RESET\_MULTI\_IDX:

Reset the index for the multiple frame transmission.

RX\_RTR\_FRAME:

Send reply for RTR-request (placed in op->frames[0]).

CAN\_FD\_FRAME:

The CAN frames following the bcm\_msg\_head are struct canfd\_frame's

### Broadcast Manager Transmission Timers

Periodic transmission configurations may use up to two interval timers. In this case the BCM sends a number of messages ('count') at an interval 'ival1', then continuing to send at another given interval 'ival2'. When only one timer is needed 'count' is set to zero and only 'ival2' is used. When SET\_TIMER and START\_TIMER flag were set the timers are activated. The timer values can be altered at runtime when only SET\_TIMER is set.

### Broadcast Manager message sequence transmission

Up to 256 CAN frames can be transmitted in a sequence in the case of a cyclic TX task configuration. The number of CAN frames

is provided in the 'nframes' element of the BCM message head. The defined number of CAN frames are added as array to the TX\_SETUP BCM configuration message:

```
/* create a struct to set up a sequence of four CAN frames */
struct {
    struct bcm_msg_head msg_head;
    struct can_frame frame[4];
} mytxmsg;

(..)
mytxmsg.msg_head.nframes = 4;
(..)

write(s, &mytxmsg, sizeof(mytxmsg));
```

With every transmission the index in the array of CAN frames is increased and set to zero at index overflow.

### Broadcast Manager Receive Filter Timers

The timer values ival1 or ival2 may be set to non-zero values at RX\_SETUP. When the SET\_TIMER flag is set the timers are enabled:

ival1:

Send RX\_TIMEOUT when a received message is not received again within the given time. When START\_TIMER is set at RX\_SETUP the timeout detection is activated directly - even without a former CAN frame reception.

ival2:

Throttle the received message rate down to the value of ival2. This is useful to reduce messages for the application when the signal inside the CAN frame is stateless as state changes within the ival2 periode may get lost.

### Broadcast Manager Multiplex Message Receive Filter

To filter for content changes in multiplex message sequences an array of more than one CAN frames can be passed in a RX\_SETUP configuration message. The data bytes of the first CAN frame contain the mask of relevant bits that have to match in the subsequent CAN frames with the received CAN frame. If one of the subsequent CAN frames is matching the bits in that frame data mark the relevant content to be compared with the previous received content. Up to 257 CAN frames (multiplex filter bit mask CAN frame plus 256 CAN filters) can be added as array to the TX\_SETUP BCM configuration message:

```
/* usually used to clear CAN frame data[] - beware of endian problems! */
#define U64_DATA(p) (*(unsigned long long*) (p)->data)

struct {
    struct bcm_msg_head msg_head;
    struct can_frame frame[5];
} msg;

msg.msg_head.opcode = RX_SETUP;
msg.msg_head.can_id = 0x42;
msg.msg_head.flags = 0;
msg.msg_head.nframes = 5;
U64_DATA(&msg.frame[0]) = 0xFF00000000000000ULL; /* MUX mask */
U64_DATA(&msg.frame[1]) = 0x01000000000000FFULL; /* data mask (MUX 0x01) */
U64_DATA(&msg.frame[2]) = 0x0200FFFF000000FFULL; /* data mask (MUX 0x02) */
U64_DATA(&msg.frame[3]) = 0x330000FFFFFF0003ULL; /* data mask (MUX 0x33) */
U64_DATA(&msg.frame[4]) = 0x4F07FC0FF0000000ULL; /* data mask (MUX 0x4F) */

write(s, &msg, sizeof(msg));
```

### Broadcast Manager CAN FD Support

The programming API of the CAN\_BCM depends on struct can\_frame which is given as array directly behind the bcm\_msg\_head structure. To follow this schema for the CAN FD frames a new flag 'CAN\_FD\_FRAME' in the bcm\_msg\_head flags indicates that the concatenated CAN frame structures behind the bcm\_msg\_head are defined as struct canfd\_frame:

```
struct {
    struct bcm_msg_head msg_head;
    struct canfd_frame frame[5];
} msg;

msg.msg_head.opcode = RX_SETUP;
msg.msg_head.can_id = 0x42;
msg.msg_head.flags = CAN_FD_FRAME;
msg.msg_head.nframes = 5;
(..)
```

When using CAN FD frames for multiplex filtering the MUX mask is still expected in the first 64 bit of the struct canfd\_frame data section.

## Connected Transport Protocols (SOCK\_SEQPACKET)

(to be written)

## Unconnected Transport Protocols (SOCK\_DGRAM)

(to be written)

## SocketCAN Core Module

The SocketCAN core module implements the protocol family PF\_CAN. CAN protocol modules are loaded by the core module at runtime. The core module provides an interface for CAN protocol modules to subscribe needed CAN IDs (see [ref`socketcan-receive-lists`](#)).

**System Message: ERROR/3** (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 1015); [backlink](#)

Unknown interpreted text role "ref".

### can.ko Module Params

- **stats\_timer**: To calculate the SocketCAN core statistics (e.g. current/maximum frames per second) this 1 second timer is invoked at can.ko module start time by default. This timer can be disabled by using `stattimer=0` on the module commandline.
- **debug**: (removed since SocketCAN SVN r546)

### procfs content

As described in [ref`socketcan-receive-lists`](#) the SocketCAN core uses several filter lists to deliver received CAN frames to CAN protocol modules. These receive lists, their filters and the count of filter matches can be checked in the appropriate receive list. All entries contain the device and a protocol module identifier:

**System Message: ERROR/3** (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 1037); [backlink](#)

Unknown interpreted text role "ref".

```
foo@bar:~$ cat /proc/net/can/rcvlist_all

receive list 'rx_all':
(vcan3: no entry)
(vcan2: no entry)
(vcan1: no entry)
device  can_id  can_mask  function  userdata  matches  ident
vcan0   000      00000000  f88e6370  f6c6f400          0  raw
(any: no entry)
```

In this example an application requests any CAN traffic from vcan0:

```
rcvlist_all - list for unfiltered entries (no filter operations)
rcvlist_eff - list for single extended frame (EFF) entries
rcvlist_err - list for error message frames masks
rcvlist_fil - list for mask/value filters
rcvlist_inv - list for mask/value filters (inverse semantic)
rcvlist_sff - list for single standard frame (SFF) entries
```

Additional procfs files in /proc/net/can:

```
stats      - SocketCAN core statistics (rx/tx frames, match ratios, ...)
reset_stats - manual statistic reset
version    - prints SocketCAN core and ABI version (removed in Linux 5.10)
```

## Writing Own CAN Protocol Modules

To implement a new protocol in the protocol family PF\_CAN a new protocol has to be defined in `include/linux/can.h`. The prototypes and definitions to use the SocketCAN core can be accessed by including `include/linux/can/core.h`. In addition to functions that register the CAN protocol and the CAN device notifier chain there are functions to subscribe CAN frames received by CAN interfaces and to send CAN frames:

```
can_rx_register - subscribe CAN frames from a specific interface
can_rx_unregister - unsubscribe CAN frames from a specific interface
can_send        - transmit a CAN frame (optional with local loopback)
```

For details see the kernel doc documentation in `net/can/af_can.c` or the source code of `net/can/raw.c` or `net/can/bcm.c`.

## CAN Network Drivers

Writing a CAN network device driver is much easier than writing a CAN character device driver. Similar to other known network device drivers you mainly have to deal with:

- TX: Put the CAN frame from the socket buffer to the CAN controller.
- RX: Put the CAN frame from the CAN controller to the socket buffer.

See e.g. at `Documentation/networking/netdevices.rst`. The differences for writing CAN network device driver are described below:

### General Settings

```
dev->type = ARPHRD_CAN; /* the netdevice hardware type */
dev->flags = IFF_NOARP; /* CAN has no arp */

dev->mtu = CAN_MTU; /* sizeof(struct can_frame) -> Classical CAN interface */

or alternative, when the controller supports CAN with flexible data rate:
dev->mtu = CANFD_MTU; /* sizeof(struct canfd_frame) -> CAN FD interface */
```

The `struct can_frame` or `struct canfd_frame` is the payload of each socket buffer (skbuff) in the protocol family `PF_CAN`.

### Local Loopback of Sent Frames

As described in [ref:socketcan-local-loopback1](#) the CAN network device driver should support a local loopback functionality similar to the local echo e.g. of tty devices. In this case the driver flag `IFF_ECHO` has to be set to prevent the `PF_CAN` core from locally echoing sent frames (aka loopback) as fallback solution:

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\[linux-master] [Documentation] [networking] can.rst, line 1124); [backlink](#)**

Unknown interpreted text role 'ref'.

```
dev->flags = (IFF_NOARP | IFF_ECHO);
```

### CAN Controller Hardware Filters

To reduce the interrupt load on deep embedded systems some CAN controllers support the filtering of CAN IDs or ranges of CAN IDs. These hardware filter capabilities vary from controller to controller and have to be identified as not feasible in a multi-user networking approach. The use of the very controller specific hardware filters could make sense in a very dedicated use-case, as a filter on driver level would affect all users in the multi-user system. The high efficient filter sets inside the `PF_CAN` core allow to set different multiple filters for each socket separately. Therefore the use of hardware filters goes to the category 'handmade tuning on deep embedded systems'. The author is running a MPC603e @133MHz with four SJA1000 CAN controllers from 2002 under heavy bus load without any problems ...

### The Virtual CAN Driver (vcan)

Similar to the network loopback devices, `vcan` offers a virtual local CAN interface. A full qualified address on CAN consists of

- a unique CAN Identifier (CAN ID)
- the CAN bus this CAN ID is transmitted on (e.g. `can0`)

so in common use cases more than one virtual CAN interface is needed.

The virtual CAN interfaces allow the transmission and reception of CAN frames without real CAN controller hardware. Virtual CAN network devices are usually named '`vcanX`', like `vcan0` `vcan1` `vcan2` ... When compiled as a module the virtual CAN driver module is called `vcan.ko`

Since Linux Kernel version 2.6.24 the `vcan` driver supports the Kernel netlink interface to create `vcan` network devices. The creation and removal of `vcan` network devices can be managed with the `ip(8)` tool:

- Create a virtual CAN network interface:  
\$ `ip link add type vcan`
- Create a virtual CAN network interface with a specific name '`vcan42`':  
\$ `ip link add dev vcan42 type vcan`
- Remove a (virtual CAN) network interface '`vcan42`':  
\$ `ip link del vcan42`

### The CAN Network Device Driver Interface

The CAN network device driver interface provides a generic interface to setup, configure and monitor CAN network devices. The user can then configure the CAN device, like setting the bit-timing parameters, via the netlink interface using the program "ip" from the "IPROUTE2" utility suite. The following chapter describes briefly how to use it. Furthermore, the interface uses a common data structure and exports a set of common functions, which all real CAN network device drivers should use. Please have a look to the SJA1000 or MSCAN driver to understand how to use them. The name of the module is can-dev.ko.

### Netlink interface to set/get devices properties

The CAN device must be configured via netlink interface. The supported netlink message types are defined and briefly described in "include/linux/can/netlink.h". CAN link support for the program "ip" of the IPROUTE2 utility suite is available and it can be used as shown below:

Setting CAN device properties:

```
$ ip link set can0 type can help
Usage: ip link set DEVICE type can
    [ bitrate BITRATE [ sample-point SAMPLE-POINT] ] |
    [ tq TQ prop-seg PROP_SEG phase-seg1 PHASE-SEG1
      phase-seg2 PHASE-SEG2 [ sjw SJW ] ]

    [ dbitrate BITRATE [ dsample-point SAMPLE-POINT] ] |
    [ dtq TQ dprop-seg PROP_SEG dphase-seg1 PHASE-SEG1
      dphase-seg2 PHASE-SEG2 [ dsjw SJW ] ]

    [ loopback { on | off } ]
    [ listen-only { on | off } ]
    [ triple-sampling { on | off } ]
    [ one-shot { on | off } ]
    [ berr-reporting { on | off } ]
    [ fd { on | off } ]
    [ fd-non-iso { on | off } ]
    [ presume-ack { on | off } ]
    [ cc-len8-dlc { on | off } ]

    [ restart-ms TIME-MS ]
    [ restart ]

Where: BITRATE      := { 1..1000000 }
       SAMPLE-POINT := { 0.000..0.999 }
       TQ           := { NUMBER }
       PROP-SEG     := { 1..8 }
       PHASE-SEG1   := { 1..8 }
       PHASE-SEG2   := { 1..8 }
       SJW          := { 1..4 }
       RESTART-MS   := { 0 | NUMBER }
```

Display CAN device details and statistics:

```
$ ip -details -statistics link show can0
2: can0: <NOARP,UP,LOWER_UP,ECHO> mtu 16 qdisc pfifo_fast state UP qlen 10
link/can
can <TRIPLE-SAMPLING> state ERROR-ACTIVE restart-ms 100
bitrate 125000 sample_point 0.875
tq 125 prop-seg 6 phase-seg1 7 phase-seg2 2 sjw 1
sjal000: tseg1 1..16 tseg2 1..8 sjw 1..4 brp 1..64 brp-inc 1
clock 8000000
re-started bus-errors arbit-lost error-warn error-pass bus-off
41      17457      0      41      42      41
RX: bytes  packets  errors  dropped overrun mcast
140859   17608   17457    0      0      0
TX: bytes  packets  errors  dropped carrier collsns
861      112      0      41      0      0
```

More info to the above output:

"<TRIPLE-SAMPLING>"

Shows the list of selected CAN controller modes: LOOPBACK, LISTEN-ONLY, or TRIPLE-SAMPLING.

"state ERROR-ACTIVE"

The current state of the CAN controller: "ERROR-ACTIVE", "ERROR-WARNING", "ERROR-PASSIVE", "BUS-OFF" or "STOPPED"

"restart-ms 100"

Automatic restart delay time. If set to a non-zero value, a restart of the CAN controller will be triggered automatically in case of a bus-off condition after the specified delay time in milliseconds. By default it's off

"bitrate 125000 sample-point 0.875"

Shows the real bit-rate in bits/sec and the sample-point in the range 0.000..0.999. If the calculation of bit-timing parameters is enabled in the kernel (CONFIG\_CAN\_CALC\_BITTIMING=y), the bit-timing can be defined by setting the "bitrate" argument. Optionally the "sample-point" can be specified. By default it's 0.000 assuming CIA-recommended sample-points.



"tq 125 prop-seg 6 phase-seg1 7 phase-seg2 2 sjw 1"

Shows the time quanta in ns, propagation segment, phase buffer segment 1 and 2 and the synchronisation jump width in units of tq. They allow to define the CAN bit-timing in a hardware independent format as proposed by the Bosch CAN 2.0 spec (see chapter 8 of <http://www.semiconductors.bosch.de/pdf/can2spec.pdf>).

"sja1000: tseg1 1..16 tseg2 1..8 sjw 1..4 brp 1..64 brp-inc 1 clock 8000000"

Shows the bit-timing constants of the CAN controller, here the "sja1000". The minimum and maximum values of the time segment 1 and 2, the synchronisation jump width in units of tq, the bitrate pre-scaler and the CAN system clock frequency in Hz. These constants could be used for user-defined (non-standard) bit-timing calculation algorithms in user-space.

"re-started bus-errors arbit-lost error-warn error-pass bus-off"

Shows the number of restarts, bus and arbitration lost errors, and the state changes to the error-warning, error-passive and bus-off state. RX overrun errors are listed in the "overrun" field of the standard network statistics.

## Setting the CAN Bit-Timing

The CAN bit-timing parameters can always be defined in a hardware independent format as proposed in the Bosch CAN 2.0 specification specifying the arguments "tq", "prop\_seg", "phase\_seg1", "phase\_seg2" and "sjw":

```
$ ip link set canX type can tq 125 prop-seg 6 \
                             phase-seg1 7 phase-seg2 2 sjw 1
```

If the kernel option `CONFIG_CAN_CALC_BITTIMING` is enabled, CIA recommended CAN bit-timing parameters will be calculated if the bit- rate is specified with the argument "bitrate":

```
$ ip link set canX type can bitrate 125000
```

Note that this works fine for the most common CAN controllers with standard bit-rates but may *fail* for exotic bit-rates or CAN system clock frequencies. Disabling `CONFIG_CAN_CALC_BITTIMING` saves some space and allows user-space tools to solely determine and set the bit-timing parameters. The CAN controller specific bit-timing constants can be used for that purpose. They are listed by the following command:

```
$ ip -details link show can0
...
sja1000: clock 8000000 tseg1 1..16 tseg2 1..8 sjw 1..4 brp 1..64 brp-inc 1
```

## Starting and Stopping the CAN Network Device

A CAN network device is started or stopped as usual with the command "ifconfig canX up/down" or "ip link set canX up/down". Be aware that you *must* define proper bit-timing parameters for real CAN devices before you can start it to avoid error-prone default settings:

```
$ ip link set canX up type can bitrate 125000
```

A device may enter the "bus-off" state if too many errors occurred on the CAN bus. Then no more messages are received or sent. An automatic bus-off recovery can be enabled by setting the "restart-ms" to a non-zero value, e.g.:

```
$ ip link set canX type can restart-ms 100
```

Alternatively, the application may realize the "bus-off" condition by monitoring CAN error message frames and do a restart when appropriate with the command:

```
$ ip link set canX type can restart
```

Note that a restart will also create a CAN error message frame (see also [ref: socketcan-network-problem-notifications](#)).

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\linux-master\Documentation\networking) can.rst, line 1353); [backlink](#)**

Unknown interpreted text role "ref".

## CAN FD (Flexible Data Rate) Driver Support

CAN FD capable CAN controllers support two different bitrates for the arbitration phase and the payload phase of the CAN FD frame. Therefore a second bit timing has to be specified in order to enable the CAN FD bitrate.

Additionally CAN FD capable CAN controllers support up to 64 bytes of payload. The representation of this length in `can_frame.len` and `canfd_frame.len` for userspace applications and inside the Linux network layer is a plain value from 0 .. 64 instead of the CAN 'data length code'. The data length code was a 1:1 mapping to the payload length in the Classical CAN frames anyway. The payload length to the bus-relevant DLC mapping is only performed inside the CAN drivers, preferably with the helper functions `can_fd_dlc2len()` and `can_fd_len2dlc()`.

The CAN netdevice driver capabilities can be distinguished by the network devices maximum transfer unit (MTU):

```
MTU = 16 (CAN_MTU)    => sizeof(struct can_frame)    => Classical CAN device
```

MTU = 72 (CANFD\_MTU) => sizeof(struct canfd\_frame) => CAN FD capable device

The CAN device MTU can be retrieved e.g. with a SIOCGIFMTU ioctl() syscall. N.B. CAN FD capable devices can also handle and send Classical CAN frames.

When configuring CAN FD capable CAN controllers an additional 'data' bitrate has to be set. This bitrate for the data phase of the CAN FD frame has to be at least the bitrate which was configured for the arbitration phase. This second bitrate is specified analogue to the first bitrate but the bitrate setting keywords for the 'data' bitrate start with 'd' e.g. dbitrate, dsample-point, dsjw or dtq and similar settings. When a data bitrate is set within the configuration process the controller option "fd on" can be specified to enable the CAN FD mode in the CAN controller. This controller option also switches the device MTU to 72 (CANFD\_MTU).

The first CAN FD specification presented as whitepaper at the International CAN Conference 2012 needed to be improved for data integrity reasons. Therefore two CAN FD implementations have to be distinguished today:

- ISO compliant: The ISO 11898-1:2015 CAN FD implementation (default)
- non-ISO compliant: The CAN FD implementation following the 2012 whitepaper

Finally there are three types of CAN FD controllers:

1. ISO compliant (fixed)
2. non-ISO compliant (fixed, like the M\_CAN IP core v3.0.1 in m\_can.c)
3. ISO/non-ISO CAN FD controllers (switchable, like the PEAK PCAN-USB FD)

The current ISO/non-ISO mode is announced by the CAN controller driver via netlink and displayed by the 'ip' tool (controller option FD-NON-ISO). The ISO/non-ISO-mode can be altered by setting 'fd-non-iso {on|off}' for switchable CAN FD controllers only.

Example configuring 500 kbit/s arbitration bitrate and 4 Mbit/s data bitrate:

```
$ ip link set can0 up type can bitrate 500000 sample-point 0.75 \
                               dbitrate 4000000 dsample-point 0.8 fd on
$ ip -details link show can0
5: can0: <NOARP,UP,LOWER_UP,ECHO> mtu 72 qdisc pfifo_fast state UNKNOWN \
    mode DEFAULT group default qlen 10
link/can promiscuity 0
can <FD> state ERROR-ACTIVE (berr-counter tx 0 rx 0) restart-ms 0
    bitrate 500000 sample-point 0.750
    tq 50 prop-seg 14 phase-seg1 15 phase-seg2 10 sjw 1
    pcan_usb_pro_fd: tseg1 1..64 tseg2 1..16 sjw 1..16 brp 1..1024 \
    brp-inc 1
    dbitrate 4000000 dsample-point 0.800
    dtq 12 dprop-seg 7 dphase-seg1 8 dphase-seg2 4 dsjw 1
    pcan_usb_pro_fd: dtseg1 1..16 dtseg2 1..8 dsjw 1..4 dbrp 1..1024 \
    dbrp-inc 1
    clock 80000000
```

Example when 'fd-non-iso on' is added on this switchable CAN FD adapter:

```
can <FD,FD-NON-ISO> state ERROR-ACTIVE (berr-counter tx 0 rx 0) restart-ms 0
```

## Supported CAN Hardware

Please check the "Kconfig" file in "drivers/net/can" to get an actual list of the support CAN hardware. On the SocketCAN project website (see [ref: socketcan-resources](#)) there might be further drivers available, also for older kernel versions.

**System Message: ERROR/3 (D:\onboarding-resources\sample-onboarding-resources\linux-master\Documentation\networking\ [linux-master] [Documentation] [networking] can.rst, line 1439); [backlink](#)**

Unknown interpreted text role "ref".

## SocketCAN Resources

The Linux CAN / SocketCAN project resources (project site / mailing list) are referenced in the MAINTAINERS file in the Linux source tree. Search for CAN NETWORK [LAYERS|DRIVERS].

## Credits

- Oliver Hartkopp (PF\_CAN core, filters, drivers, bcm, SJA1000 driver)
- Urs Thuermann (PF\_CAN core, kernel integration, socket interfaces, raw, vcan)
- Jan Kizka (RT-SocketCAN core, Socket-API reconciliation)
- Wolfgang Grandegger (RT-SocketCAN core & drivers, Raw Socket-API reviews, CAN device driver interface, MSCAN driver)
- Robert Schwebel (design reviews, PTXdist integration)

- Marc Kleine-Budde (design reviews, Kernel 2.6 cleanups, drivers)
- Benedikt Spranger (reviews)
- Thomas Gleixner (LKML reviews, coding style, posting hints)
- Andrey Volkov (kernel subtree structure, ioctls, MSCAN driver)
- Matthias Brukner (first SJA1000 CAN netdevice implementation Q2/2003)
- Klaus Hitschler (PEAK driver integration)
- Uwe Koppe (CAN netdevices with PF\_PACKET approach)
- Michael Schulze (driver layer loopback requirement, RT CAN drivers review)
- Pavel Pisa (Bit-timing calculation)
- Sascha Hauer (SJA1000 platform driver)
- Sebastian Haas (SJA1000 EMS PCI driver)
- Markus Plessing (SJA1000 EMS PCI driver)
- Per Dalen (SJA1000 Kvaser PCI driver)
- Sam Ravnborg (reviews, coding style, kbuild help)