



Haas Oil Skimmer - Maintenance - AD0481

Haas Oil Skimmer - Maintenance

AD0481

4.2 HAAS OIL SKIMMER - MAINTENANCE

LAST UPDATED: 02/17/2021

Haas Oil Skimmer - Maintenance

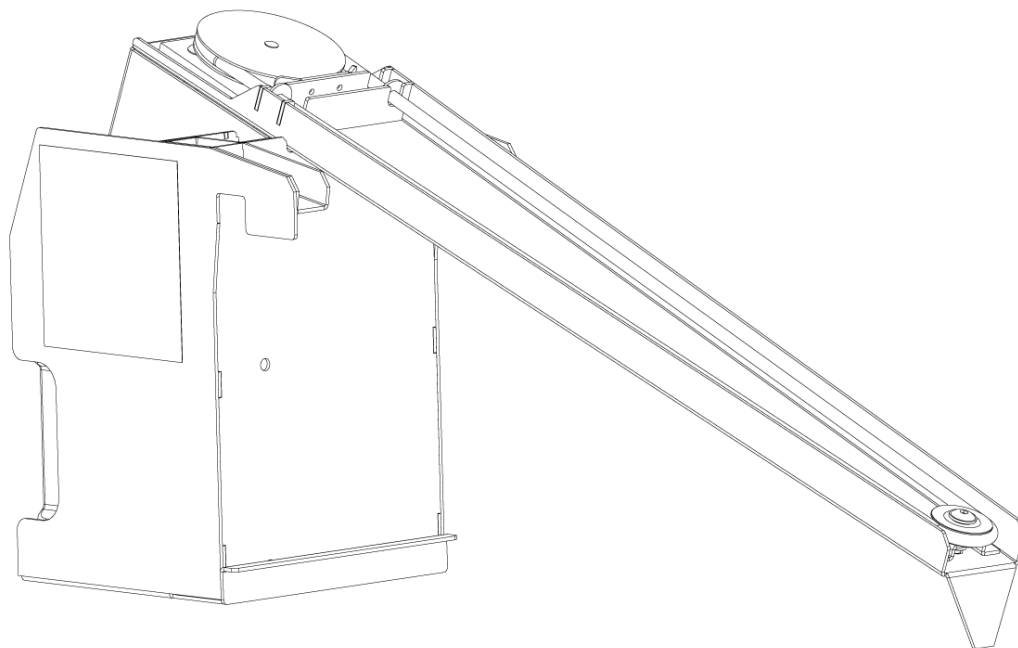
AD0481

Maintenance Video

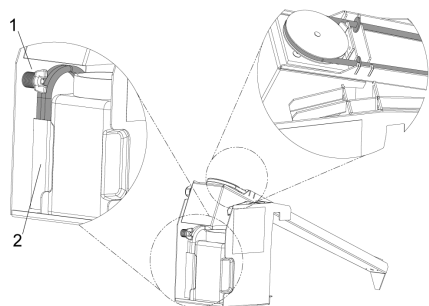
Introduction

This procedure will show you how to do maintenance on the Haas Oil Skimmer product.

For instructions on how to install the Haas Oil Skimmer please take a look at [HAAS OIL SKIMMER - INSTALLATION](#)



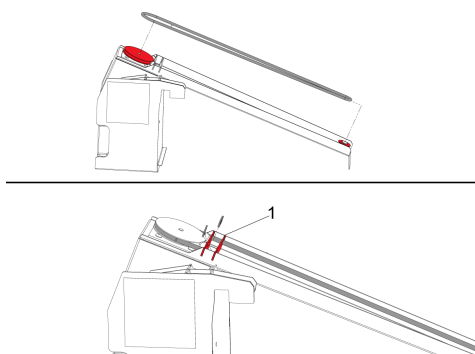
Replacement

1

Identify where the replacement components and their corresponding storage locations are.

Place excess scrapers on holder [1] and held with wing nut.

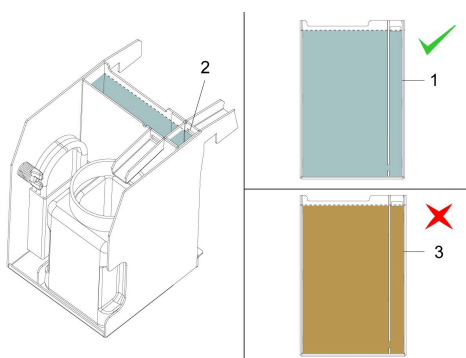
Extra O-rings should be placed in holder [2].

2

When replacing the O-ring, make sure the O-ring is not twisted and in between the grooves of both rollers.

While installing the O-ring install the scrapers, make sure the scrapers are in the slot highlighted [1].

Once completed run the oil skimmer and ensure it runs properly.

3

When:

- Coolant level is below the drain [2]
- Coolant gets dirty and appears gold [3]

Clean thoroughly with water and refill the Oil Skimmer Chambers with clean coolant [1] up to the drain [2] facing the coolant tank.