

PROJET ESE LIDAR :

Datasheet : <https://www.slamtec.com/en/Support#rplidar-a-series> (à télécharger)

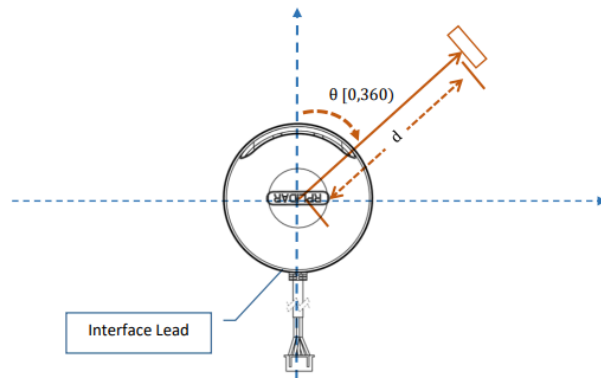


Figure 2-4 RPLIDAR Scanning Data Coordinate System Definition

Communication interface

The RPLIDAR A2 uses separate 5V DC power for powering the range scanner core and the motor system. And the standard RPLIDAR A2 uses XH2.54-5P male socket. Detailed interface definition is shown in the following figure:

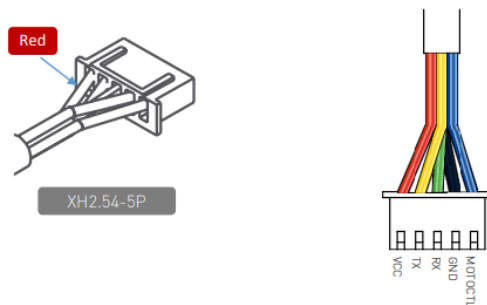


Figure 2-5 RPLIDAR Power Interface Definition

Color	Signal Name	Type	Description	Min	Typical	Max
Red	VCC	Power	Total Power	4.9V	5V	5.5V
Yellow	TX	Output	Serial port output of the scanner core	0V	3.3V	3.5V
Green	RX	Input	Serial port input of the scanner core	0V	3.3V	3.5V
Black	GND	Power	GND	0V	0V	0V
Blue	MOTOCTL	Input	Scan motor /PWM Control Signal (active high, internal pull down)	0V	3.3V	5V

Figure 2-6 RPLIDAR External Interface Signal Definition

Le LIDAR communique en UART 3.3V

Pour contrôler le scan du moteur, regarder la p12-13 de la datasheet.

Pour démarrer le LIDAR, il faut lui dire, il ne le fait pas lui-même.

Quand on envoie une requête, le LIDAR répond, il ne faut pas le surcharger, il faut attendre qu'il réponde avant d'envoyer de nouvelles requêtes.

COMMUNICATION :

Voir p6 rplidar_protocole à télécharger sur le site au début du doc

All request packets sent by a host system share the following common format. Little endian byte order is used.

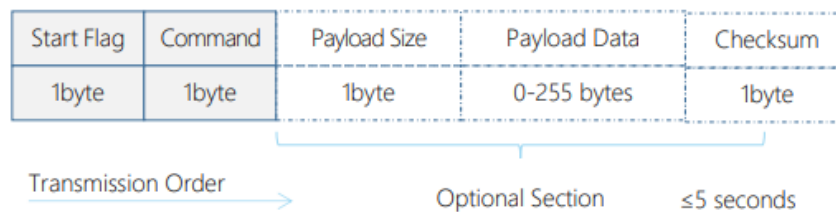


Figure 2-4 RPLIDAR Request Packets' Format

Request Name	Value	Payload	Response Mode	RPLIDAR Operation	Supported Firmware Version
STOP	0x25	N/A	No response	Exit the current state and enter the idle state	1.0
RESET	0x40	N/A		Reset(reboot) the RPLIDAR core	1.0
SCAN	0x20	N/A		Enter the scanning state	1.0
EXPRESS_SCAN	0x82	YES	Multiple response	Enter the scanning state and working at the highest speed	1.17
FORCE_SCAN	0x21	N/A		Enter the scanning state and force data output without checking rotation speed	1.0
GET_INFO	0x50	N/A	Single response	Send out the device info (e.g. serial number)	1.0
GET_HEALTH	0x52	N/A		Send out the device health info	1.0
GET_SAMPLERATE	0x59	N/A		Send out single sampling time	1.17
GET_LIDAR_CONFIG	0x84	YES		Get LIDAR configuration	1.24

Figure 4-1 The Available Requests of RPLIDAR

Requête à envoyer pour démarrer le scan en mode express :

A5	82	05	M	00	00	00	00	C
----	----	----	---	----	----	----	----	---

Avec C le checksum et M le mode (différent de 0 pour le mode extended, ou 0 pour mode legacy)

En mode legacy ça donne :

A5	82	05	00	00	00	00	00	22
----	----	----	----	----	----	----	----	----

J'ai essayé d'envoyer des trames mais le LIDAR ne répond pas, sur les conseils de Césair, je vais essayer de brancher une pwm au pin MOTOCTL a l'aide du DAC de keil

Update :

Dans la doc j'ai vu qu'on pouvait contrôler la vitesse de rotation du LIDAR avec le MOTOCTL, mais si on a juste besoin de contrôler le start et le stop du moteur, on peut seulement envoyer du high level (3.3V ici) au MOTOCTL. Pour stopper la rotation, envoyer du low level (0V).