

Module 6 – Switching Between USB Power and Battery Pack


Be sure the ESP32 is unplugged.

Plug in the ESP32 to the computer, the LED should be blinking.

Unplug the ESP32. Do NOT plug in the USB cable.

Ensure the battery pack power switch is OFF (in the **0** position).

Attach the battery pack as shown in this diagram:

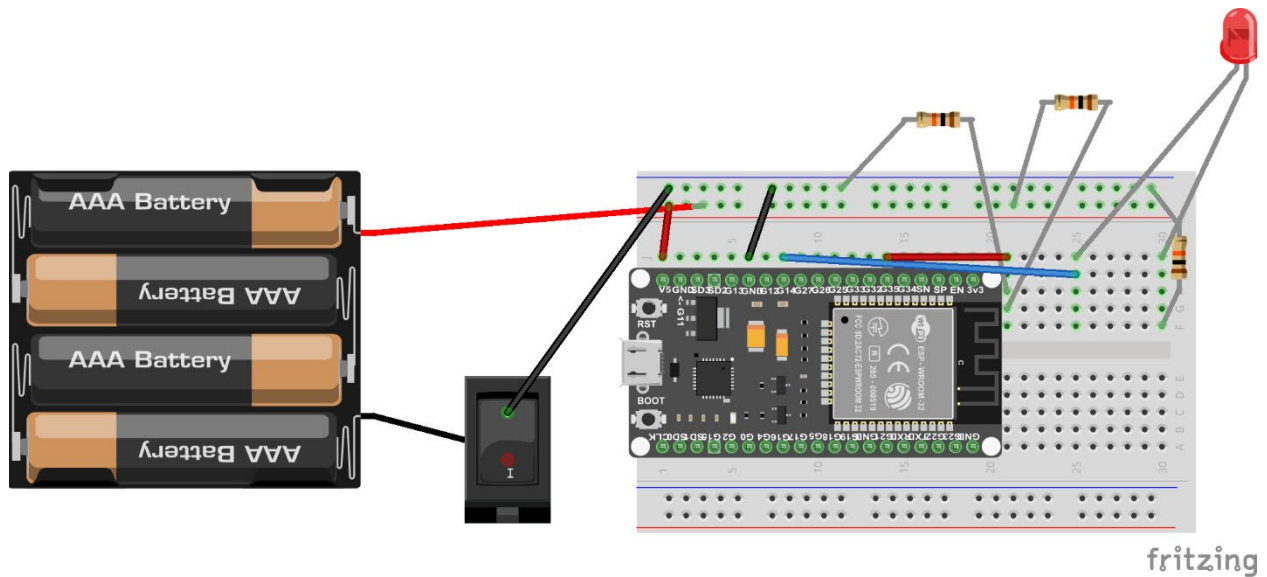

Turn the switch ON, the LED should be blinking.

Only power the ESP32 from the battery pack when the ESP32 is not powered by USB.

Turn the battery pack OFF.