




Getting Started with the Intwine CTA-2045 UCM

The Intwine CTA-2045 UCM can run in one of two modes: Wi-Fi AP or Wi-Fi client. When initially powered-on the UCM will be a Wi-Fi AP with the SSID of "Intwine<Last6ofMAC>". There is no encryption on the initial SSID.

To change the UCM to connect to a different Wi-Fi AP, connect to the default AP and then open a browser to 192.168.1.3 to see the following page. Here you can select Configure Network, then Display Scan Results. This will show a list of all Wi-Fi AP within range. You can then select one and enter (if necessary) the passphrase.

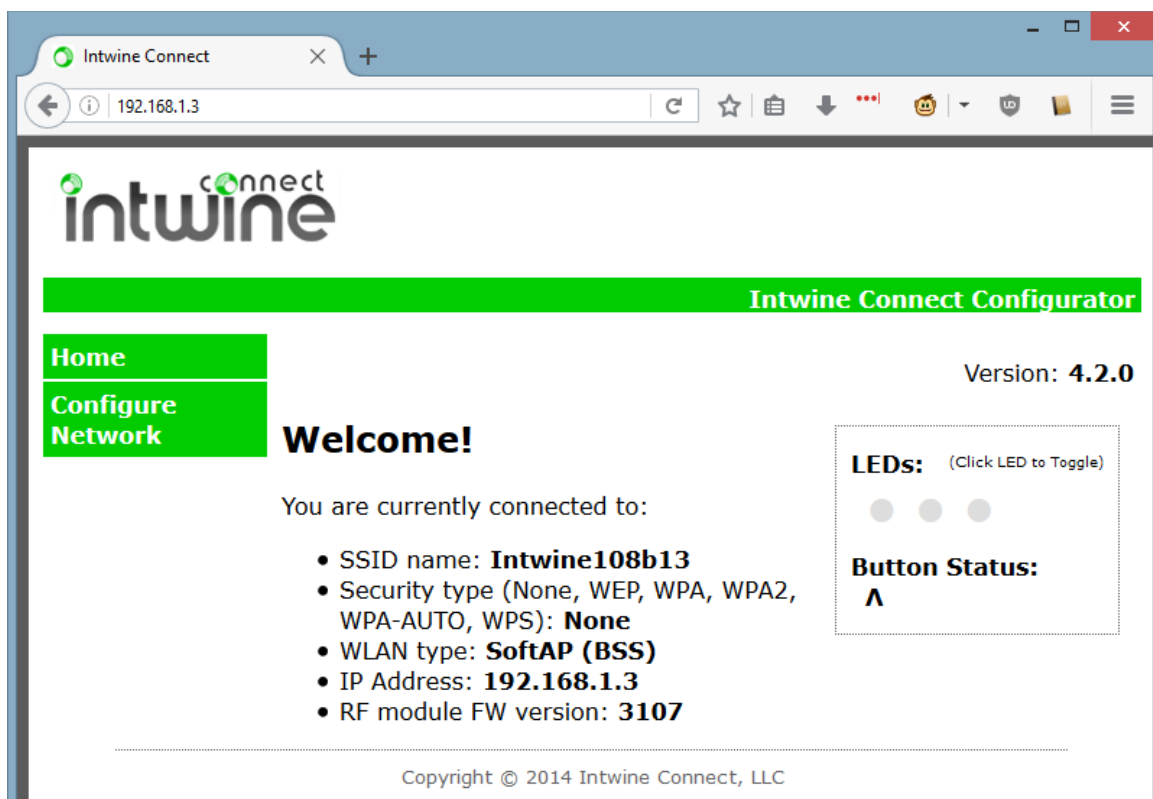

After configuring the UCM as desired, it is important to identify its IP address (either 192.168.1.3 or something else).

To send commands to the UCM, the "REST API for Intwine Connect CTA-2045 Universal Communication Modules" document describes the details of the REST API as well as a simple mechanism to send these commands.