




1

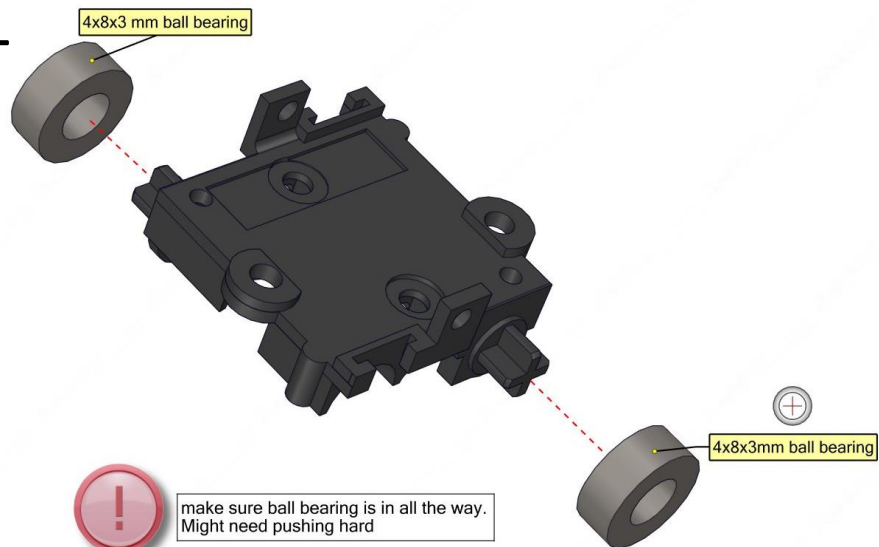


2

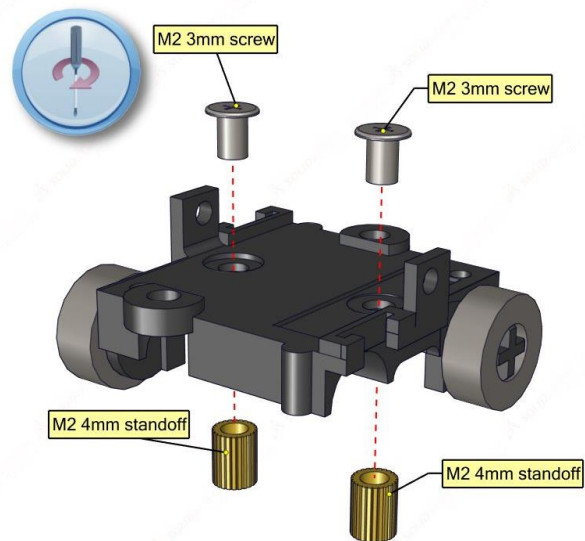


3

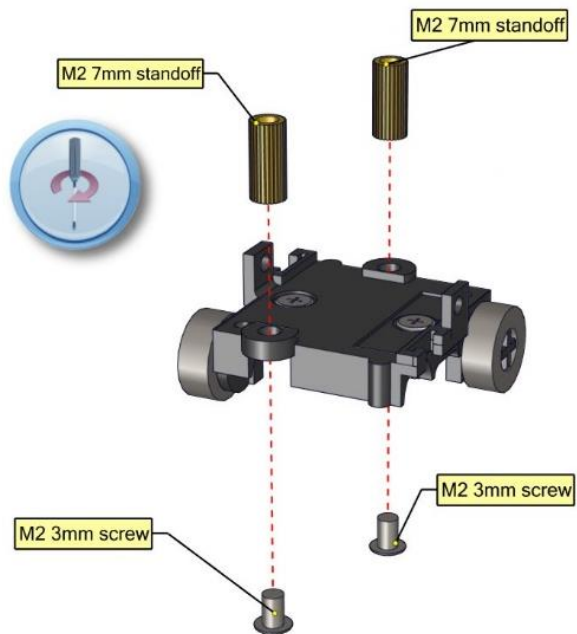


4

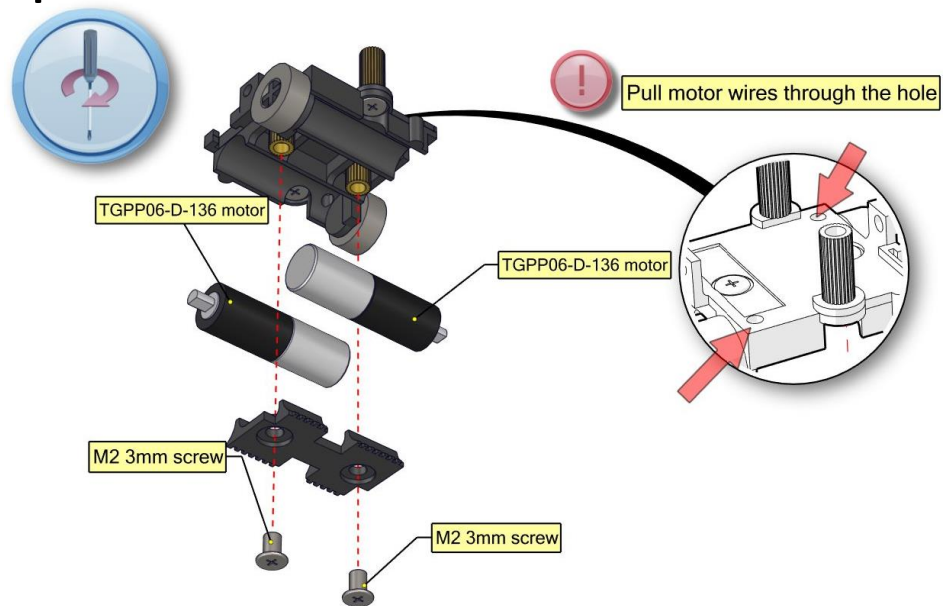

5

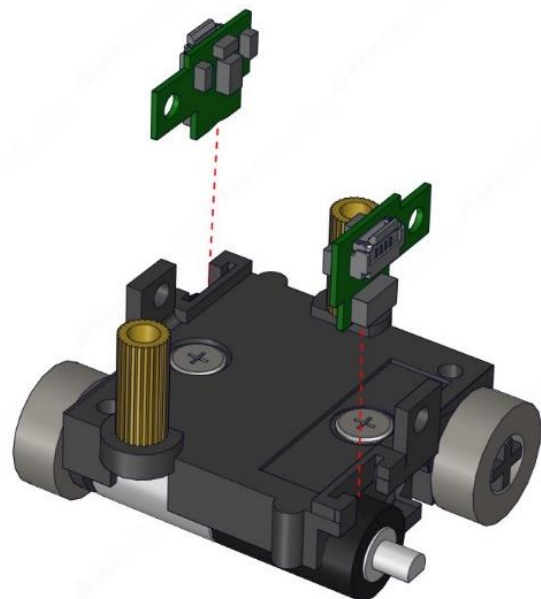


6

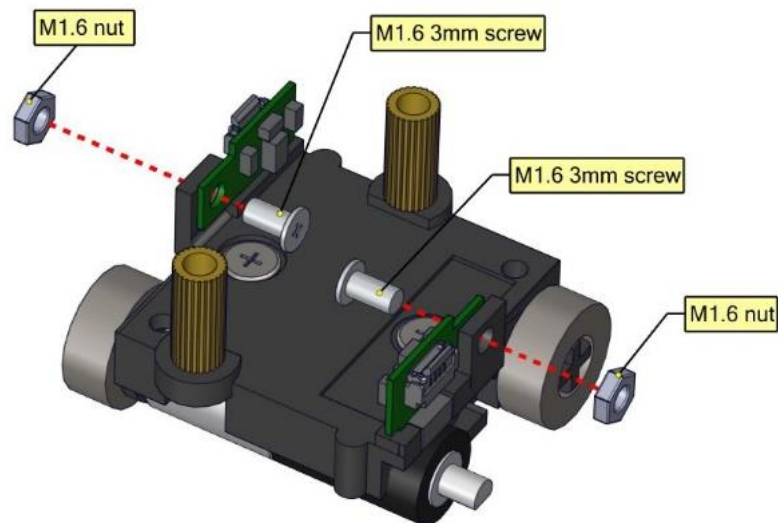


7



Magnet orientation is important
North side (N) has a red mark

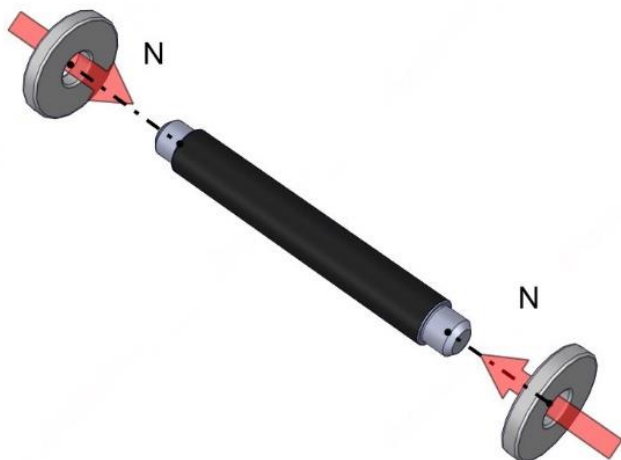


8

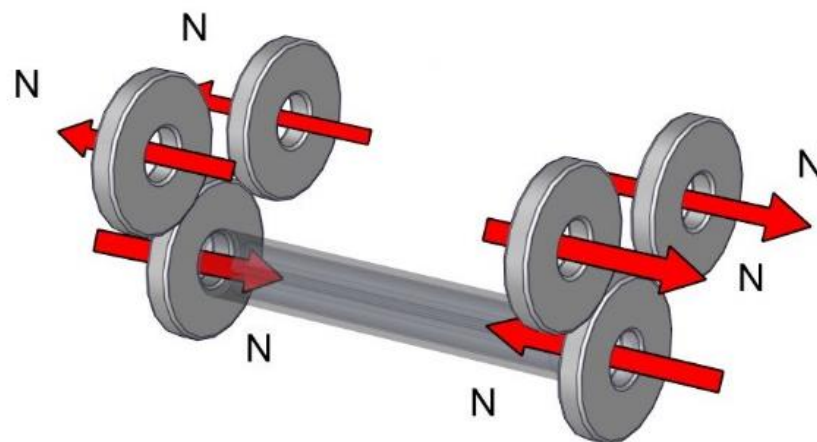

9

2X

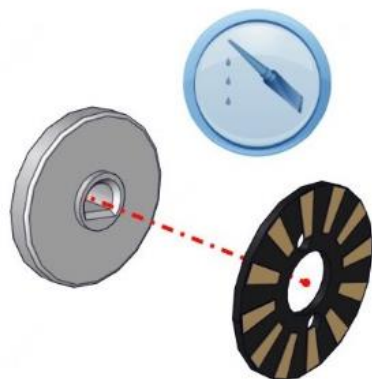


make sure the encoder disk is flash with the wheel

10


2X



Magnet orientation is important
North side (N) has a red mark

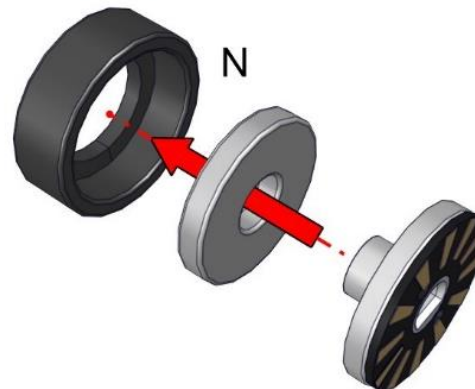

11

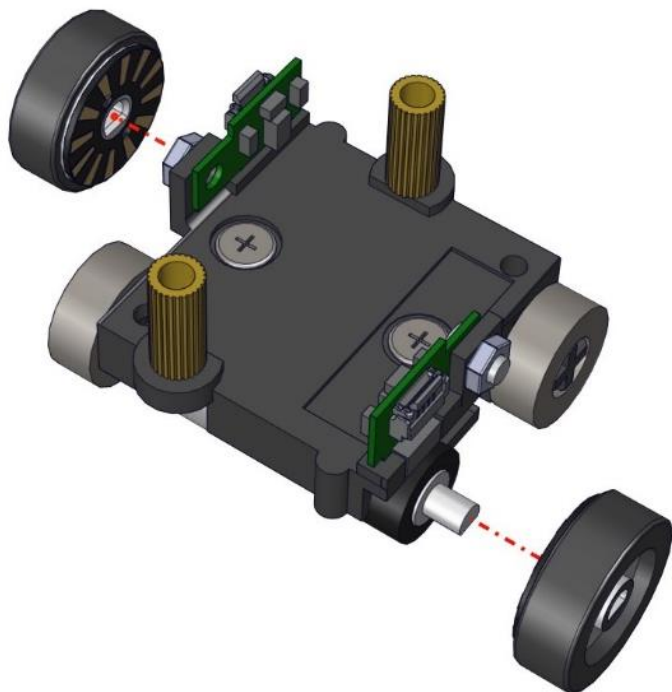


12


2X



Magnet orientation is important
North side (N) has a red mark

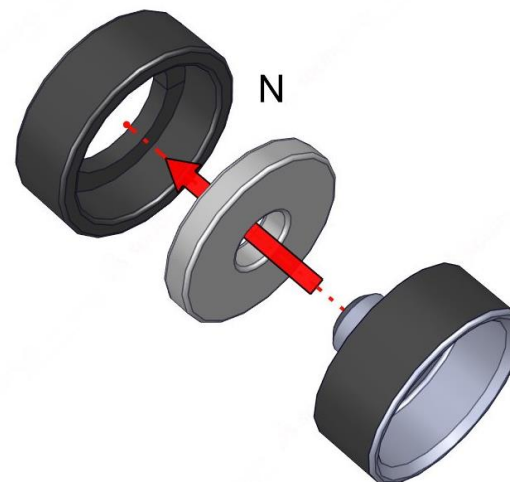


13

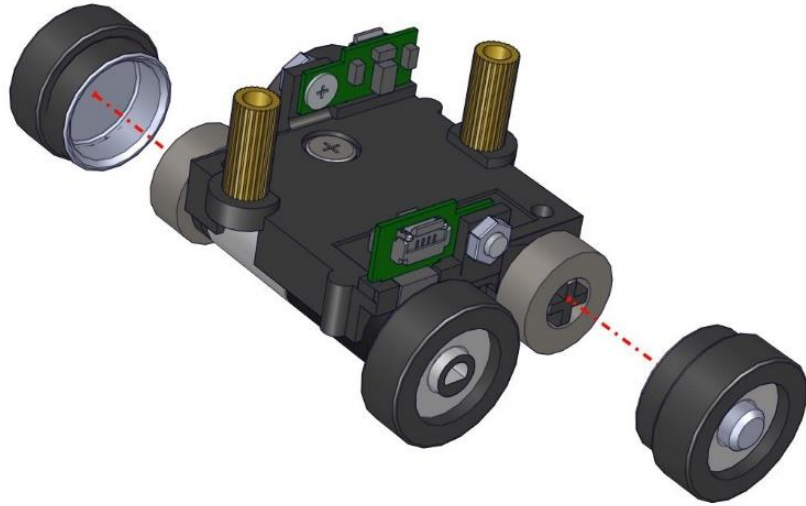


14




Modify the battery:
1) remove the yellow tape
2) unfold the PCB
3) fold PCB vertically
4) put back yellow tape

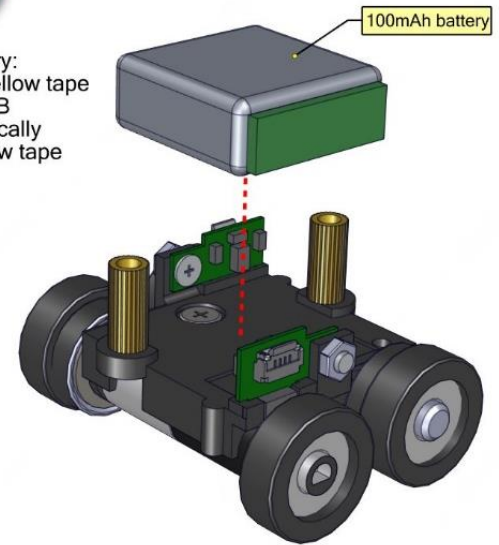


15

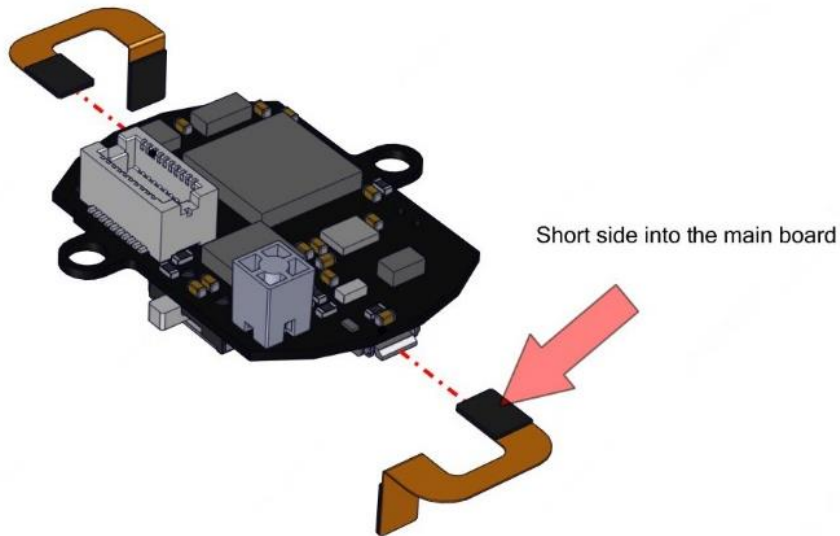

16

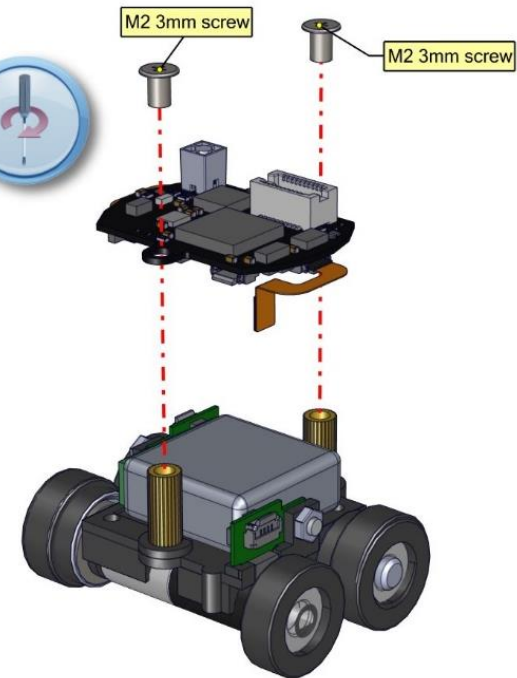


17

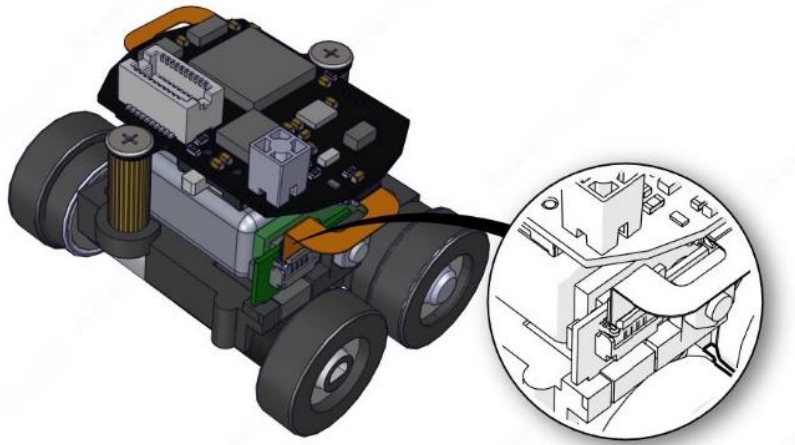


Slide the cable in and lock

18

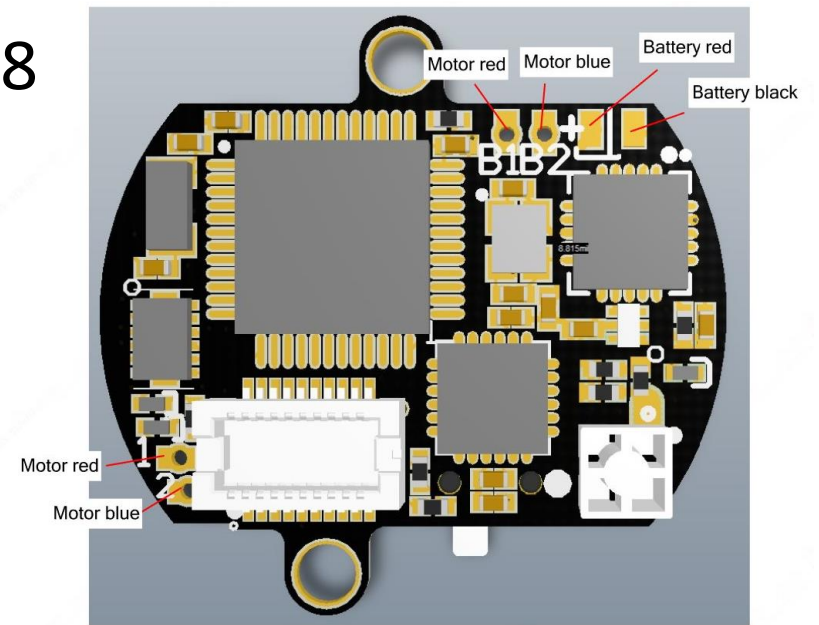

19

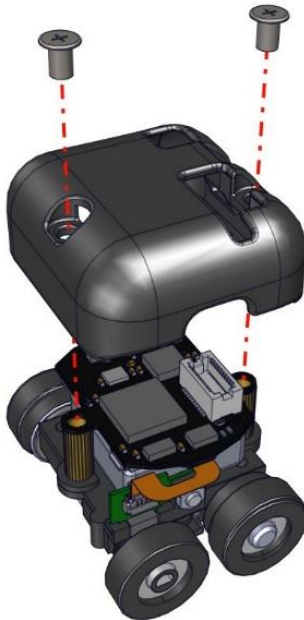

20