



IMPORTANT

PROCEDURES FOR NO-TILT FIFTH WHEELS WITH A RETRACTABLE HANDLE

Part numbers

<u>Retractable Handle</u>	or	<u>Air Release</u>
JSK37USB		JSK37USA
JSK37UWB		JSK37UWA
JSK37UAB		JSK37UAA

When using the fifth wheels above as a conventional articulating fifth wheel it is important to follow these instructions to prevent damage to the retractable handle:


Disengage No-Tilt

1. Follow the instructions to disengage the No-Tilt as described in the “Operation with conventional/framed dump trailers” section in the Operating Instructions (document #LT-SK37U-16).
2. Remove the L.H. Front Tilt Stop by removing the Shoulder Bolt (See figures below).


Note: Be sure to store loose parts in cab.

Re-engage No-Tilt

1. Reinstall the L.H. Front Tilt Stop and Shoulder Bolt
2. Follow the instructions to engage the No-Tilt described in the “Operation with frameless trailers” section in the Operating Instructions (document #LT-SK37U-16).

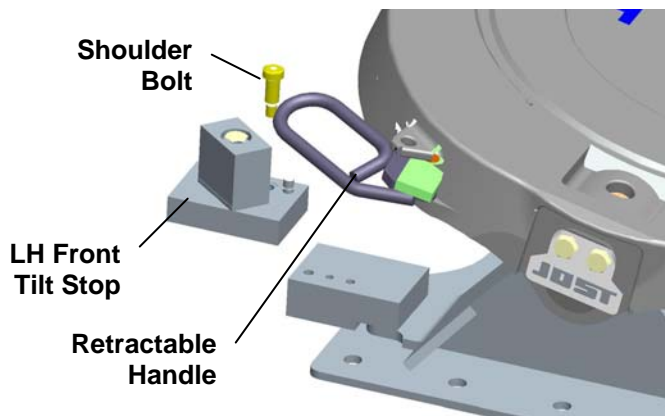

Stationary Mount

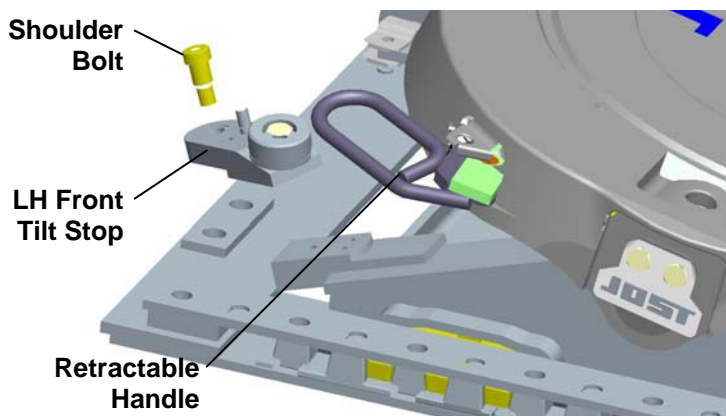

Air Sliding Mount

The right to alter specifications is reserved.