

MaxAir Modes


The MaxAir system has five operating modes:




The system is disable.



The system is operating in Timer Mode, with on/off timings and temperatures controlled by schedules.

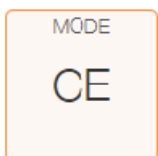

The Central Heating zone operates continually with the temperature controlled by the Zone Default Temperature.

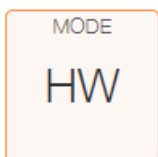

The Hot Water zone operates continually with the temperature controlled by the Zone Default Temperature.



Both the Central Heating and Hot Water zones operates continually with their temperatures controlled by the particular Zone Default Temperature.