


Setup Guide – Night Climate Scheduling

MaxAir incorporates an ability to setup a single schedule to control zones within a defined temperature range. A typical use would be as a night time schedule to ensure that the temperature remained within a 'comfortable' range.

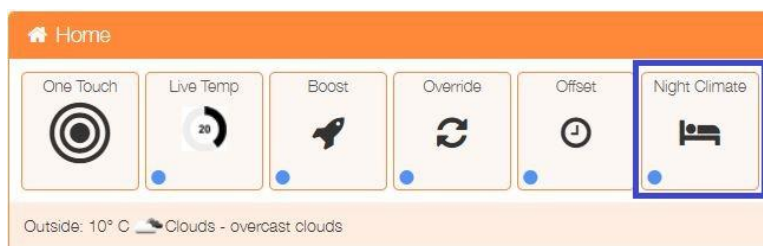

From the 'One Touch' menu select 'Night Climate'.

The image shows the 'Night Climate' configuration screen. At the top, it says 'Night Climate' and '14:08'. Below this, there's a section for 'Enable Schedule' with a checked checkbox. Then, there are radio buttons for days of the week: Sun (checked), Mon, Tue, Wed, Thu, Fri, and Sat (checked). Below the days, there are fields for 'Start Time' (18:00) and 'End Time' (06:00), each with a clock icon. Under 'Select Zone/s', there are radio buttons for 'Downstairs' and 'Upstairs' (checked). Below 'Upstairs', there are two sliders: 'Minimum Temperature: 16°' and 'Maximum Temperature: 18°'. At the bottom, there's a radio button for 'HotWater' (unchecked) and two buttons: 'Cancel' and 'Submit'. The footer shows 'Outside: 7° C' and 'Clouds - scattered clouds'.

The Night Climate schedule screen will be presented, the example below shows:

- An enabled schedule
- Operates Saturday and Sunday
- Operated between 2200 hours and 0600 hours (next day)
- Controls the Upstairs Zone
- Activates the zone when the temperature is between 16° and 18°C

Once the schedule has been configured, click on the 'Submit' button to save.



If an enabled Night Climate schedule exists then the status indicator will change from blue to red.