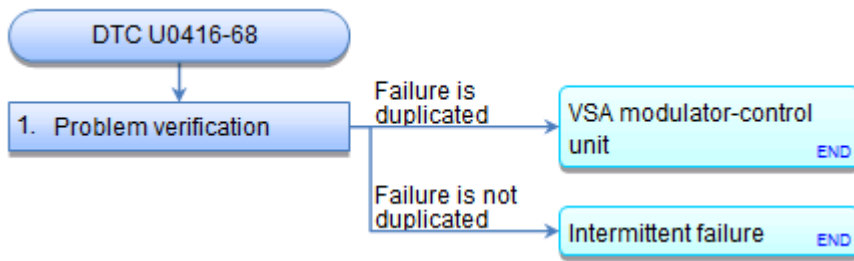


DTC Troubleshooting: U0416-68**DTC U0416-68: VSA System Malfunction**

NOTE: [Before you troubleshoot, review the general troubleshooting information.](#)

DTC Description	DTC	Freeze Frame
U0416-68 VSA System Malfunction		

DTCs (VSA)**1. Problem verification:**

- 1. Turn the vehicle to the ON mode.
- 2. Clear the DTC with the HDS.

Clear DTCs

- 3. Turn the vehicle to the OFF (LOCK) mode, then to the ON mode.
- 4. Check for DTCs with the HDS.

DTC Description	DTC	Freeze Frame
U0416-68 VSA System Malfunction		

Is DTC U0416-68 indicated?

YES Check for loose terminals and poor connections in the VSA modulator-control unit 46P connector. Check for any authorized service information related to the DTCs or symptoms you are troubleshooting. If they are OK, [replace the VSA modulator-control unit.](#) ■

NO Intermittent failure, the system is OK at this time. [Refer to intermittent failures troubleshooting.](#) If the freeze data/on-board snapshot of this DTC is recorded, try to reproduce the failure under the same conditions with the Freeze data/on-board snapshot. ■