

## Spine & Hinge Instructions



1) full pack




2) 2 x colours of creasing rib



3) Removing creasing ribs



4) basic holder

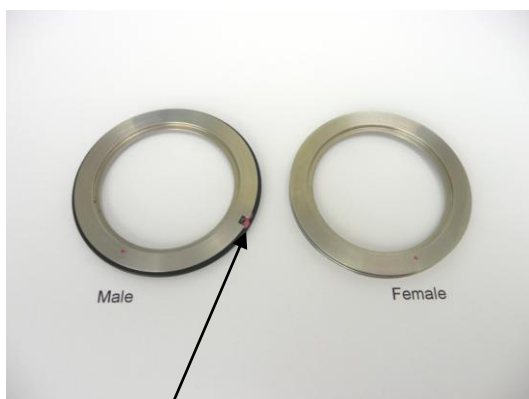

5) cut-out on male rib holder



6) male crease rib holder



7) male rib holder



8) 1mm spacers



9) female with red spacers



10) tighten screw fixing collar



11) shaft fixing collar



12) male & female




13) male & female completed



14) added spacers

# Completed Spine & Hinge

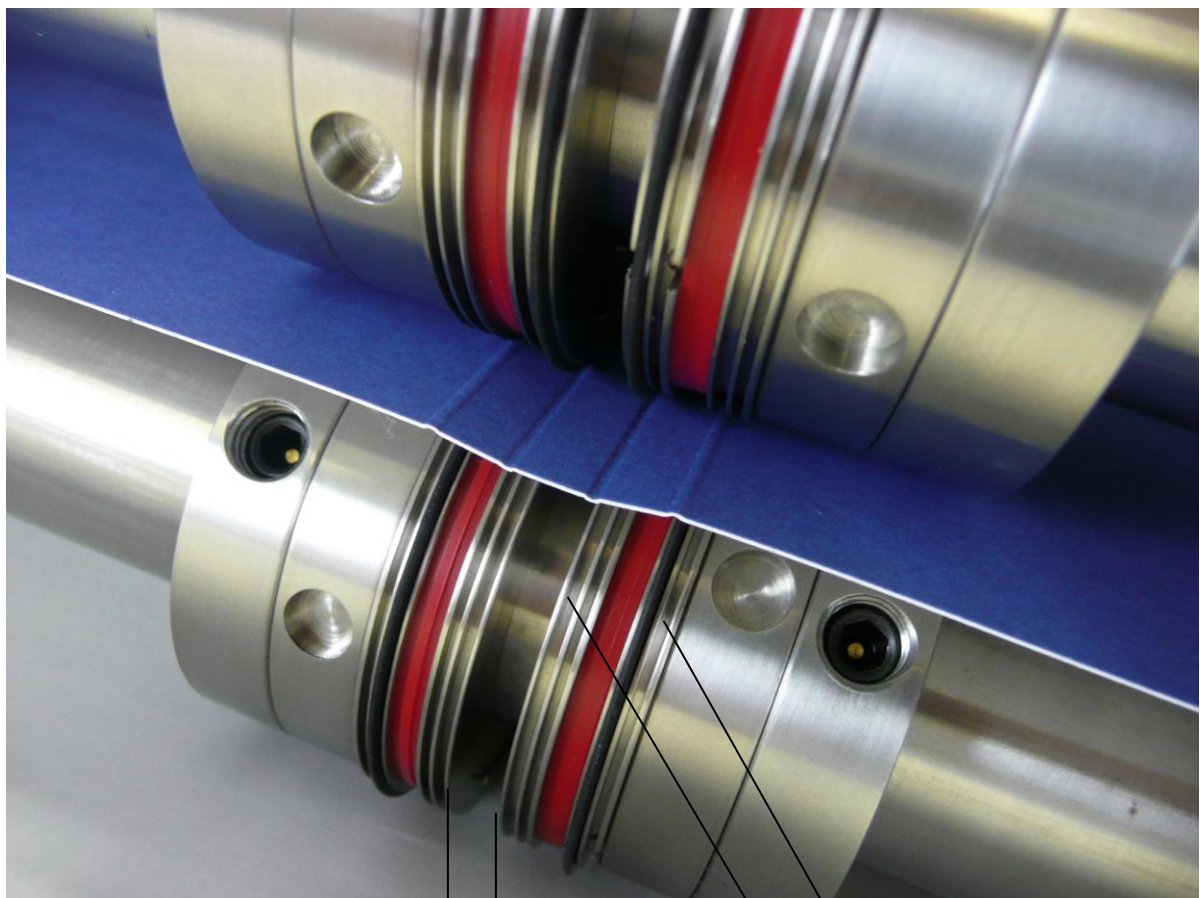

Minimum  
spine 2.5mm

Minimum distance 3mm  
Maximum distance 8mm