


Kolbus 470 & 490 Installation Instructions

QC-DEL-KB/26-6C-FP-01 6-Creaser

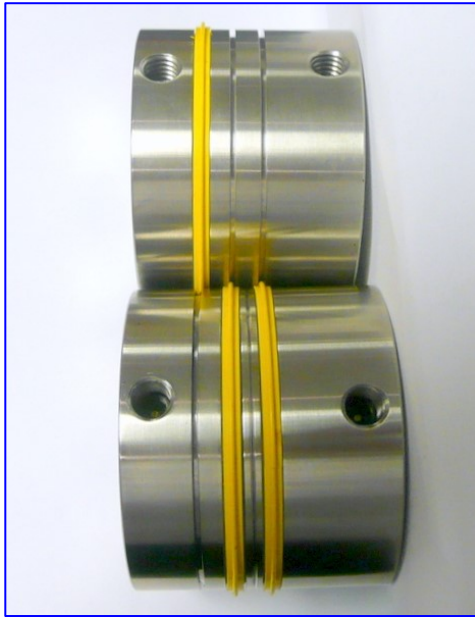

Once the crease units are placed on the shafts, the split creasing ribs can be inserted into the components.



The creasing set consists of 2 identical halves. Apply the creasing tools to the shafts according to cover stock crease direction preference.



The top shaft support collar uses two gripper bands.

The bottom support collar is plain metal.

Installing the bottom shaft parts

Align a bottom crease unit with the edge of the book clamp and tighten fixing screws. Align the remaining bottom crease unit into the desired position and tighten the fixing screw.

Installing the top shaft parts

To achieve the correct grip between the support collars, align the top black grippers and the plain metal bottom collars to each end of the shaft. Slowly lower the top shaft until equal gentle grip pressure is obtained on both sides of the creasing shafts. As the top shaft is being lowered align the top male crease rib protrusions into the bottom female channels.

Do not tighten the top shaft fixing screws.

Jog a sheet of cover stock between the crease units. As the paper is fed between the creasing shafts the loose top shaft creasing units will automatically align themselves into the optimum creasing position. As the shafts rotate the fixing on the crease units become accessible. Tighten the screws while the paper is still positioned between the creasing units.