

## RemoTI™ Simple Application (SimpleApp)

By Stig Torud

---

### Keywords

- *RemoTI™*
- *CC2530*
- *Remote Controller Node*
- *Target Node*
- *ZigBee RF4CE*
- *CERC*
- *SmartRF05*

## 1 Introduction

The RemoTI-CC2530DK kit contains a remote controller reference design for the remote controller node and a target board for the target node. The RemoTI software installer includes sample applications for the kit hardware.

This application note complements the RemoTI-CC2530DK kit and provides a simple application (SimpleApp), both remote controller and target node, which runs on the SmartRF05EB+CC2530EM. This enables application developers to develop RemoTI applications without the RemoTI-CC2530DK. In addition, it provides a simple starting point for application development.

The goal of the SimpleApp is to keep things, as the name indicates, simple and showcase discovery/pairing and message exchange with a button press. SimpleApp is built on top of the RTI interface which implements the CERC profile. LEDs are used to indicate pairing state and message exchange indications.

RemoTI is Texas Instrument's implementation of the ZigBee RF4CE network protocol standard. You can find more information about RF4CE at [www.zigbee.org/rf4ce](http://www.zigbee.org/rf4ce) and RemoTI at [www.ti.com/RemoTI](http://www.ti.com/RemoTI).

# Table of Contents

<b>KEYWORDS.....</b>	<b>1</b>
<b>1 INTRODUCTION.....</b>	<b>1</b>
<b>2 ABBREVIATIONS.....</b>	<b>2</b>
<b>3 HARDWARE AND SOFTWARE REQUIREMENTS .....</b>	<b>3</b>
<b>4 PROJECT ORGANIZATION .....</b>	<b>3</b>
4.1 FILE DESCRIPTIONS .....	4
4.1.1 <i>Common Files</i> .....	4
4.1.2 <i>Target node specific project files</i> .....	4
4.1.3 <i>Controller project specific files</i> .....	5
<b>5 BUILD AND PROGRAM THE HARDWARE.....</b>	<b>5</b>
<b>6 EXECUTE THE APPLICATION.....</b>	<b>6</b>
6.1 BUTTONS AND LEDs .....	6
6.2 EXECUTION SEQUENCE .....	7
<b>7 LIMITATIONS .....</b>	<b>8</b>
<b>8 REFERENCES.....</b>	<b>9</b>
<b>9 GENERAL INFORMATION .....</b>	<b>10</b>
9.1 DOCUMENT HISTORY.....	10

## 2 Abbreviations

EM	Evaluation module
LED	Light Emitting Diode
MAC	Medium Access Control
RF	Radio Frequency
RF4CE	Radio Frequency for Consumer Electronics
OSAL	Operating System Abstraction Layer
HAL	Hardware Abstraction Layer
CERC	Consumer Electronics Remote Control
NV	Non-Volatile (memory)

### 3 Hardware and Software Requirements

#### Hardware

- 2 x SmartRF05 boards (rev 1.3 or 1.7)
- 2 x USB cables
- 2 x CC2530EM

See the CC2530 product page [3] for technical and ordering information. The CC2530DK contains the HW necessary for SimpleApp.

#### Software

- Latest RemoTI release ([www.ti.com/RemoTI](http://www.ti.com/RemoTI))
- IAR workbench 7.51A ([www.iar.com](http://www.iar.com))

The SimpleApp application note includes a ZIP file containing the IAR workspace with the controller and target node projects. Unzip the file in the \Projects\RemoTI folder of your RemoTI installation.

### 4 Project Organization

The SimpleApp workspace contains both the remote controller node and the target node. Go to the \Projects\RemoTI\SimpleApp\CC2530EB folder and open up the SimpleApp.eww with the IAR Workbench version 7.51A; you should see a workspace window similar to Figure 1 below after opening the workspace. The tabs at the bottom of the window are used to activate the remote controller node ("Controller") or the target receiver node ("Target") project respectively.

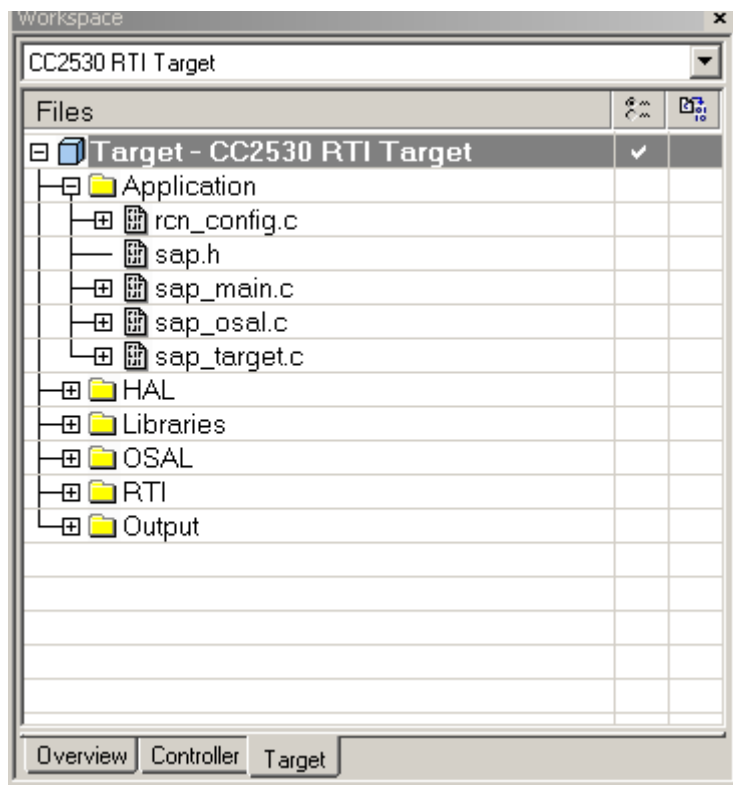


Figure 1. SimpleApp Workspace Window

## 4.1 File Descriptions

### 4.1.1 Common Files

- *sap.h*  
This file declares the SimpleApp external interface that will be referenced in the system setup files *sap\_main.c* and *sap\_osal.c*
- *sap\_main.c*  
This file contains the functions for initializing the board, HAL, MAC, OSAL and also registering the callback function for key events.
- *sap\_osal.c*  
This file sets up the order of task initialization and event handling.
- *rcn\_config.c*  
This file configures the frequency agility parameters (target node) and key seed exchange power level. It is recommended not to change these parameters.

### 4.1.2 Target node specific project files

- *sap\_target.c*  
This file contains the main application code for the target receiver node. It implements the task initialization function (*SAP\_Init*), event processing (*SAP\_ProcessEvent*) and key callback function (*SAP\_KeyCbcbk*) in addition to the RTI interface specific APIs for a target node. It also contains a static function (*sapStartup*) which is used to configure the node capabilities. The node is configured to the default values described in the RTI API guide [1], except from the custom configuration parameters described below.

1. The node is configured as a target receiver, AC powered, security capable and without channel normalization capability by the following statements:

```
pValue[0] = RTI_BUILD_NODE_CAPABILITIES(1,1,1,0);  
RTI_WriteItem(RTI_CP_ITEM_NODE_CAPABILITIES, 1, pValue);
```

2. The target node is configured as an TV application device type with the following statements

```
pValue[0] = RTI_DEVICE_TELEVISION;  
RTI_WriteItem(RTI_CP_ITEM_APPL_DEV_TYPE_LIST, 1, pValue);
```

3. The node will store state information (e.g. pairing table, short address, PAN ID) to NV memory and will by default restore this information after a power cycle since *RTI\_CP\_ITEM\_STARTUP\_CTRL* is configured to *RESTORE\_STATE* in *RTI\_InitCnf()*. If 'Button 1' (S1) is pressed at power on, the node will clear the state information. This is accomplished with the following statements.

```
if (HalKeyRead() & HAL_KEY_SW_6)  
{  
    pValue[0] = CLEAR_STATE;  
    RTI_WriteItem(RTI_CP_ITEM_STARTUP_CTRL, 1, pValue);  
}
```

### 4.1.3 Controller project specific files

- *sap\_controller.c*

This file contains the main application code for the remote controller node. It implements the task initialization function (*SAP\_Init*), event processing (*SAP\_ProcessEvent*) and key callback function (*SAP\_KeyCbck*) in addition to the RTI interfaces specific APIs for a controller node. It also contains two static functions (*sapStartup* and *sapSelectDestIdx*). The *sapStartup* function is used to configure the node capabilities, and the *sapSelectDestIdx* function is used to search the pairing table and set the active pairing to the last valid entry (if any) in the pairing table after the stack has initialized. The node is configured to the default values described in the RTI API guide [1], except from the custom configuration parameters described below.

1. The node is configured as a controller, battery powered, security capable and without channel normalization capability by the following statements

```
pValue[0] = RTI_BUILD_NODE_CAPABILITIES(0,0,1,0);
RTI_WriteItem(RTI_CP_ITEM_NODE_CAPABILITIES, 1, pValue);
```

2. The node is configured as an remote controller application device type with the following statements

```
pValue[0] = RTI_DEVICE_REMOTE_CONTROL;
RTI_WriteItem(RTI_CP_ITEM_APPL_DEV_TYPE_LIST, 1, pValue);
```

3. The remote controller node is configured capable of pairing with ZigBee RF4CE TV, Video player/recorder and Set Top Box (STB) application device types with the following statements

```
pValue[0] = RTI_DEVICE_TELEVISION;
pValue[1] = RTI_DEVICE_VIDEO_PLAYER_RECORDER;
pValue[2] = RTI_DEVICE_SET_TOP_BOX;
RTI_WriteItem(RTI_CP_ITEM_NODE_SUPPORTED_TGT_TYPES, 3, pValue);
```

4. The node will store state information (e.g. pairing table, short address) to NV memory and will by default restore this information after a power cycle since *RTI\_CP\_ITEM\_STARTUP\_CTRL* is configured to *RESTORE\_STATE* in *RTI\_InitCnf()*. If 'Button 1' (S1) is pressed at power on, the node will clear the state information. This is accomplished with the following statements.

```
if (HalKeyRead() & HAL_KEY_SW_6)
{
    pValue[0] = CLEAR_STATE;
    RTI_WriteItem(RTI_CP_ITEM_STARTUP_CTRL, 1, pValue);
}
```

## 5 Build and Program the Hardware

Connect a USB cable between your PC and the SmartRF05+CC2530 board. If this is the first time you connect a SmartRF05 board to your PC, it will ask you to install the "Chipcon SRF05EB driver. This driver is included in the IAR distribution so you don't want Windows to connect to Windows Update to search for software (select "No, not this time" and hit next in

the driver wizard), and let Windows install the software automatically (select “Install software automatically” and hit next in the driver wizard).


1. Start the IAR Workbench and select File->open->workspace.
2. Navigate to the \Projects\RemoTI\SimpleApp\CC2530EB and select the SimpleApp.eww file
3. Click the “Controller” tab in the workspace window and select Project->Rebuild All
4. Select Project->Debug, ctrl+d or hit the debug symbol to load the executable onto the SmartRF05+CC2530EM platform.
5. You can now either hit F5 to run the program in debug mode. If you don’t want to run in debug mode, select Debug->stop debugging or hit the stop debugging symbol to disconnect from the target. You need to power cycle the target to execute the program if you elected not to run the program in debug mode.

Repeat step 3, 4 and 5 above for the target receiver node but make sure to click the “target” tab in step 3.

## 6 Execute the Application

### 6.1 Buttons and LEDs

The joystick on the SmartRF05 boards is used as input to trigger discovery/pairing and for message exchange. The joystick mapping is shown in Figure 2 with the lines drawn corresponding to the lines around the joystick on the PCB. SW5 is mapped to pressing the joystick down. Note that ‘Button 1’ (S1) used for clearing state attributes at power-up is the red button marked S1 located at a different location on the PCB.

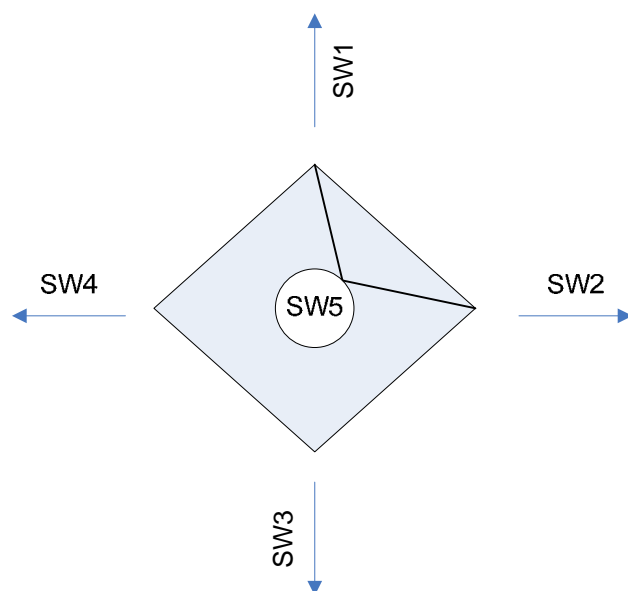

**Figure 2. Joystick Switch (SW) Mapping**

Table 1 below shows the joystick switch mapping.

Node/Switch	SW1	SW2	SW3	SW4	SW5
Remote Controller	Not used	<b>Send Message</b>	Not used	<b>Initiate Pairing</b>	Not used
Target	Not used	Not used	Not used	<b>Allow Pairing</b>	Not used

**Table 1. Joystick Functionality**

Three LEDs are used as visual indication of RemoTI initialization, discovery/pairing and message exchange. The 'EM selection' (P19) switch on the SmartRF05 rev.1.7 board must be put in 'SOC/TRX' position to map the three LEDs correctly.

- Green LED (LED1) is used to indicate message exchange.
  - Controller – The LED is turned on right before the message is sent and turned off when the message is ACKed.
  - Target – The LED is toggled for every message received, independent of which paired remote controller sent the message.
- Red LED (LED2) is used to indicate RemoTI initialization.
  - The LED is turned on when SimpleApp is initializing and turned off when *RTI\_InitCnf()* is called indicating the node is initialized and ready to process joystick inputs.
- Yellow LED (LED3) is used to indicate discovery/pairing.
  - Off – no valid pairing in the node pairing table
  - On – at least one pairing entry exist in the node pairing table
  - Blinking
    - Target node – Indicates the node is in discovery mode and will accept discovery/pairing request from a remote controller node. The target node implements the CERC auto-discovery pairing mechanism and will as such accept pairing request for 30 sec after SW4 is activated. Note that the pairing request will abort if more than one controller nodes try to pair simultaneously. This is according to CERC specification.
    - Remote controller node – Indicates the node is sending discovery requests to find a target node for pairing.

NOTE. LED1, LED2 and LED3 are all physically mapped to the Green LED on the SmartRF05 rev1.3 board. As such, the visual indication is slightly impaired on the SmartRF05 rev1.3 boards since the Green LED is used both as RemoTI initialization, discovery/pairing and message exchange indication. See [2] for more details.

## 6.2 Execution Sequence

1. Apply power to the board by moving the power-on switch (P8) towards the 'ON' position. Make sure you hold 'Button 1' (S1) down when applying power to the board if you want to clear the state attributes and the pairing table entries. LED 4 will be on when S1 is pressed. Note that S1 must be pressed until LED2 (Red) is solid on for the clearing of state attributes to take effect.
2. Activate SW4 on both the target and controller node to initiate discovery and pairing, and observe the yellow LED blinking.

3. Wait until the yellow LED is solid on for both target and controller to indicate successful pairing. If they are off after blinking, the pairing didn't succeed. Go back to step 2, or potentially step 1.
4. After successful pairing, activate SW2 on the controller node to send a message to the target.
5. Observe the green LED toggle on the target as indication the message was received successfully. The green LED will also be on for the remote controller from the time the message is sent until the ACK is received.

## 7 Limitations

The SimpleApp application is intended to be a very simple starting point for RemoTI developers not using the sample applications included in the RemoTI release. As such, SimpleApp has some limitations:

- **Network Processor Interface (NPI) and RTI Surrogate**  
The target node does not implement the NPI or the RTI surrogate as the RNP project included in the RemoTI installer. The target node is therefore not capable of connecting to the Target Emulator application running on the PC.
- **Controller node key handling (polling)**  
The joystick is connected to the ADC on the CC2530 and is using a polling mechanism to read the keys. The BasicRemote sample application (included in the RemoTI software installer) key matrix is connected to GPIO pins and is completely interrupt driven. This enables the BasicRemote based remote controller to stay in PM3 until a key is pressed. Since SimpleApp uses a polling mechanism, it can only enter PM2 since the sleep timer must be running, and it will wake up at certain interval to poll the keys.



## 8 References

- [1] RemoTI API, SWRA268
- [2] SmartRF05EB User's Guide, SWRU210 ([www.ti.com/lit/swru210](http://www.ti.com/lit/swru210))
- [3] <http://focus.ti.com/docs/prod/folders/print/cc2530.html>

## 9 General Information

### 9.1 Document History

Revision	Date	Description/Changes
SWRA286	2009.05.12	Initial release.
SWRA286A	2009.09.30	Updated to comply with RemoTI 1.1

## IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

### Products

Amplifiers	<a href="http://amplifier.ti.com">amplifier.ti.com</a>
Data Converters	<a href="http://dataconverter.ti.com">dataconverter.ti.com</a>
DLP® Products	<a href="http://www.dlp.com">www.dlp.com</a>
DSP	<a href="http://dsp.ti.com">dsp.ti.com</a>
Clocks and Timers	<a href="http://www.ti.com/clocks">www.ti.com/clocks</a>
Interface	<a href="http://interface.ti.com">interface.ti.com</a>
Logic	<a href="http://logic.ti.com">logic.ti.com</a>
Power Mgmt	<a href="http://power.ti.com">power.ti.com</a>
Microcontrollers	<a href="http://microcontroller.ti.com">microcontroller.ti.com</a>
RFID	<a href="http://www.ti-rfid.com">www.ti-rfid.com</a>
RF/IF and ZigBee® Solutions	<a href="http://www.ti.com/lprf">www.ti.com/lprf</a>

### Applications

Audio	<a href="http://www.ti.com/audio">www.ti.com/audio</a>
Automotive	<a href="http://www.ti.com/automotive">www.ti.com/automotive</a>
Broadband	<a href="http://www.ti.com/broadband">www.ti.com/broadband</a>
Digital Control	<a href="http://www.ti.com/digitalcontrol">www.ti.com/digitalcontrol</a>
Medical	<a href="http://www.ti.com/medical">www.ti.com/medical</a>
Military	<a href="http://www.ti.com/military">www.ti.com/military</a>
Optical Networking	<a href="http://www.ti.com/opticalnetwork">www.ti.com/opticalnetwork</a>
Security	<a href="http://www.ti.com/security">www.ti.com/security</a>
Telephony	<a href="http://www.ti.com/telephony">www.ti.com/telephony</a>
Video & Imaging	<a href="http://www.ti.com/video">www.ti.com/video</a>
Wireless	<a href="http://www.ti.com/wireless">www.ti.com/wireless</a>

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265  
Copyright © 2009, Texas Instruments Incorporated