




My Russound Launcher Tip

The Russound Launcher allows you to open other application and view your favorite Web sites within the My Russound application using quick start icons.

1. Click on the launcher tab to get started.

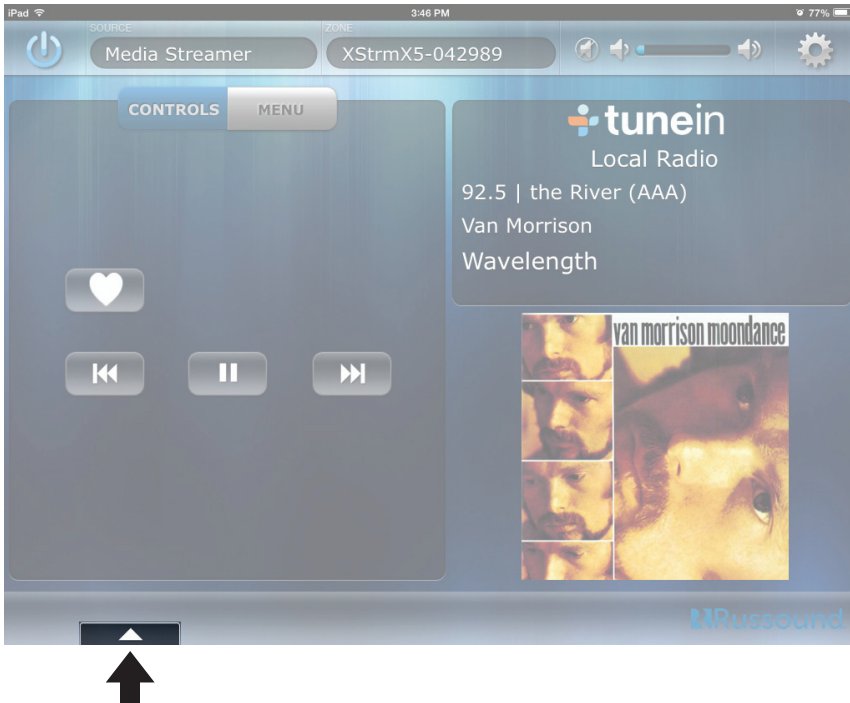

2. Select the Launcher Type.



1. **App** - Opens another application using URL Schemes

URL Schemes can be difficult to find. Typically a Google search will help determine the text needed to launch an app. Websites like www.handleopenurl.com can be helpful. Check with the manufacturer for more details.

Popular examples of URL Schemes:

- ←1 Lutron - "Lutron://"
- ←2 Sonos - "sonos://"
https://sonos.custhelp.com/app/answers/detail/a_id/1906
- ←3 iTunes - "Music://"
- Facebook - "fb://"
- Twitter - "twitter://"

2. **Web Widget** - Opens a Web page within the MyRussound app.

An example of a web widgets might be an IP camera or other website like news or weather. The website IP address will appear within a window on the Russound App.

3. **Web Page**: Opens a Web page within the Safari Web Browser.

... (cont'd)

3. From a predetermined list, select launcher icon that you would like to have displayed within the launcher bar.




4. Enter the URL of the Application or Web page. See iOS URL Schemes for more information.



5. Enter the name of your quick start icon and press save.



6. Additional quick start icons can be added by pressing the "+" button.

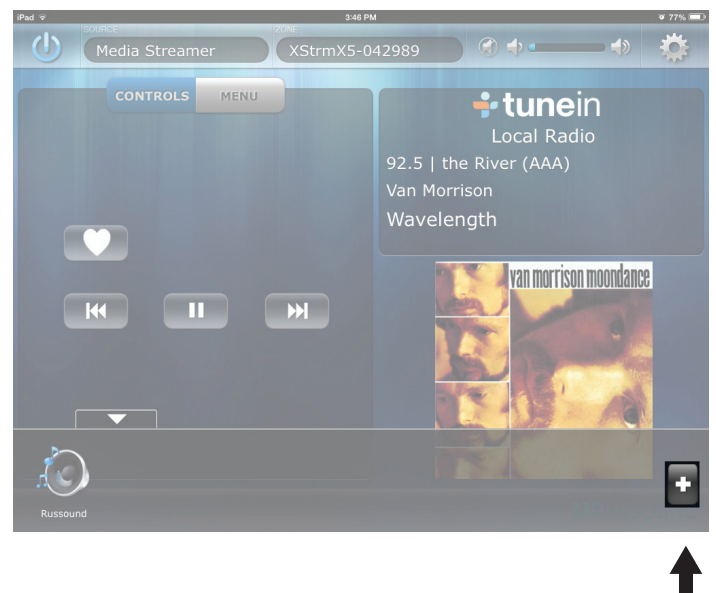

Additional Tips:

You may enter edit mode by pressing and holding the launcher icon for two seconds.

Once in edit mode you may delete or change the icon, icon name, URL, and launcher type.

The Russound Launcher may be disabled within the settings menu. This removes the launcher tab from the main screen.

Once disabled, the launcher bar will not be visible on the screen.