

Lixie Universal Tuner	Version Final	1 / 3
Project Course 2019-2020	Last saved by Jérémy Lesauvage / 10 March 2020	LUT_FINAL_UserGuide.docx

LIXIE UNIVERSAL TUNER

User Guide
Version Final

Project Manager:

Jérémy Lesauvage (jeremy.lesauvage@abo.fi)

Project Members:

Thibault Cormery (thibault.cormery@abo.fi)

Andreas Salminen (andreas.salminen@abo.fi)


Marine Poidevin (marine.poidevin@abo.fi)

Oscar Schauman (cschauma@abo.fi)

Benjamin Heinonen (benjamin.heinonen@abo.fi)

GitHub: <https://github.com/JeremyLesauvage/LUT-Lixie-Universal-Tuner>

1. Part Description

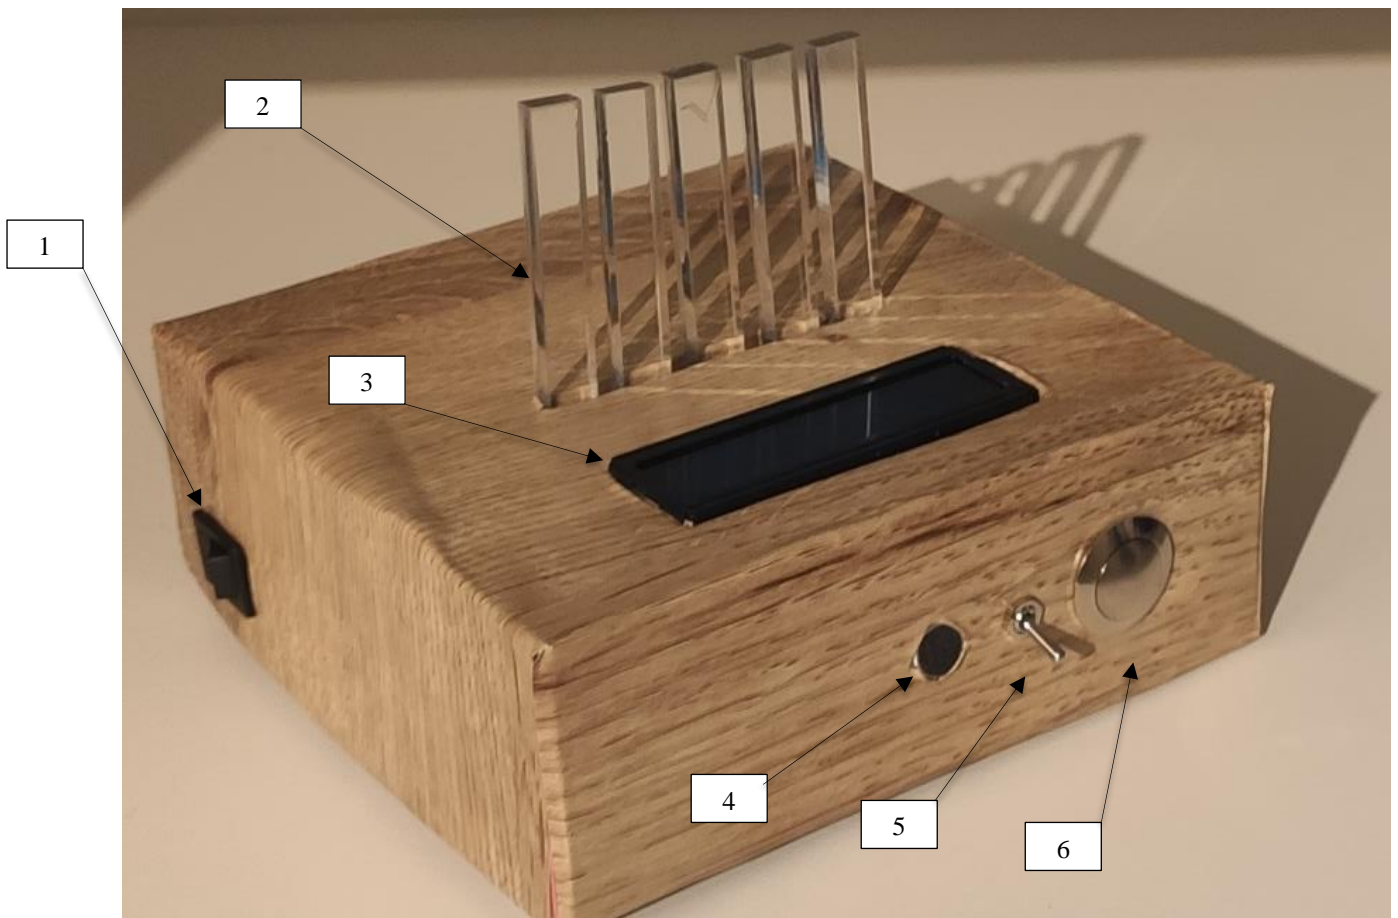

1: **Power switch**, Turn on and off the device.

2: **Lixie display**, show the accuracy of the played note.

3: **LCD screen** display the note played the frequency, the mode and the reference frequency.

4: **The microphone**.

5: **Toggle switch**, select between UP reference frequency DOWN mode.

6: **Push button**, change the selected value.

2. Quick start guide

1 Turn on the device

Press the power switch



2 Verify the Lixie and the LCD light-up

If not check the state of the battery
With no sound or noise the Lixie should be white and the frequency should display 0Hz



3 Play your instrument

You will notice the tuner react to your playing.



4 (optional) change the mode

Put the toggle switch to the DOWN position
Press the push button to select the desired mode



5 (optional) change the reference

Put the toggle switch to the UP position
Press the push button to select the desired reference



6 Turn off the device

Press the power switch

