


EMC Photobooth Overlay Update Guide

To access the admin menu, press the **"X" key** on your keyboard while on the attract screen.

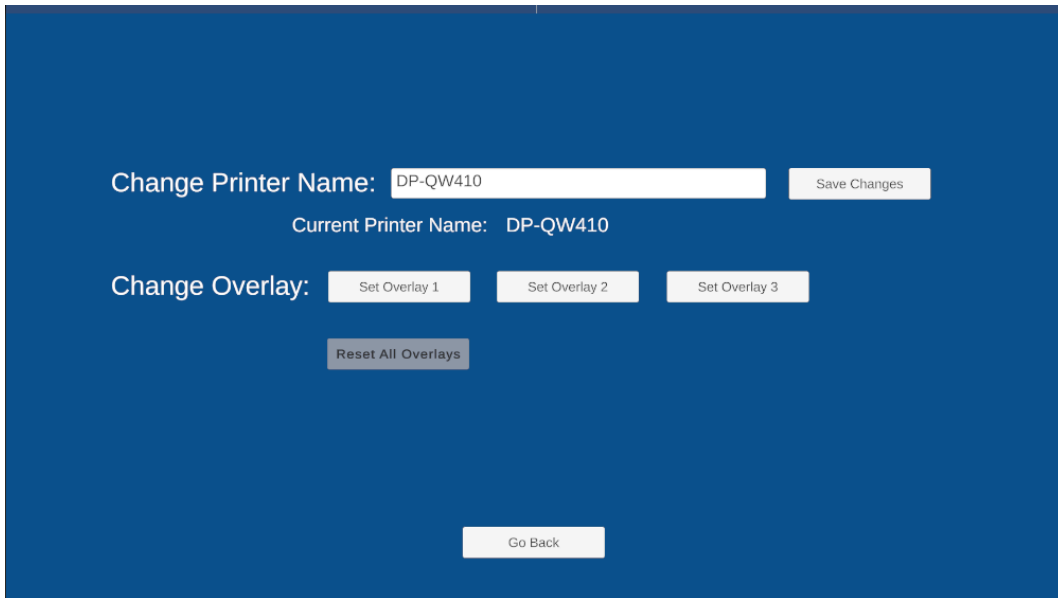

Changing Overlay 1


1. Set Overlay 1:

To update the first overlay, click on the **"Set Overlay 1"** button. This will open a file selection window.

2. Select Your Overlay Image:


Navigate to the folder where your desired overlay image is saved, then double-click the file to select it.

Note: For optimal quality, overlay images should be in PNG format with a resolution of 1080x1080.

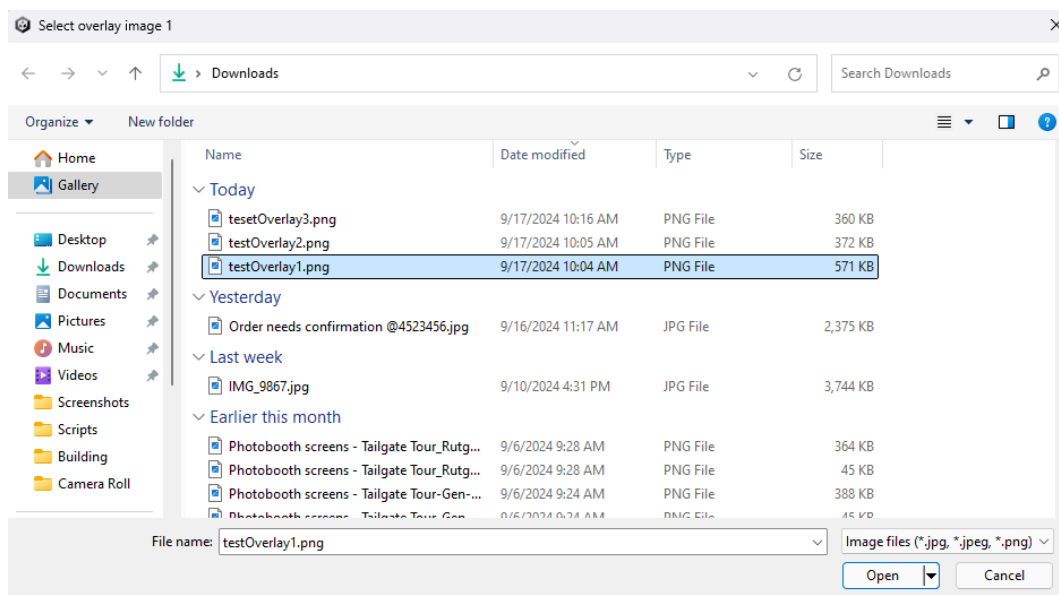

3. Confirmation:

Once your overlay has been successfully updated, a confirmation message will appear.

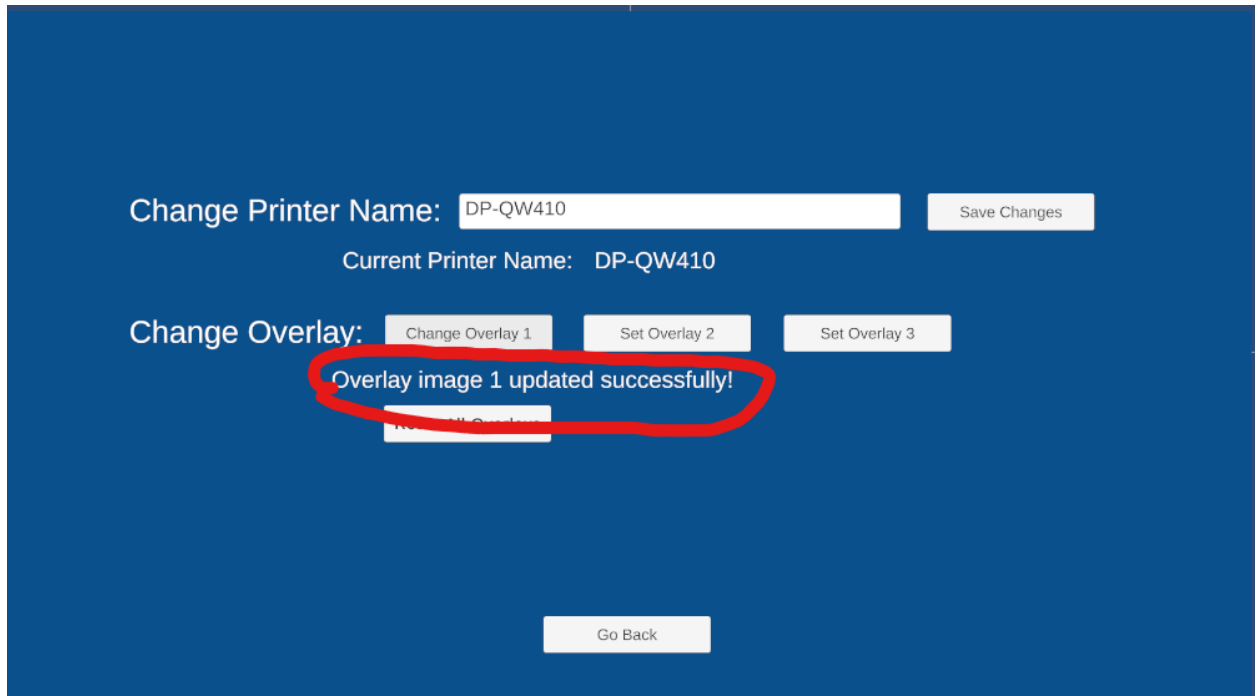

The screenshot shows a web interface for printer configuration on a blue background. At the top, there is a section for "Change Printer Name:" with a text input field containing "DP-QW410" and a "Save Changes" button. Below this, it says "Current Printer Name: DP-QW410". The next section is "Change Overlay:" with three buttons: "Change Overlay 1", "Set Overlay 2", and "Set Overlay 3". A red circle highlights a confirmation message that says "Overlay image 1 updated successfully!". Below this message is a partially visible "Reset All Overlays" button. At the bottom center, there is a "Go Back" button.

Changing Overlays 2 and 3

To update **Overlay 2** or **Overlay 3**, follow the same steps as for Overlay 1, but click the respective "**Set Overlay 2**" or "**Set Overlay 3**" button.

Resetting Overlays

To restore all overlays to their default settings, simply click the "**Reset All Overlays**" button.