


M590 AT COMMAND SETS

V3.0

Copyright Statement

Copyright © 2008 Neoway Tech

All rights reserved by Shenzhen Neoway Technology Co.,Ltd.

The trademark  belongs to Shenzhen Neoway Technology Co.,Ltd.
Other trademarks in this manual belong to their owners.

Clarification

This specification applies to M590/M590E

This specification is for system engineers, research engineers and test engineers.

This specification is, without prior notice, subject to changes and updates as deemed necessary by Neoway to suit enhancements or changes to the module.

All statements, information and suggestions in this manual do not constitute any express or implied guarantees.

Shenzhen Neoway Technology Co.,Ltd can supply technological support.

For queries contact your sales representative or send E-mail to these two mailboxes:

sales@neoway.com.cn

support@neoway.com.cn

Website: www.neoway.com.cn

Revision Record

| Version | Change content | Effective time |
|---------|--|----------------|
| V1.0 | Original version | 200808 |
| V2.0 | Modified the layout style | 200906 |
| V2.1 | Revised version, added AT commands for AT+CEER/AT+CMEE/AT+CSMP/AT+CSDH/AT+CSCB/AT&V/AT&W; | 200907 |
| V2.2 | Revised version, added TCP/IP command sets NOTES | 200908 |
| V2.3 | Revised version, added description for AT command of soft power off | 201006 |
| V2.4 | 1) Revised version, added command switch NOTES 2) Added signal setup instructions | 201012 |
| V2.5 | Revised version 1) Added AT commands of AT+GPRSSTATUS, support external protocol stack for signal lights control; 2) Added the value of the two signal lights State 3, 4: AT+SIGNAL=3:Normal state is blinking, always on after the GPRS link AT+SIGNAL=4:Normal state is OFF, always on after the GPRS link Corresponding module software version is V1.20u | 201101 |
| V2.6 | Revised version, added command switch NOTES | 201104 |
| V2.7 | Revised version, Change PDU message flow, added the instructions of sending data | 201105 |
| V2.8 | Revised version, added AT+XBANDSEL command instruction | 201107 |
| V2.9 | Revised version, added authentication command NOTES | 201108 |
| V3.0 | Revised version, added echo suppression level set: +SETECLVL | 201111 |
| | | |

TABLE OF CONTENTS


| | | |
|----------|--|-----------|
| 1 | GENERAL COMMAND..... | 5 |
| 1.1 | GET SEQUENCE NUMBER: +CGSN..... | 5 |
| 1.2 | GET INTERNATIONAL MOBILE SUBSCRIBER IDENTIFICATION: +CIMI..... | 5 |
| 1.3 | GET SIM CARD IDENTIFICATION: +CCID..... | 6 |
| 1.4 | GET VERSION: +GETVERS..... | 6 |
| 1.5 | REPEAT THE PREVIOUS COMMAND: A/..... | 6 |
| 1.6 | GET THE MODULE'S MODEL: +CGMM..... | 7 |
| 1.7 | GET THE MODULE'S INFORMATION: I..... | 7 |
| 1.8 | ECHO: E..... | 8 |
| 1.9 | DISPLAY THE CURRENT CONFIGURATION: &V..... | 8 |
| 1.10 | SAVE CURRENT CONFIGURATION: &W..... | 9 |
| 2 | MOBILE DEVICES CONTROL AND STATUS REPORT..... | 10 |
| 2.1 | CHECK THE MODULE'S STATUS: +CPAS..... | 10 |
| 2.2 | CHECK NETWORK REGISTRATION STATUS: +CREG..... | 10 |
| 2.3 | POWER OFF: +CPWROFF..... | 11 |
| 2.4 | SET MODULE FUNCTION: +CFUN..... | 11 |
| 2.5 | LOW-POWER SET: +ENPWRSAVE..... | 13 |
| 2.6 | CLOCK: +CCLK..... | 13 |
| 2.7 | SET THE MODULE'S BAUD RATE: +IPR..... | 14 |
| 2.8 | INPUT PIN CODE: +CPIN..... | 14 |
| 2.9 | PIN ENABLE AND CHECK FUNCTION: +CLCK..... | 15 |
| 2.10 | PIN CHANGE THE PASSWORD: +CPWD..... | 16 |
| 2.11 | PARITY CHECK: +ICF..... | 17 |
| 2.12 | MULTIPLEXED MODE: +CMUX..... | 17 |
| 2.13 | EXTENDED ERROR REPORT: +CEER..... | 19 |
| 2.14 | SET ERROR INDICATION MESSAGE: +CMEE..... | 19 |
| 3 | NETWORK SERVICES COMMANDS..... | 21 |
| 3.1 | SIGNAL INTENSITY: +CSQ..... | 21 |
| 3.2 | NETWORK SELECTION: +COPS..... | 21 |
| 3.3 | SET BAND: +XBANDSEL..... | 23 |
| 4 | SMS SERVICE COMMANDS..... | 24 |
| 4.1 | CHOOSE SMS SERVICE: +CSMS..... | 24 |
| 4.2 | PRIMARY SMS STORAGE: +CPMS..... | 24 |
| 4.3 | SET SMS MODE: +CMGF..... | 25 |
| 4.4 | SET TE CHARACTER SETS: +CSCS..... | 26 |
| 4.5 | SET MESSAGE INDICATION FORMAT: +CNMI..... | 26 |
| 4.6 | READ MESSAGE: +CMGR..... | 27 |

| | | |
|----------|--|-----------|
| 4.7 | MESSAGE LIST: +CMGL..... | 29 |
| 4.8 | MESSAGE SENDING: +CMGS..... | 29 |
| 4.9 | WRITE MESSAGE: +CMGW..... | 31 |
| 4.10 | SEND STORED MESSAGE: +CMSS..... | 32 |
| 4.11 | DELETE MESSAGE: +CMGD..... | 32 |
| 4.12 | SERVICE CENTER ADDRESS: +CSCA..... | 33 |
| 4.13 | SET TEXT MODE PARAMETERS: +CSMP..... | 33 |
| 4.14 | DISPLAY TEXT MODE PARAMETER: +CSDH..... | 34 |
| 4.15 | CHOOSE CELL BROADCAST MESSAGE TYPE: +CSCB..... | 35 |
| 5 | TELEPHONE BOOK COMMANDS..... | 36 |
| 5.1 | CHOOSE PHONE BOOK STORAGE: +CPBS..... | 36 |
| 5.2 | READ PHONE BOOK: +CPBR..... | 36 |
| 5.3 | FIND PHONE BOOK: +CPBF..... | 37 |
| 5.4 | WRITE PHONE BOOK: +CPBW..... | 37 |
| 5.5 | GAIN NATIVE NUMBER: +CNUM..... | 38 |
| 6 | SUPPLEMENTARY SERVICE COMMANDS..... | 40 |
| 6.1 | CALL DIVERTING: +CCFC..... | 40 |
| 6.2 | CALL WAITING: +CCWA..... | 40 |
| 6.3 | CALL HOLD AND THREE-WAY-CALL: +CHLD..... | 41 |
| 7 | GPRS COMMANDS..... | 42 |
| 7.1 | SET PDPFORMAT: +CGDCONT..... | 42 |
| 7.2 | SEND USSD DATA: +CUSD..... | 42 |
| 7.3 | DATA MODE AND AT MODE SWITCH SETTINGS: &D2..... | 43 |
| 7.4 | DATA MODE SWITCH TO AT MODE: +++..... | 43 |
| 7.5 | AT MODE SWITCHED TO DATA MODE: O..... | 44 |
| 7.6 | USER AUTHENTICATION: +XGAUTH..... | 44 |
| 8 | TCP/IP AT COMMANDS..... | 46 |
| 8.1 | SELECT INTERNAL OR EXTERNAL PROTOCOL STACK: +XISP..... | 46 |
| 8.2 | ESTABLISH PPP LINK: +XIIC..... | 46 |
| 8.3 | ESTABLISH TCP LINK: +TCPSETUP..... | 47 |
| 8.4 | SEND TCP DATA: +TCPSEND..... | 47 |
| 8.5 | RECEIVE TCP DATA: +TCPRECV..... | 48 |
| 8.6 | CLOSE TCP LINK: +TCPCLOSE..... | 48 |
| 8.7 | ESTABLISH UDP LINK: +UDPSETUP..... | 49 |
| 8.8 | SEND UDP DATA: +UDPSEND..... | 50 |
| 8.9 | RECEIVE UDP DATA: +UDPRECV..... | 50 |
| 8.10 | CLOSE UDP LINK: +UDPCLOSE..... | 51 |
| 8.11 | CHECK TCP/UDP LINK STATUS: +IPSTATUS..... | 51 |
| 8.12 | TCP/IP AT COMMANDS NOTE..... | 52 |
| 9 | DNS (DOMAIN NAME SERVER) COMMANDS..... | 53 |


| | | |
|-----------|---|-----------|
| 9.1 | CHECK IP ADDRESS..... | 53 |
| 9.2 | CHECK OR SET DNS..... | 53 |
| 10 | TCP SERVER AT COMMANDS..... | 54 |
| 10.1 | SETTING THE SERVER TCP LISTENER: +TCPLISTEN..... | 54 |
| 10.2 | CLOSE LISTENING LINKS: +CLOSELISTEN..... | 54 |
| 10.3 | CLOSE THE MASTER STATION LINK: +CLOSECLIENT..... | 55 |
| 10.4 | RECEIVE THE DATA FROM THE MAIN STATION: +TCPRECV(S)..... | 55 |
| 10.5 | THE DATA SENT TO THE MASTER STATION: +TCPSENDS..... | 55 |
| 10.6 | CHECK STATUS OF THE MASTER STATION LINK: +CLIENTSTATUS..... | 56 |
| 10.7 | SET MODULE SIGNAL STATUS: +SIGNAL..... | 56 |
| 10.8 | SETTING EXTERNAL PROTOCOL STACK LIGHT STATUS: +GPRSSTATUS..... | 57 |
| 11 | FTP AT COMMANDS..... | 58 |
| 11.1 | LOGIN FTP SERVER: +FTPLOGIN..... | 58 |
| 11.2 | LOGOUT FTP SERVER: +FTPLOGOUT..... | 59 |
| 11.3 | DOWNLOAD DATA FROM FTP SERVER: +FTPGET..... | 59 |
| 11.4 | UPLOAD DATA TO FTP SERVER: +FTPPUT..... | 60 |
| 11.5 | CHECK FTP STATUS: +FTPSTATUS..... | 61 |
| 12 | APPENDIX (AT COMMAND FLOW CHART OF COMMONLY USED FUNCTIONS): | 62 |
| 12.1 | AT COMMAND FLOW CHART FOR SETTING UP TCP CONNECT..... | 62 |
| 12.2 | AT COMMAND SETTING AND CHECKING FLOW CHART FOR 'SMS FULL'..... | 64 |
| 12.3 | SMS GENERAL AT COMMANDS..... | 65 |
| 12.3.1 | Flow chart for sending text mode SMS..... | 66 |
| 12.3.2 | Flow chart for sending PDU mode SMS..... | 67 |
| 12.4 | LOW CONSUMPTION MODE SETTING..... | 67 |
| 13 | FAQ..... | 68 |

1 General command


1.1 Get Sequence Number: +CGSN

| Description | This command is to get sequence number, known as IMEI (International Mobile Equipment Identity). | |
|---|--|-------------------|
| Format | ● AT+CGSN | |
| Syntax | NULL | |
| Response | <IMEI> OK Or CME ERROR:<error> | |
| Example | AT+CGSN 358511020024166 OK | Read the command. |
| | AT+CGSN CME ERROR: <error> | |
|  NOTE | This code is a 15-digit numeral | |


1.2 Get International Mobile Subscriber Identification: +CIMI

| Description | This command is to get IMSI (International mobile subscriber identification) . | |
|---|---|-------------------------|
| Format | ● AT+CIMI | |
| Syntax | NULL | |
| Response | <IMSI> OK Or CME ERROR:<error> | |
| Example | AT+CIMI 460029202075769 OK | Read the command. |
| | AT+CIMI CME ERROR: <error> | Read the command ERROR. |
|  NOTE | This code contains 15 figures, starting with three-digit MCC and double-digit MNC, to authenticate SIM-card code. | |

1.3 Get SIM card Identification: +CCID


| Description | This command is to get SIM card ICCID. | |
|---|--|-------------------------|
| Format | ● AT+CCID | |
| Syntax | NULL | |
| Response | <ICCID> OK Or CME ERROR:<error> | |
| Example | AT+CCID +CCID: 89860002190810001367 OK | Read the command. |
| | AT+CCID CME ERROR: <error> | Read the command ERROR. |
|  NOTE | ICCID is 20 digits. | |

1.4 Get Version: + getvers


| Description | This command is to get the software version. | |
|---|--|--|
| Format | ● at+getvers | |
| Syntax | NULL | |
| Response | <version> OK Or CME ERROR:<error> | |
| Example | at+getvers 1100_C6C30000_V0120n OK | |
| | at+getvers CME ERROR: <error> | |
|  NOTE | | |

1.5 Repeat the previous command: A/

| Description | This command is to repeat the previous command, except A/ itself. |
|-------------|---|
| Format | ● A/ |


| | | |
|---|--|--|
| Syntax | NULL | |
| Response | See the example below. | |
| Example | AT+CGSN 358511020002311 OK A/ 358511020002311 OK | |
|  NOTE | A / command can't repeat the following command: at+getvers/at+audchannel/at+enpwrsave/ ati /at+cgmm | |

1.6 Get the Module's model: +CGMM


| | | |
|---|--|--|
| Description | This command is to check the model of the module. | |
| Format | ● at+cgmm? | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | at+cgmm? M590 OK | |
|  NOTE | | |

1.7 Get the module's Information: I

| | | |
|--------------------|--|---|
| Description | This command is to check the information of the module, including factory, model and version. | |
| Format | ● ati | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | ati NEOWAY M590 REVISION 01.30e OK | [factory] model version OK |


| | |
|---|--|
|  NOTE | |
|---|--|

1.8 Echo: E


| Description | This command is to enable /disable Echo. | |
|---|--|---|
| Format | ● ATE<n> | |
| Syntax | <n>: only could be 0 or 1. | |
| Response | See the example below. | |
| Example | ATE1 OK AT AT OK | Set Echo Input AT, response echo |
| | ATE0 OK AT OK | Shut down Echo Input AT, no echo |
|  NOTE | Dial-up and then enter into the command mode, it will automatically forbid Echo. ATE is equal to ATE0. | |

1.9 Display the current configuration: &V

| Description | This command is to display the current configuration and storage documents | |
|-------------|--|--|
| Format | ● AT&V | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | AT&V ACTIVE PROFILE: &C1, &D1, &K0, E1, Q0, V1, X0, S00:000, S02:043, S03:013, S04:010, S05:008, S07:255, +CBST:007, 000, 001, +CRLP:061, 061, 048, 006, +CR:000, +CRC:000 STORED PROFILE 0: &C1, &D1, &K3, E1, Q0, V1, X4, S00:000, S02:043, S03:013, S04:010, S05:008, S07:060, +CBST:007, 000, 001, +CRLP:061, 061, 048, 006, +CR:000, +CRC:000 STORED PROFILE 1: &C1, &D1, &K3, E1, Q0, V1, X4, S00:000, S02:043, S03:013, S04:010, S05:008, | |


| | |
|---|---|
| | S07:060, +CBST:007, 000, 001, +CRLP:061, 061, 048, 006, +CR:000, +CRC:000 OK |
|  NOTE | |

1.10 Save current configuration: &W

| Description | This command is to save current valid configuration in the specified file (one of the two storage documents) | |
|---|--|--|
| Format | ● AT&W[<value>] | |
| Syntax | <value>: 0: choose document 0 as configuration storage NVRAM, no need to input 0 1: choose document 1 as configuration storage NVRAM | |
| Response | See the example below. | |
| Example | AT&W OK | Equal to AT&W0 |
| | AT&W1 OK | To store the current configuration in document 1 |
|  NOTE | | |


2 Mobile devices control and status report

2.1 Check the module's status: +CPAS


| Description | This command is to check the module's current operation status. | |
|---|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CPAS | |
| Syntax | <ul style="list-style-type: none"> ● <pas> <p>This value may be:</p> <p>0: ready (the module can implement AT commands)</p> <p>2: unknow (unknown status)</p> <p>3: ringing (the module can implement AT command, it will be ringing status when there is an incoming call)</p> <p>4: call in progress (the module can implement AT command, in call connecting or caller ringing status.)</p> <p>5: asleep (Module is in sleep mode, not ready)</p> | |
| Response | +CPAS: <pas> OK or CME ERROR: <error> | |
| Example | AT+CPAS +CPAS: 0 OK | |
| | AT+CPAS CME ERROR: <error> | |
|  NOTE | | |

2.2 Check network registration status: +CREG

| Description | This command is to check network registration status of the module. | |
|-------------|--|--|
| Format | <ul style="list-style-type: none"> ● AT+CREG=<mode> ● AT+CREG? | |
| Syntax | <ul style="list-style-type: none"> ● <mode> <p>The value may be:</p> <p>0: not allow the network registration to provide result code (default settings)</p> <p>1: allow the network registration to provide result code</p> <p>2: allow the network registration to provide local information (CELLID, LOCALID)</p> <ul style="list-style-type: none"> ● <stat> <p>The value may be:</p> <p>0: not registered, the terminal is not searching new operators</p> | |


| | | |
|---|--|--|
| | 1: has been registered local network 2: the registration is refused 3: not registered, the terminal is searching base stations 4: unknown code 5: has been registered, at roaming status | |
| Response | OK or CME ERROR: <error> +CREG: <mode>,<stat> OK | |
| Example | AT+CREG=1 OK | Register settings allow the network to provide result code. |
| | AT+CREG=1 CME ERROR: <error> | |
| | AT+CREG? +CREG: 0,1 OK | Display the module has been registered on the local network. |
| | | |
|  NOTE | | |

2.3 Power off: +CPWROFF


| Description | This command is to switch off the module. | |
|---|---|--|
| Format | ● AT+CPWROFF | |
| Syntax | NULL | |
| Response | OK or CME ERROR:<error> | |
| Example | AT+CPWROFF OK | |
| | AT+CPWROFF CME ERROR: <error> | |
|  NOTE | This instruction is a soft-shutdown, after executing this instruction, do not for ON / OFF pin to operate, otherwise it will cause the module to power on again lead to fail to shutdown. | |

2.4 Set module function: +CFUN

| Description | This command is to select functions of module by setting <fun>. Only some |
|-------------|---|
|-------------|---|


| | values of <fun> are allowed. | |
|---|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CFUN=<fun> ● AT+CFUN? | |
| Syntax | <p><fun>:</p> <p>Optional functions may be:</p> <p>0: minimum functionality meaning switch off of the MS</p> <p>1: full functionality meaning start up MS (from offline mode)</p> <p>4: disable phone both transmit and receive RF circuits (Airplane mode) (GFS21 line and higher)</p> <p>6: enables the SIM-toolkit interface and fetching of proactive commands by SIM-APPL from the SIM-card</p> <p>7: disables the SIM-toolkit interface and enables fetching of proactive commands by SIM-APPL from the SIM-card</p> <p>8: disable fetching of proactive commands by SIM-APPL from the SIM-card</p> <p>15: silent reset (reset MS without resetting the SIM).</p> <p>16: reset (reset MS with resetting the SIM).</p> | |
| Response | <p>+CFUN: <power_mode>, <STK_mode></p> <ul style="list-style-type: none"> ● <power_mode> <p>The value may be:</p> <p>1: MS is switched on</p> <p>2: invalid mode</p> <p>17: airplane mode</p> <ul style="list-style-type: none"> ● <STK_mode> <p>The value may be:</p> <p>0: inactive state</p> <p>6: enables the SIM-toolkit interface and fetching of proactive commands by SIM-APPL from the SIM-card</p> <p>7: disables the SIM-toolkit interface and enables fetching of proactive commands by SIM-APPL from the SIM-card</p> <p>8: disable fetching of proactive commands by SIM-APPL from the SIM-card</p> | |
| Example | AT+CFUN=1 | |
| | OK | |
| | AT+CFUN=1 | |
| | CME ERROR: <error> | |
| | AT+CFUN? | |
| | +CFUN: 1, 0 | |
| | OK | |
|  NOTE | if the syntaxes +CFUN=0,+CFUN=15 or +CFUN=16 are used, the rest of the command line, placed after that, will be ignored. | |

2.5 Low-power set: +enpwrsave


| Description | This command is to set allow the module to enter into power save mode or not. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● at+enpwrsave=<n> ● at+enpwrsave? | |
| Syntax | <n>: 0: not allow to enter into power save mode 1: allow to enter into power save mode | |
| Response | See the example below. | |
| Example | at+enpwrsave=1 | |
| | OK | |
| | at+enpwrsave=1 | |
| | CME ERROR: <error> | |
| | at+enpwrsave? | |
| | +ENPWRSAVE: 1 | |
| | OK | |
|  NOTE | 1) the values of <n> are not save when power off 2)after enabling power save mode, the external should drive the DTR signal to low Level and all circuits inside the module are allowed to enter power save mode. At this time, the module can be entered into power save mode. | |

2.6 Clock: +CCLK

| Description | This set command sets the real-time clock of the module. | |
|-------------|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CCLK=<time> ● AT+CCLK? | |
| Syntax | < time >: string type value; format is “yy/MM/dd,hh:mm:ss+TZ”, wherein characters indicate year, month, day, hour, minute and second. TZ: 2 digits number indicates the time difference between local time and GMT. This information is optional, only if when the network supports the information could display. | |
| Response | See the example below. | |
| Example | AT+CCLK="08/07/01,14: 54: 01" | |
| | OK | |
| | AT+CCLK="08/07/01,14: 54: 01" | |
| | CME ERROR: <error> | |
| | AT+CCLK? | |
| | +CCLK: "08/07/01,14: 54: 10" | |


| | | |
|---|----|--|
| | OK | |
|  NOTE | | |

2.7 Set the module's baud rate: +IPR

| Description | This command is to set the module's baud rate. | |
|---|---|--|
| Format | <ul style="list-style-type: none"> ● AT+IPR=<baud rate> ● AT+IPR? | |
| Syntax | < baud rate >: (2400,4800,9600,14400,19200,28800,38400,57600,115200,230400,460800) | |
| Response | See the example below. | |
| Example | AT+IPR=115200 | |
| | OK | |
| | AT+IPR=115200 | |
| | CME ERROR: <error> | |
| | AT+IPR? | |
| | +IPR:115200 | |
| | OK | |
|  NOTE | 1、 The default baud rate is 115200; 2、 The baud rate settings could be saved and no need to reset. | |


2.8 Input PIN code: +CPIN

| Description | This command is to check PIN status and input PIN code. | |
|-------------|--|--|
| Format | <ul style="list-style-type: none"> ● AT+CPIN=<pin>[,<newpin>] ● AT+CPIN? | |
| Syntax | <pin>: <newpin> is a string type value. | |
| Response | +CPIN: <code> <ul style="list-style-type: none"> ● < code > This value may be: -READY: no need to input any passwords -SIM PIN: need to input PIN code -SIM PUK: need to input PUK code -SIM PIN2: need to input PIN2 code -SIM PUK2: need to input PUK2 code | |
| Example | AT+COPS=0 | |
| | ERROR | |

| | | |
|---|--|--|
| | AT+CPIN="0933" OK AT+COPS=0 OK | |
| | AT+CPIN? +CPIN:READY OK | |
|  NOTE | Input correct PIN code before using the module, or the module does not work and response ERROR. When inputting PUN or PUK2, it must set up a new PIN code, the new PIN code will replace the old one. | |


2.9 PIN enable and check function: +CLCK

| Description | This command is to lock, unlock and check MT and network device. | |
|-------------|--|--|
| Format | ● AT+CLCK=<fac>,<mode>[,<passwd>[,<class>]] | |
| Syntax | <p>< fac >:</p> <p>“OI”: outgoing international calls; “AI”: all incoming calls; “IR”: all incoming calls when roaming outside local place; “SC”: SIM card; “AO”: outgoing calls; “OX”: outgoing international calls except local place; “AB”: all call services; “AG”: all outgoing call services; “AC”: all incoming call services; “FD”: SIM card fix dialing memory feature; “PS”: PH-SIM (lock phone to SIM-card) ; “PN”: network personalisation; “PU”: network subsystem personalisation; “PP”: service provider personalisation; “PC”: corporate personalization.</p> <p><mode>:</p> <p>0: unlock; 1: lock; 2: check status.</p> <p><passwd>:</p> <p>Password or operation code, string type.</p> <p><class>:</p> <p>1: voice 2: data</p> | |


| | | |
|---|--|--|
| | 4: fax 8: SMS 16: data circuit sync 32: data circuit async 64: dedicated package access 128: dedicated PAD access | |
| Response | See the example below. | |
| Example | AT+CLCK="SC",1,"0933" | |
| | OK | |
| | AT+CLCK="SC",1,"0933" | |
| | CME ERROR: <error> | |
|  NOTE | | |

2.10 PIN change the password: +CPWD

| Description | This command is to modify the lock password of the module. | |
|-------------|--|--|
| Format | ● AT+CPWD=<fac>,<oldpwd>,<newpwd> | |
| Syntax | < fac >: "OI": outgoing international calls; "AI": all incoming calls; "IR": all incoming calls when roaming outside local place; "SC": SIM card; "AO": outgoing calls; "OX": outgoing international calls except local place; "AB": all call services; "AG": all outgoing call services; "AC": all incoming call services; "FD": SIM card fix dialing memory feature; "PS": PH-SIM (lock phone to SIM-card) ; "PN": network personalisation; "PU": network subsystem personalisation; "PP": service provider personalisation; "PC": corporate personalization. <oldpwd>: Old password or operation code, string type. <newpwd>: New password or operation code, string type. | |
| Response | See the example below. | |
| Example | AT+CPWD="SC","0933","0934" | |
| | OK | |
| | AT+CPWD="SC","0933","0934" | |

| | | |
|---|--------------------|--|
| | CME ERROR: <error> | |
|  NOTE | | |


2.11 Parity check: +ICF

| Description | This command is to set the parity of the module. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● AT+ICF=[<format>[,<parity>]] ● AT+ICF? | |
| Syntax | <format>: 0: auto detect 1: 8 data 2 stop 2: 8 data 1 parity 1 stop 3: 8 data 1 stop 4: 7 data 2 stop 5: 7 data 1 parity 1 stop 6: 7 data 1 stop <parity>: 0: odd 1: even 2: mark 3: space | |
| Response | See the example below. | |
| Example | AT+ICF=3,1 OK | |
| | AT+ICF=3,1 CME ERROR: <error> | |
| | AT+ICF? +ICF:3,1 | |
|  NOTE | | |


2.12 Multiplexed mode: +CMUX

| Description | This command is to enable the multiplexed protocol control channel defined by GSM07.10. This AT command set the value of control channel. If there is no value input, the default value will take effect. If not supporting automatic baud rate, the user-specified baud rate will take effect. Return code OK or CME ERROR: <error> will return as old interface baud rate, the new set value will take effect only when OK has been sent. If using +CMUX command when the serial is multiplexed, it will return an error code CME_ERROR: operation |
|-------------|--|
|-------------|--|

| | not allowed. |
|----------|--|
| Format | <ul style="list-style-type: none"> ● AT+CMUX=<mode>[,<subset>[,<port_speed>[,<N1>[,<T1>[,<N2>[,<T2>[,<T3>[,<k>]]]]]]]] |
| Syntax | <p><mode>(multiplexer Transparency Mechanism):</p> <ul style="list-style-type: none"> 0: Basic option 1: Advanced option (not support currently) <p><subset>: this value defined the setting method of the multiplexed control channel. Then a virtual channel will be set, its setting value will be set in accordance with <subset> of control channel before the negotiation that how to set the value of virtual channel.</p> <ul style="list-style-type: none"> 0: UIH frames used only 1: UI frames used only (Not support at present.) 2: I frames used only (Not support at present.) <p>Default value: 0</p> <p><port_speed>: (transfer rate) Not support any longer, it will response 0 all the time when reading the command.</p> <ul style="list-style-type: none"> 1: 9600 bit/s 2: 19200 bit/s 3: 38400 bit/s 4: 57600 bit/s 5: 115200 bit/s 6: 230400 bit/s 7: 1 Mbit/s (default value) <p><N1> (the maximum length of frame)</p> <p>1~32768; at present only support the setting range from 1 to1509.</p> <p>Default value: 31 (if using Advanced option, the default value should be 64)</p> <p><T1> (acknowledgement timer, 10ms per unit)</p> <p>1~255, the default value is 10 (100ms)</p> <p><N2> (the maximum times of re-transfer)</p> <p>0~100, the default value is 3. At present it only supports value 0~5.</p> <p><T2> (response timer for multiplexer control channel, 10ms per unit)</p> <p>2~255,the default value is 30 (300ms)</p> <p>NOTE: T2 must be bigger than T1.</p> <p><T3> (wake up response timer, 's' as the unit)</p> <p>1~255, the default value is 10. Not support at present, response value 0 when reading the command.</p> <p><k> (window size, to the error-recovery options to do Advanced operation)</p> <p>1~7,default value is 2. Not support at present, response value 0 when reading the command.</p> |
| Response | <p>OK</p> <p>or</p> <p>CME ERROR: <error></p> <p>or</p> |


| | | |
|---|--|------------------|
| | +CMUX: <mode>,[<subset>],,<N1>,<T1>,<N2>,<T2>,<T3>[,<k>] | |
| Example | AT+CMUX OK | |
| | AT+CMUX CME ERROR: <error> | |
| | AT+CMUX? +CMUX: 0,0,0,0,0,0,0,0,0 OK | Read the command |
| | | |
|  NOTE | | |

2.13 Extended ERROR report: +CEER

| Description | After Implementing this command, it will return one or more lines of information text <report>. The specific number of rows is determined by the ME manufacturer. | |
|---|---|--|
| Format | ● AT+CEER | |
| Syntax | NULL | |
| Response | +CMER:<report> ● <report>: ME manufacturer supplies extended reports to TA users with the following reasons: The latest call setup failure(initiation or response) or change in calls; The latest call release; The latest GPRS attach failure or PDP Context Activation; The latest GPRS separation or PDP Context dis-activation. | |
| Example | AT+CEER +CEER: "No report available" OK | |
| | AT+CEER +CEER:"CC release",16,"Normal call clearing" OK | |
|  NOTE | Including the line terminator, the information text includes at most 2041 characters. | |


2.14 Set Error indication message: +CMEE

| | |
|--------------------|--|
| Description | This command is to set to disable or enable +CME ERROR: <err> result code |
| Format | <ul style="list-style-type: none"> ● AT+CMEE=[<n>] |

| | | |
|---|--|--|
| | ● AT+CMEE? | |
| Syntax | <n>: Get value: 0: disable result code +CME ERROR:<err>, use ERROR, no need to input 0; 1: enable result code +CME ERROR:<err>, use numeric <err> to get value; 2: enable result code +CME ERROR: <err>, use lengthy <err> to get value. | |
| Response | See the example below. | |
| Example | AT+CMEE= OK | Equal to AT+CMEE=0 ATD ERROR |
| | AT+CMEE=1 OK | ATD +CME ERROR: 3 |
| | AT+CMEE=2 OK | ATD +CME ERROR: operation not allowed |
| | AT+CMEE? +CMEE: 2 OK | |
|  NOTE | When debugging, it is suggested to set AT+CMEE=2. | |

3 Network services commands


3.1 Signal intensity: +CSQ

| Description | This command is to check the receiving signal intensity <rss> and the channel bit error rate <ber> | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|----------------------|--|--------|-----|---|----------|----------------------|---|-----|---------|---|-----|----------|---|-----|---------|---|-----|---------|---|------|-----------|-------|---|----|------------------------------------|
| Format | ● AT+CSQ | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Syntax | NULL | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Response | <p>+CSQ:<rss>,<ber></p> <p>● < rss ></p> <p>The following is the 'signal' (CSQ) to rss:</p> <table><tr><td></td><td>signal</td><td>rss</td></tr><tr><td>0</td><td><4 or 99</td><td><-107 dBm or unknown</td></tr><tr><td>1</td><td><10</td><td><-93dBm</td></tr><tr><td>2</td><td><16</td><td><-71 dBm</td></tr><tr><td>3</td><td><22</td><td><-69dBm</td></tr><tr><td>4</td><td><28</td><td><-57dBm</td></tr><tr><td>5</td><td>>=28</td><td>>=-57 dBm</td></tr></table> <p>● <ber></p> <table><tr><td>0...7</td><td>Reference on the value of RXQUAL in Table GSM 05.08 8.2.4</td></tr><tr><td>99</td><td>Bit error rate can not be measured</td></tr></table> | | | signal | rss | 0 | <4 or 99 | <-107 dBm or unknown | 1 | <10 | <-93dBm | 2 | <16 | <-71 dBm | 3 | <22 | <-69dBm | 4 | <28 | <-57dBm | 5 | >=28 | >=-57 dBm | 0...7 | Reference on the value of RXQUAL in Table GSM 05.08 8.2.4 | 99 | Bit error rate can not be measured |
| | signal | rss | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | <4 or 99 | <-107 dBm or unknown | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | <10 | <-93dBm | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | <16 | <-71 dBm | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | <22 | <-69dBm | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | <28 | <-57dBm | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | >=28 | >=-57 dBm | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0...7 | Reference on the value of RXQUAL in Table GSM 05.08 8.2.4 | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 99 | Bit error rate can not be measured | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Example | AT+CSQ +CSQ:27,0 OK | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | AT+CSQ CME ERROR:<error> | | | | | | | | | | | | | | | | | | | | | | | | | | |
|  NOTE | Formula: RSSI(dBm) = -113 + 2CSQ. | | | | | | | | | | | | | | | | | | | | | | | | | | |


3.2 Network selection: +COPS

| Description | This command is to select and register GSM network | |
|-------------|---|--|
| Format | <ul style="list-style-type: none"> AT+COPS=[<mode>,<format>,<oper>,<AcT>]]] AT+COPS? | |
| Syntax | <p><mode>:</p> <p>To select whether the selection is done automatically or is forced by this command to operator <oper> given in the format <format> and may be:</p> <p>-0: automatic (<per> is ignored)</p> | |

| | | |
|----------|---|---|
| | -1: manual -2: deregister from the network -3: set only <format> -4: manual/ automatic (if manual selection fails, automatic mode is entered) <format> -0: long alphanumeric <oper> (default value) -1: short format alphanumeric <oper> -2: numeric <oper> <oper> string type given in format <format>; this field may be up to 16 characters long for long alphanumeric format, up to 8 characters for short alphanumeric format and 5 characters long for numeric format (MCC/MNC). <AcT> indicates the radio access technology and may be: -0: GSM -1: GSM compact -2: UTRAN | |
| Response | ● <stat> -0: unknown network -1: available network -2: current network -3: forbidden network | |
| Example | AT+COPS=0,0 OK | |
| | AT+COPS=0,2 OK | Set to digital mode |
| | AT+COPS? +COPS: 0,0, "CHINA MOBILE" OK or AT+COPS? +COPS:0,0, " 46000 " OK | Query the network operator China Mobile If it is set to digital mode, then get the number 46000 |
| | AT+COPS? +COPS: 0,0, "CHINA UNICOM" OK or AT+COPS? +COPS:0,0, " 46001 " OK | Query the network operator China Unicom If it is set to digital mode, then get the number 46000 |


| | |
|---|--|
|  NOTE | <p>1: in the read syntax the parameter <AcT> is displayed only if UMTS is supported in the terminal.</p> <p>2: if GSM/UMTS dual mode is selected and manual mode is selected, the <AcT> parameter is used to indicate the access technology for the manual attach procedure.</p> <p>3: in case of automatic mode, the <AcT> parameter will be ignored.</p> |
|---|--|

3.3 Set Band: +XBANDSEL

| Description | Set GPRS module band | |
|-------------|---|--|
| Format | AT+XBANDSEL=<Band900M>[,<Band1800M>] AT+XBANDSEL? | |
| Syntax | <Band900M>: 900M band,the value is 900 <Band1800M>: 1800M band, the value is 1800 | |
| Response | | |
| Example | AT+XBANDSEL=900 OK | Forcibly set to 900M |
| | AT+XBANDSEL? +XBANDSEL: 900 OK | Query frequency |
| | AT+XBANDSEL=1800 OK | Forcibly set to 1800M |
| | AT+XBANDSEL=900,1800 OK | Set to the default mode, 900M and 1800M automatic switching mode |
| | AT+XBANDSEL? +XBANDSEL: 900,1800 OK | Query frequency |
| | <div data-bbox="161 1711 359 1892">  NOTE </div> <div data-bbox="359 1711 1420 1892"> <p>1) After setting this instruction,web registration will be canceled, then needed to re-register by setting the AT+COPS=0,0</p> <p>2) Slightly longer response time of AT+COPS=0,0</p> </div> | |


4 SMS service commands

4.1 Choose SMS service: +CSMS


| Description | This command is to support SMS, include: sending (SMS-MO) 、 receiving (SMS-MT) 、 cell broadcast(SMS-CB) | |
|---|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CSMS=<service> ● AT+CSMS? | |
| Syntax | <service>: 0: GSM03.40 and GSM03.41; SMS related AT commands support GSM07.05 Phase 2; 1: GSM03.40 and GSM03.41; SMS related AT commands support GSM07.05 Phase 2+ <mt>,<mo>,<bm>: 0: not support 1: support | |
| Response | See the example below. | |
| Example | AT+CSMS=1 +CSMS:1,1,1 OK or CME ERROR: <error> | +CSMS:<mt>,<mo>,<bm> OK or CMS ERROR: <error> |
| | AT+CSMS? +CSMS:1,1,1,1 OK | +CSMS:<service>,<mt>,<mo>,<bm> OK |
|  NOTE | | |

4.2 Primary SMS storage: +CPMS


| Description | This command is to choose primary message storage. |
|-------------|--|
| Format | <ul style="list-style-type: none"> ● AT+CPMS=<mem1>[,<mem2>,<mem3>]] ● AT+CPMS? |
| Syntax | <mem1>: "SM"SIM card is used to read and delete message storage. <mem2>: "SM"SIM card is used to write and send message storage. <mem3>: "SM" SIM card message storage used when SM is not set to save to PC. <used>: used numbers. <total>: total storage capacity numbers. |
| Response | AT+CPMS: <used1>,<total1>,<used2>,<total2>,<used 3>,<total3> |

| | | |
|---|--|--|
| | OK or CMS ERROR: <error> +CPMS: <mem1>,<used1>,total1>,<mem2>,<used2>,<total2>,<mem3>,<used3>,<total3> OK or CMS ERROR: <error> | |
| Example | AT+CPMS="SM","SM","BM" +CPMS:49,50,49,50,50,50 OK | |
| | AT+CPMS="SM","SM","BM" CME ERROR: <error> | |
| | AT+CPMS? +CPMS:"SM",49,50,"SM",49,50,"BM",0,5 OK | |
| | | |
|  NOTE | | |

4.3 Set SMS mode: +CMGF


| Description | This command is to set SMS input mode. | |
|---|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CMGF=[<mode>] ● AT+ CMGF? | |
| Syntax | <mode>: 0: PDU mode 1: text mode | |
| Response | See the example below. | |
| Example | AT+CMGF=1 OK | |
| | AT+CMGF=1 CME ERROR: <error> | |
| | AT+ CMGF? +CMGF:0 OK | |
| | | |
|  NOTE | If sending PDU SMS, the code should be set to UCS2; if sending text SMS, the code should be set to GSM. | |

4.4 Set TE character sets: +CSCS

| Description | This command is to set TE character set. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● AT+CSCS=<chset> ● AT+ CSCS? | |
| Syntax | <p>< chset >:</p> <ol style="list-style-type: none"> 1、“GSM”: GSM default alphabet (GSM03.38.6.2.1) 2、“HEX”: character strings consist only of hexadecimal numbers from 00 to FF; e.g. "032FE6" equals three 8-bit characters with decimal values 3, 47 and 230; no conversions to the original MT character set shall be done 3、“IRA”: international reference alphabet.(ITU-T T.50). 4、“PCCP437”: PC character set Code Page 437 5、“8859-1”: ISO 8859 Latin 1 character set 6、“UCS2”: 16-bit universal multiple-octet coded character set (USO/IEC10646); UCS2 character strings are converted to hexadecimal numbers from 0000 to FFFF. Only the strings found in quotation marks are UCS2 coded, the rest of commands or responses, remains in IRA alphabet. | |
| Response | See the example below. | |
| Example | AT+CSCS="GSM" | |
| | OK | |
| | AT+CSCS="GSM" | |
| | CME ERROR: <error> | |
| | AT+ CSCS? | |
| | +CSCS: "GSM" | |
| | OK | |
|  NOTE | | |


4.5 Set message indication Format: + CNMI

| Description | This command is to set how to inform the user after receiving new message from the network. | |
|-------------|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]] ● AT+CNMI? | |
| Syntax | <p><mode>: set indication mode of sending to subscriber after receiving short message</p> <p>0: message indication mode cashed in module, if TA has been full, code can be deposited other place or brush off the oldest code and replace it by the latest receiving code.</p> <p>1: under On-line State, brush off deposited message indication code and reject new indication code. In other conditions, display the code on terminal equipment</p> | |


| | | |
|---|--|---|
| | <p>directly.</p> <p>2: under On-line State, message indication code is cached in module. When processing released, output indication code through serial port. Under its state, display indication code on terminal equipment directly.</p> <p><mt>: set new message indication code mode, default value is 0.</p> <p>0: not sending new message indication code.</p> <p>1: new message indication code mode is +CMTI: "MT", <index>, the message content stored and don't display directly.</p> <p>2: new message indication code mode is +CMT: <oa>, <scts>, <tooa>, <lang>, <encod>, <priority> [<cbn>], <length> <CR> <LF> <data>, message content display directly but not stored.</p> <p><bm>: set new cell broadcast indication code mode, default value is 1.</p> <p>0: not sending new cell broadcast indication information, not stored.</p> <p>1: new cell broadcast indication code is +CBMI: "BC", <index>, cell broadcast is stored.</p> <p>2: new cell broadcast indication code mode is +CBM: <oa>, [<alphan>], <scts> [<tooa>, <length>] <CR> <LF> <data>, cell broadcast content display directly but not stored.</p> <p><ds>: message sending condition report, default value is 1.</p> <p>0: no message sending condition report</p> <p>1: message sending condition report code mode is +CDS: <fo>, <mr>, [<ra>], [<tora>], <scts>, <dt>, <st> (text mode), cell broadcast content display directly but not stored.</p> <p><bfr>: default value is 0.</p> <p>0: When <mode>=1 or 3, the code this command defined which is stored in TA will be sent to TE, the module will return to OK before processing the code.</p> <p>1: when <mode>=1 or 3, the code this command defined which is stored in TA will be cleared.</p> | |
| Response | See the example below. | |
| Example | AT+CNMI=2,1,0,0,0 OK | |
| | AT+CNMI=1,1,0,0,0 CME ERROR: <error> | |
| | AT+CNMI? +CNMI:2,1,0,0,0 OK | +CNMI=<mode>,<mt>,<bm>,<ds>,<bfr> OK |
| | | |
|  NOTE | Suggested to set to +CNMI: 2,1,0,0,0 or +CNMI: 2,2,0,0,0. | |

4.6 Read message: +CMGR

| Description | This command is to read message in current storage (need to set current storage by AT+CPMS in advance) | |
|-------------|---|--|
| Format | ● AT+CMGR=<index> | |
| Syntax | <index>: Get value in range of 0~400. | |
| Response | <p>Return format:</p> <p>Terminal adapter will return the records numbered "index" short message stored in the memory mem1.</p> <p>➤ If you select text mode (+ CMGF =1), returned the following format: +CMGR :<stat>,<oa>,<[alpha]>,<scts>,<tooa>,<fo>,<pid>,<dcsc>,<sca>,<tosca>,<length>]<CR><LF> <data> (Used to read the received message) +CMGR :<stat>,<da>,<[alpha]>,<toda>,<fo>,<pid>,<dcsc>,<[vp]>,<sca>,<tosca>,<length>]<CR><LF> <data> (Used to read the send message)</p> <p>➤ If you select PDU mode (+ CMGF =0), returned the following format: +CMGR: <stat>,<[alpha]>,<lenth>,<CR>,<LF>,<pdu> OK - Error will be prompted to: +CMS ERROR:<err></p> <p>Specific parameters have the following meanings: <alpha>: corresponding name of <da> or <oa> with terminal equipment. <stat>: Memory in the short message status. <oa>: SMS source number string. <da>: SMS destination address string. <scts>: Short Message Service Center time string. <lenth>: Text mode instructions <data> body length; When the PDU mode indicates the number of bytes PDU. <pdu>: ME/TA hexadecimal value. <stat>: 0 in PDU mode or "REC UNREAD" in text mode: received unread SMS 1 in PDU mode or "REC READ" in text mode: received read SMS 2 in PDU mode or "STO UNSENT" in text mode: stored unsent SMS 3 in PDU mode or "STO SENT" in text mode: stored sent SMS 4 in PDU mode or "ALL" in text mode: all SMS's</p> | |
| Example | AT+CMGR=3 +CMGR:0,,154 0891683108705505F00405A10180F60008807062903430238A5C0A65 6C768451687403901A5BA262 37FF1A537365E58D7779EF5206554657CE201C59658FD0793C54C1 300159658FD06F1451FA5B63201D727960E051516362FF014E3A59 658FD052A06CB9FF010068007400740070003A002F002F006A0066 002E006300680069006E0061006D006F00620069006C0065002E0063 006F006D30024E2D56FD79FB52A8 | |


| | | |
|---|---|--|
| | OK | |
| | AT+CMGR=3 | |
| | CMS ERROR: <error> | |
|  NOTE | When the coding method is UCS2 and reading the message, it will display in hexadecimal; when the coding method is GSM, the messages with the contents of letters or numbers could be directly read. | |

4.7 Message list: +CMGL

| Description | This command is to read a certain type of short messages in the storage. The message will be read in the current storage selected by +CPMS command. | |
|---|--|--|
| Format | ● AT+CMGL[=<stat>] | |
| Syntax | <stat>: 0 ("REC UNREAD"): received unread SMS 1 ("REC READ") : received read SMS 2 ("STO UNSENT") : stored unsent SMS 3 ("STO SENT") : stored sent SMS 4 ("ALL") : all SMS | |
| Response | 1) Text mode: +CMGL:<index>,<stat>,<da/oa>,<[alpha]>,<[scts]>,<[tooa/toda>,<length> <CR><LF><data><CR><LF> +CMGL:<index>,<stat>,<da/oa>,<[alpha]>,<[scts]>,<[tooa/toda>,<length> <CR><LF><data> [...] (Received / sent SMS list) OK 2) PDU mode: +CMGL:<index>,<stat>,<[alpha]>,<length><CR><LF><pdu> | |
| Example | AT+CMGL="ALL" +CMGL: 1,"RECREAD","10086","", "08/07/26,09:43:03+50" 5C0A656C768451687403901A5BA26237FF1A537365E58 D7779EF5206554657CE201C59658FD0793C54C1300159 658FD06F1451FA5B63201D727960E051516362FF014E3 A59658FD052A06CB9FF010068007400740070003A002F 002F006A0066002E006300680069006E0061006D006F00 620069006C0065002E0063006F006D30024E2D56FD79F B52A8 OK | |
|  NOTE | The function of AT+CMGL="ALL" and AT+CMGL=4 are the same. | |


4.8 Message sending: +CMGS

| Description | This command is to send message from the module to network, the network will response reference value <mr> to the module after sending successfully. | |
|-------------|---|--------------------|
| Format | <ul style="list-style-type: none"> ● Command syntax(text mode): AT+CMGS=<da><CR><text><ctrl-Z/ESC> ● Command syntax (PDU mode): AT +CMGS=<length><CR><pdu><ctrl-Z/ESC> | |
| Syntax | <p><da>: Send message to target number in text mode</p> <p><text>: Message content in text mode</p> <p><length>: The length of message content digits in PDU mode.</p> <p><mr>: Storage location</p> <p><CR> : End character.</p> <p><ctrl-Z> : Indicate the end of the message input.</p> <p><ESC> : Give up to input message.</p> | |
| Response | +CMGS: <mr> OK or CMS ERROR: <error> | |
| Example | AT+CMGS="0171112233"<CR> "This is the text"<ctrl-Z> +CMGS:248 OK | Text mode(+CMGF=1) |
| | AT+CMGS="0171112233"<CR> "This is the text"<ctrl-Z> CMS ERROR: <error> | Text mode(+CMGF=1) |
| | AT+CMGS=41<CR> > 0891683108705505F001000B815118585050F400081C6DF157 335E02670965B979D16280002D00470050005200536A215757< Ctrl+Z> > +CMGS: 7 OK | PDU mode (+CMGF=0) |
| | AT+CMGS=31<CR> > 0891683108705505F001000B813124248536F30008120040002 6002A535A53D153A653C1532052C7<Ctrl+Z> | PDU mode (+CMGF=0) |


| | | |
|---|--------------------|--|
| | CMS ERROR: <error> | |
|  NOTE | | |

4.9 Write message: +CMGW

| Description | This command is to input messages to the storage, response location information <index> after saving correctly. | |
|-------------|--|---------------------|
| Format | <ul style="list-style-type: none"> Command syntax(text mode): AT+CMGW=<da><CR><text><ctrl-Z/ESC> Command syntax(PDU mode): AT +CMGS=<length><CR><pdu><ctrl-Z/ESC> | |
| Syntax | <p><da>: Send message to target number in text mode.</p> <p><text>: Message content in text mode</p> <p><length>: The length of message content digits in PDU mode.</p> <p><mr>: Storage location</p> <p><CR> : End character.</p> <p><ctrl-Z> : Indicate the end of the message input.</p> <p><ESC> : Give up to input message.</p> | |
| Response | +CMGW:<index> OK or +CMS ERROR:<err> | |
| Example | AT+CMGW="091137880"<CR> "This is the text"<Ctrl-Z> +CMGW:15 OK | Text mode (+CMGF=1) |
| | AT+CMGW="091137880"<CR> "This is the text"<Ctrl-Z> +CMS ERROR: <err> | Text mode (+CMGF=1) |
| | AT+CMGW=31,<CR>0891683108705505F001000B813124248536F300081200400026002A535A53D153A653C1532052C7<Ctrl- Z> +CMGW:1 | PDU mode (+CMGF=0) |


| | | |
|---|---|--------------------|
| | OK | |
| | AT+CMGW=31,<CR>0891683108705505F001000 B813124248536F300081200400026002A535A53D 153A653C1532052C7<Ctrl- Z> +CMS ERROR: <err> | PDU mode (+CMGF=0) |
|  NOTE | Index value from 1 to n are used for 'ME' and from n+1 to n+m are used for 'SM'. | |

4.10 Send stored message: +CMSS


| | | |
|---|--|----------------------------------|
| Description | This command is to send messages with location value <index> from the memory storage (SMS-SUBMIT). Reference value <mr> is returned to the terminal after sending the message successfully. | |
| Format | ● AT+CMSS=<index> | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | AT+CMSS=2 +CMSS:<mr> OK | Send messages stored in Memory 2 |
| | AT+CMSS=2 CME ERROR: <err> | Send messages stored in Memory 2 |
|  NOTE | | |

4.11 Delete message: +CMGD

| | | |
|--------------------|---|--------------------------|
| Description | This command is to delete messages from the current storage. | |
| Format | ● AT+CMGD=<index> [,<delflag>] | |
| Syntax | <index>: Record number of stored message. <delflag>: Delete flag 0: delete the message specified record number. 1: delete all read message 2: delete all read and sent message 3: delete all read, sent and unsent message 4: delete all messages | |
| Response | See the example below. | |
| Example | AT+CMGD=3 OK | Delete the third message |
| | AT+CMGD=3 | Delete the third message |


| | | |
|---|--|--|
| | CME ERROR: <error> | |
|  NOTE | If this command catches <delflag> parameter, parameter <index> is insignificant, subject to parameter <delflag>. | |

4.12 Service center address: +CSCA

| Description | This command is to set the service center address. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● AT+CSCA=<sca>[,<tosca>] ● AT+CSCA? | |
| Syntax | <sca>: Service center address. <tosca>: Service center address Format. 129 indicates normal number type, 145 indicates international number type (automatically add "+" before the number). | |
| Response | See the example below. | |
| Example | AT+CSCA="0170111000",129 | |
| | OK | |
| | AT+CSCA="0170111000",129 | |
| | CME ERROR: <error> | |
| | AT+CSCA? | |
| | +CSCA:"0170111000",129 | |
| | OK | |
|  NOTE | General operators are pre-configured the SIM card message center number, do not need to set | |


4.13 Set Text Mode Parameters: +CSMP

| Description | In text mode, select the additional parameter values; set the validity from the moment when received the message from SMSC or definite the absolute time of the termination fo the validity. | | | | | | |
|-------------|---|-------|----------------|-------|------------------|---------|-----------------------|
| Format | <ul style="list-style-type: none">● AT+CSMP=[<fo>[,<vp>[,<pid>[,<dcs>]]]]● AT+CSMP? | | | | | | |
| Syntax | <p><fo>:</p> <p>Depends on the command or result code: the first 8 digits of GSM 03.40 SMS-DELIVER; SMS-SUBMIT (default value is 17); or use integer type SMS-COMMAND (default value is 2).</p> <p><vp>:</p> <table><tr><th>value</th><th>Effective time</th></tr><tr><td>0-143</td><td>(vp+1)*5 minutes</td></tr><tr><td>144-167</td><td>12 hours+((vp-143)*30</td></tr></table> | value | Effective time | 0-143 | (vp+1)*5 minutes | 144-167 | 12 hours+((vp-143)*30 |
| value | Effective time | | | | | | |
| 0-143 | (vp+1)*5 minutes | | | | | | |
| 144-167 | 12 hours+((vp-143)*30 | | | | | | |


| | | | | | | | | |
|---|--|--|----------|---------|----------------|---------|-----------------|--|
| | <table><tr><td></td><td>minutes)</td></tr><tr><td>168-196</td><td>(vp-166)*1 day</td></tr><tr><td>197-255</td><td>(vp-192)*1 week</td></tr></table> <p><pid>: integer type TP-protocol-ID (default value is 0).</p> <p><dc>: integer type cell broadcasting data coding program 0.</p> | | minutes) | 168-196 | (vp-166)*1 day | 197-255 | (vp-192)*1 week | |
| | minutes) | | | | | | | |
| 168-196 | (vp-166)*1 day | | | | | | | |
| 197-255 | (vp-192)*1 week | | | | | | | |
| Response | See the example below. | | | | | | | |
| Example | AT+CSMP=17,167,0,0 | | | | | | | |
| | OK | | | | | | | |
| | AT+CSMP? +CSMP:17,167,0,0 | | | | | | | |
| | OK | | | | | | | |
|  NOTE | | | | | | | | |

4.14 Display text mode parameter: +CSDH

| Description | This command is to set to display detailed head message or not in result code under text mode | |
|-------------|--|---|
| Format | <ul style="list-style-type: none"> ● AT+CSDH=[<show>] ● AT+CSDH? | |
| Syntax | <p><show>: Get value: 0: not display <sca>、<tosca>、<fo>、<vp>、<pid> and <dc> (get value from the command +CSCA and +CSMP) in commands +CMT,+CMGL,+CMGR, neither display <length>、<toda> or <too> in the result code of SMS-DELIVER and SMS-SUBMIT; to SMS-COMMAND in the result code of +CMGR, not display <pid>、<mn>、<da>、<toda>、<length> <cdata>: no need to input value 0. 1: display these values in result code.</p> | |
| Response | See the example below. | |
| Example | AT+CSDH=0 OK | Equal to AT+CSDH=0 AT+CMGR=14 +CMGR: "REC READ","+86134309815 04","","09/07/17,14:49:00+50" 7B5675655FAE5C0F65F65019 OK |
| | AT+CSDH=1 OK | AT+CMGR=14 +CMGR: "REC |


| | | |
|---|-------------------------------|--|
| | | READ","+86134309815 04","",09/07/17,14:49:00+50",145,4,0 ,8","+8613800755500",145,12 7B5675655FAE5C0F65F65019 OK |
| | AT+CSDH? +CSDH:0 OK | |
|  NOTE | | |

4.15 Choose cell broadcast message type: +CSCB

| Description | This command is to set CBM type ME received | |
|---|---|--|
| Format | ● AT+CSCB=[<mode>[,<mids>[,<dcss>]]] | |
| Syntax | <mode>: Get value: 0: accept the message type specified by <mids> and <dcss>, no need to input value 0; 1: not accept the message type specified by <mids> and <dcss>. <mids>: Character type (eg: 0,1,5,320~478,922) ; the combination of all possible CBM message ID (please reference <mid>). <dcss>: Character type (eg: 0~3,5) ; the combination of all possible CBM data coding program (please reference <dc>) (the default value is empty character string). | |
| Response | See the example below. | |
| Example | AT+CSCB=0,"1,5,10-11,40","" | |
| | OK | |
| | AT+CSCB? +CSCB:0,"1,5,10-11,40","" OK | |
|  NOTE | If <mode>=0 and <mids> is an empty character string, it could not accept CB SMS. | |


5 TELEPHONE BOOK COMMANDS

5.1 CHOOSE PHONE BOOK STORAGE:+CPBS


| Description | This command is to choose phone book storage. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● AT+CPBS=<storage> ● AT+CPBS? | |
| Syntax | <storage>: "SM":SIM card storage "FD":SIM card fixed phone book storage "LD":SIM card the last dial-out number "ON":locate number storage | |
| Response | +CPBS:<storage>[,<used>,<total>]<mode> <used> The used capability which in choosed storage <total> The total capability of choosed storage | |
| Example | AT+CPBS="SM" | Choosethe the phone book storage is |
| | OK | "SM" |
| | AT+CPBS="SM" | Choose the phone book storage is |
| | CME ERROR:<error> | "SM" |
| | AT+CPBS? | Check the phone book storage and total capbility |
| | +CPBS:"SM",71,200 | |
| | OK | |
|  NOTE | | |

5.2 READ PHONE BOOK:+CPBR

| Description | This command is to read the information of phone book. | |
|-------------|--|--|
| Format | ● AT+CPBR=<index 1>[,<index 2>] | |
| Syntax | <index 1>: Integer type,phone book record nember <index 2>: Integer type,phone book record nember | |
| Response | [+CPBR:<index 1>,<number>,<type>,<text><CR> +CPBR:<index 2>,<number>,<type>,<text>] <number>: Character string type, phone number. <type>: | |


| | | |
|---|---|--|
| | Integer type, phone number type. <text>: Character string type, names. <nlength>: Integer type, indicate the maximum length of phone number. <tlength>: Integer, indicate names and maximum length. | |
| Example | AT+CPBR=1,3 +CPBR:1,"091137880",129,"Comneon" +CPBR:2,"09113788223",129,"MMI" +CPBR:3""09113788328",129,"Test-ro" OK | Read the phone book record of number 1/2/3 |
| | AT+CPBR=1,3 CME ERROR:<error> | Read the phone book record of numbered 1/2/3 |
|  NOTE | | |

5.3 FIND PHONE BOOK:+CPBF

| Description | This command is to find the information of phone book. | |
|---|---|--|
| Format | <ul style="list-style-type: none"> AT+CPBF=<findtext> | |
| Syntax | <findtext>: Character string type, indicate names. | |
| Response | +CPBF:<index 1>,<number>,<type>,<text> <ul style="list-style-type: none"> <nlength> Integer type, indicate the maximum length of phone number. <tlength> Integer, indicate names and maximum length. | |
| Example | AT+CPBF="Comneon" +CPBF:1,"091137880",129,"Comneon" OK | Read the phone book information of named Comneon |
| | AT+CPBF="Comneon" CME ERROR:<error> | Read the phone book information of named Comneon |
|  NOTE | | |
| | AT+CPBF=""It will shows all the phone book record of current storage | |


5.4 WRITE PHONE BOOK:+CPBW

| Description | This command is to write the information in phone book. | |
|-------------|--|--|
| Format | <ul style="list-style-type: none"> AT+CPBW=<index>,<number>,<type>,<text> | |
| Syntax | <index>: | |

| | | |
|---|--|--|
| | <p>Integer type, the numbers which phone book records.</p> <p><number>:</p> <p>Character string type, phone numbers.</p> <p><type>:</p> <p>Integer type, the type of phone numbers.</p> <p><text>:</p> <p>Character string, names.</p> | |
| Response | <p>+CPBR:(list if supported <index>s),[<nlength>],(list of supported<type>s),[<tlength>]</p> <p><nlength>:</p> <p>Integer type, indicate the maximum length of phone numbers.</p> <p><tlength>:</p> <p>Integer, indicate names and maximum length.</p> | |
| Example | AT+CPBW=1,"091137880",129,"Comneo n" OK | Write phone book record of named Comneon |
| | AT+CPBW=1,"091137880",129,"Comneo n" CME ERROR:<error> | Write phone book record of named Comneon |
|  NOTE | Need to pre-set TE character set, or the name of input will fail. | |


5.5 GAIN NATIVE NUMBER:+CNUM

| Description | This command is to find the information of phone book. | |
|-------------|--|------------------------------------|
| Format | ● AT+CNUM | |
| Syntax | <p><alpha>:it can choose the character string which is relate to <number>,+CSCS set the available character set</p> <p><number>:character string type of phone number,number type ensured by<type></p> <p><type>:number type(129 or 145)</p> | |
| Response | <p>+CNUM:[<alpha>],<number 1>,<type 1></p> <p>OK</p> <p>Or</p> <p>CME ERROR:<error></p> | |
| Example | AT+CPBS="ON" OK | Choose phone book storage is ON |
| | AT+CPBS="ON" CME ERROR:<error> | |
| | AT+CPBW=1,"1111111111",129,"CCH" OK | Write phone record in "ON" storage |
| | AT+CPBW=1,"1111111111",129,"CCH" CEM ERROR:<error> | |

| | | |
|---|---|---------------------|
| | AT+CNUM +CNUM:"CCH","11111111111",129 OK | Check native number |
|  NOTE | <p>1、 This command is to check mobile user international number (ISDN).</p> <p>2、 If there are various international number on terminals,each type international number will shows in different lines.</p> <p>3、 Native number need to through AT+CPBS="ON";AT+CPBW connmad write in SIM card, then reads by AT+CNUM.</p> | |


6 SUPPLEMENTARY SERVICE COMMANDS

6.1 CALL DIVERTING:+CCFC


| Description | This command is to set confition and number for call diverting. | |
|---|--|---|
| Format | ● AT+CCFC=<findtext> | |
| Syntax | <reason>: 0: Unconditional divert (CFU) 1: When busy divert (CFB) 2: Not reply divert (CFNA) 3: Not reachable 4: All call diverting 5: All conditional call diverting <mode>: 0: Forbid 1: Enable 2: Check status 3: Registere 4: Delete <number> Phone number | |
| Response | See the example below. | |
| Example | AT+CCFC=0,"123456" OK | Set unconditional divert,divert to number 123456. |
|  NOTE | SIM card need to activate supplementary service. | |

6.2 CALL WAITING:+CCWA

| Description | This command is to control call waiting. | |
|-------------|--|--|
| Format | ● AT+CCWA=<n>,<mode> ● AT+CCWA? | |
| Syntax | <n>: The third calling,if indicate+CCWA:return code 0: Not indicate 1: Indicate <mode>: Call waiting forbid/enable 0: Forbid 1: Enable 2: Check status | |


| | | |
|---|--|---|
| Response | See the example below. | |
| Example | AT+CCWA=1,1 OK | Set call waiting, indicate +CCWA: return code |
| | AT+CCWA? +CCWA:0 OK | Currently n values 0 |
|  NOTE | SIM card need to activate supplementary service. | |

6.3 CALL HOLD and THREE-WAY-CALL:+CHLD

| Description | This command is to realize call hold and three-way-call. | |
|---|---|--|
| Format | ● AT+CHLD=<n> | |
| Syntax | <n>: 0: Release all the holded call or set a waited call to UDUB(User Deteermined User Busy) 1: Release all the active call and reveive a holded or waited call; 2: Hold all the active call and receive a holded or waited call; 3: Add a holded call to three-way-call. | |
| Response | See the example below. | |
| Example | AT+CHLD=0 OK | |
|  NOTE | When releasing calls, AT + CHLD = 1 only release the currently active call, ATH release all calls. SIM card need to open additional business. | |


7 GPRS commands

7.1 Set PDPFormat: +CGDCONT


| Description | This command is to set GPRS PDP format. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● AT+CGDCONT=<cid>,<type>,<APN> | |
| Syntax | <cid>: To indicate PDP number, minimal value is 1. <type>: PDP packet type, IP: use TCP/IP package. <APN>: Visit network nodes tag. | |
| Response | See the example below. | |
| Example | China Mobile: AT+CGDCONT=1,"IP","CMNET" China Unicom: AT+CGDCONT=1,"IP","UNINET" | |
|  NOTE | | |

7.2 Send USSD data: +CUSD


| Description | This command is to send USSD (Unstructured Supplementary Service Data) . | |
|-------------|---|--|
| Format | <ul style="list-style-type: none"> ● AT+CUSD=<n>,<str>,<dc> ● AT+CUSD? | |
| Syntax | <n>: -0: not display back code -1: display back code -2: cancel the request <str>: string type: USSD string, USSD string, please use ASCII code. <dc>: integer type, it is suggesti to use 15. | |
| Response | See the example below. | |
| Example | AT+CUSD=1,"*100#",15 +CUSD: 1," 5FEB4FE10031003000306B228FCE60A8000A0031 00560049005059278D609001000A0032670959567A DE731C002D6D7776D782395BFB5B9D000A00339 ED1624B515A6E17900F004600420049000A003465 E995F45FEB62A5000A00355A314E50604B5427000 A003680A179685F697968000A0037795D798F4E0B 8F7D000A00388D448D398BF4660E ",72 | |

| | | |
|---|--|--|
| | OK | |
| | AT+CUSD=1,"1",15 OK +CUSD : 1,"6210529F63A8835000354F4D4EB253CB514D8D 39988653D679FB52A8554657CE0056004900504F1 A5458670D52A1FF0C53736709673A4F1A8D6253D 60031003051438BDD8D39FF0C8BE689C16D3B52 A88BE660C5000A00317ACB537363A88350000A00 326D3B52A88BE660C5000A003351734E8E005600 490050000A00344E2D595667E58BE2000A00354E0 A67086D3B52A8516C544A000A003800388FD456D E",72 | |
| | AT+CUSD? +CUSD:0 OK | |
| | | |
|  NOTE | | |


7.3 Data mode and AT mode switch settings: &D2

| Description | This command is to set the switch between data mode and AT mode. | |
|---|---|--|
| Format | ● AT&D2 | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | AT&D2 OK | |
|  NOTE | <p>This command need to set before the module is connected to the network. Please following the steps below:</p> <p>(1) MODEM power on, then input AT&D2 before inputting AT+CGDCONT and ATD*99#.</p> <p>(2) set APN, dial-up, then use '+++/'ATO' regularly to switch between data mode and AT mode.</p> <p>(3) if you want to disconnect the data link, please switch to AT mode(use +++), then input AT&D1, and then switch back to data mode (use ATO), use +++ command to quit from data mode normally.</p> <p>(4) to re-enter data mode and use +++/'ATO command, please input AT&D2 before dial-up.</p> <p>This command is only used in the external stack.</p> | |

7.4 Data mode switch to AT mode: +++


| Description | This command is to set the module switch data mode to AT mode. | |
|---|--|--|
| Format | ● +++ | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | +++ OK | |
|  NOTE | This command is only used in the external stack. | |

7.5 AT mode switched to data mode: O

| Description | This command is to set the module switch AT mode to data mode. | |
|---|--|--|
| Format | ● ATO | |
| Syntax | NULL | |
| Response | See the example below. | |
| Example | ATO CONNECT | |
|  NOTE | This command is only used in the external stack. | |

7.6 User Authentication: +XGAUTH


| Description | PDP authentication | |
|-------------|--|--|
| Format | <ul style="list-style-type: none"> ● AT+XGAUTH=<cid>,<auth>,<name>,<pwd> ● +XGAUTH:(<cid>s),(<auth>s),lname,lpwd | |
| Syntax | <cid> PDP context identifier <auth> authentication may be: - 0: meaning authentication protocol not used (NONE: see also 2.1 <APN>) - 1: meaning personal authentication protocol (PAP: see also 2.1 <APN>) - 2: meaning handshake authentication protocol (CHAP: see also 2.1 <APN>) <name> user name as string with length <lname> <pwd> password as string with maximum length <lpwd> | |
| Response | See the example below. | |
| Example | AT+XGAUTH=1,1,"gsm","1234" | OK or CME ERROR: <error> |
| | AT+XGAUTH=? | +XGAUTH: (1-255),(0-1),20,32 20: The maximum length of user name; 32: The maximum length of password |

| | |
|---|---|
|  NOTE | <ol style="list-style-type: none">1) This instruction should be placed behind the command AT + CGDCONT2) Usually in the private network user authentication is required3) User name and password can not be empty, the default is "gsm", "1234"4) Internal and external protocol stack can use this instruction |
|---|---|


neoway

8 TCP/IP AT commands

8.1 Select internal or external protocol stack: +XISP


| Description | This command is to select to use internal or external protocol stack. | |
|--|--|---|
| Format | <ul style="list-style-type: none"> ● AT+XISP=<n> ● AT+XISP? | |
| Syntax | <n>: 0: use internal TCP/IP protocol stack 1: use external protocol stack (the default value of the software of the module) | |
| Response | See the example below. | |
| Example | AT+XISP=0 OK | Designated to use internal protocol stack |
| | AT+XISP? +XISP:0 OK | |
|  NOTE | If using internal protocol stack, please set 'AT+XISP=0' in the single board software. The following TCP / IP instruction are for the internal protocol stack | |

8.2 Establish PPP link: +XIIC

| Description | This command is to establish PPP link. | |
|---|--|--|
| Format | <ul style="list-style-type: none"> ● AT+XIIC=<n> ● AT+XIIC? | |
| Syntax | <n>: 1 | |
| Response | See the example below. | |
| Example | AT+XIIC=1 OK | Request the module to establish PPP link. |
| | AT+XIIC? +XIIC: 1, 10.232.165.29 OK | Check the status of PPP link. 1) PPP link successfully, IP is 10.232.165.29. 2) There are four spaces before 1 |
| | AT+XIIC? +XIIC: 0, 0.0.0.0 OK | Check the status of PPP link: 1) PPP link fail and need check again. 2) There are four spaces before 0 |
|  NOTE | 1、 Before establish PPP link, please use command 'AT+CGDCONT' to set value APN. For example, to the network of China Mobile, we can use the following commands to set APN and other values: AT+CGDCONT=1,"IP","CMNET". 2、 Please set AT+XISP=0 before set AT+CGDCONT. | |


| | |
|--|---|
| | 3、 Before using AT+XIIC=1 to establish PPP link, please make sure the module has been registered on network. We can use AT+CREG? to confirm the module registered on the network or not. If response +CREG: 0,1or +CREG: 0,5, it means the module has been registered on the network. |
|--|---|

8.3 Establish TCP link: +TCPSETUP


| Description | This command is to establish TCP link. | |
|---|--|--|
| Format | ● AT+TCPSETUP=<n>,<ip>,<port> | |
| Syntax | <n>: Link ID, only could be 0 or 1. <ip>: Target IP address must be input as xx.xx.xx.xx. <port>: Target port number must be decimal ASCII code. | |
| Response | See the example below. | |
| Example | AT+TCPSETUP=0,220.199.66.56,6800 OK +TCPSETUP:0,OK | Establish a connection to 220.199.66.56,6800 on Link 0, success. |
| | AT+TCPSETUP=1,192.168.20.6,7000 OK +TCPSETUP:0,FAIL | Establish a connection to 192.168.20.6,7000 on Link 1, failed. |
| | AT+TCPSETUP=2,192.168.20.6,7000 +TCPSETUP:Error 2 | AT command Format: ERROR |
|  NOTE | 1、 Before setting up a TCP link, you must ensure that the PPP link has been established, you can use command +XIIC to confirm. 2、 After inputting AT command, if the command Format is correct, it will response OK immediately; if the command Format is not correct or the link has been in use, it will response +TCPSETUP: Error 2. | |

8.4 Send TCP data: +TCPSEND

| Description | This command is to send TCP data. | |
|-------------|--|-------------------------------|
| Format | ● AT+TCPSEND=<n>,<length> | |
| Syntax | <n>: Link ID, only could be 0 or 1 and this link has been already establish TCP link. <length>: The length of on-sent data, get value in range of 1-2000 bytes. | |
| Response | See the example below. | |
| Example | AT+TCPSEND=0,10 | Send 10 bytes data on Link 0, |


| | | |
|---|--|--|
| | >1234567890 OK +TCPSEND:0,10 | success. |
| | AT+TCPSEND=0,10 >1234567890 +TCPSEND:Error | Send 10 bytes data on Link 0, this link has not established, failed. |
| | AT+TCPSEND=0,536 >1234567890... +TCPSEND:Buffer not enough,439 ERROR | Send 536 bytes data on Link 0, the internal buffer is not enough, failed. |
| | AT+TCPSEND=0,2800 >1234567890... +TCPSEND:Data length error | Send 2800 bytes data on Link 0, exceed the limitation of the length, failed. |
|  NOTE | 1、 Before sending TCP data, please ensure the TCP link has been established. 2、 The sent data ends as 0x0d. 3、 Before sending data, please use AT+IPSTATUS to check the available size of buffer. 4、 This command supports the input of binary data of non ASCII code. | |

8.5 Receive TCP data: +TCPRECV


| Description | This command is to indicate the received TCP data. | |
|---|---|--|
| Format | +TCPRECV:<n>,<length>,<data> | |
| Syntax | <ul style="list-style-type: none"> ● <n>: Link ID, only could be 0 or 1. ● <length> Length of received data. ● <data> Received data. Add 0x0d 0x0a at the end. The user can check the end according to the parameter <length>. | |
| Response | NULL | |
| Example | +TCPRECV:0,10,1234567890 | Receive 10 bytes data on Link 0, the data is 1234567890. |
|  NOTE | | |

8.6 Close TCP link: +TCPCLOSE


| Description | This command is to close TCP link. |
|-------------|---|
| Format | <ul style="list-style-type: none"> ● AT+TCPCLOSE=<n> |

| | | |
|---|--|------------------------------------|
| Syntax | <n>: Link ID, only could be 0 or 1. | |
| Response | See the example below. | |
| Example | AT+TCPCLOSE=1 +TCPCLOSE:1,OK | Close TCP link on Link 1, success. |
| | AT+TCPCLOSE=2 +TCPCLOSE:Error | Link ID is wrong, failed. |
| | Null +TCPCLOSE:0,Link Closed | TCP link is forced to disconnect. |
|  NOTE | | |

8.7 Establish UDP link: +UDPSETUP


| Description | This command is to establish UDP link | |
|---|---|--|
| Format | ● AT+UDPSETUP=<n>,<ip>,<port> | |
| Syntax | <n>: Link ID, only could be 0 or 1. <ip>: Target IP address, must be input as xx.xx.xx.xx. <port>: Target port number, must be decimal ASCII code. | |
| Response | 1、Input AT command, if command Format is correct, it will response OK immediately. 2、If the input command Format is not correct or this link has been in use, it will response +UDPSETUP:Error. 3、If the input AT command is correct (response:OK), the UDP link is establish successfully and response: +UDPSETUP:<n>,OK (<n> represents link number). 4、If the input AT command is correct (response:OK), the UDP link is not establish successfully and response:+UDPSETUP:%d,Bind Socket Error or +UDPSETUP:%d,Create Socket Error (<n> represents link number). | |
| Example | AT+UDPSETUP=1,220.199.66.56,7000 OK +UDPSETUP:1,OK | Establish a link to 220.199.66.56,7000 on Link 1: success. |
| | AT+UDPSETUP=1,192.168.20.6,7000 OK +UDPSETUP:0,FAIL | Establish a link to 220.199.66.56,7000 on Link 1: failed. |
| | AT+UDPSETUP=2,192.168.20.6,6800 +UDPSETUP:Error | AT command Format Error |
|  NOTE | Before setting up UDP link, it must ensure PPP link has been established by using AT +XIIIC to confirm. | |

8.8 Send UDP data: +UDPSEND


| Description | This command is to send UDP data | |
|---|---|--|
| Format | ● AT+UDPSEND=<n>,<length> | |
| Syntax | <n>: Link ID, only could be 0 or 1, and this link should be already established UDP link. <length>: The length of on-sent data, get value in range of 1-2000 bytes. | |
| Response | 1、Input AT command, if the command Format is correct, it will response '>'. 2、If the command Format is wrong or this link has not been established, it will response: +UDPSEND:Error. 3、Input command and wait for the appearance of '>', then input on-sent data ended with 0x0d. If the data input is correct, it will response OK. 4、If TCP data is sent correctly, it will response + +UDPSEND:<n>,<length>. <length> is the length of sent data. | |
| Example | at+udpsend=0,10 >1234567890 OK +UDPSEND:0,10 | Require to send 10 bytes data on Link0, after the appearance of '>', input the on-sent character ended with 0x0d. AT command: success. Data sent: success. |
| | at+udpsend=0,2800 +UDPSEND:Data length error | Require to send 2800 bytes data on Link0. AT command Format is wrong. (<length> parameter is illegal.) |
|  NOTE | 1、Before using this command, it must establish UDP link. 2、This command supports to send non-ASCII decimal data. 3、 Sent data should be ended with 0x0d. | |

8.9 Receive UDP data: +UDPRECV

| Description | This command is to receive UDP data | |
|-------------|--|--|
| Format | +UDPRECV:<n>,<length>,<data> | |
| Syntax | ● <n>: Link ID, only could be 0 or 1. ● <length> The length of received data. ● <data> Received data. Add 0x0d 0x0a at the end. The user can confirm the end with | |

| | | |
|---|--------------------------|---|
| | parameter <length>. | |
| Response | NULL | |
| Example | +UDPRECV:0,10,1234567890 | Receive 10 bytes data on Link0, the data is 1234567890. |
|  NOTE | | |

8.10 Close UDP link: +UDPCLOSE

| Description | This command is to close UDP link | |
|---|--|---------------------------------------|
| Format | ● AT+UDPCLOSE=<n> | |
| Syntax | <n>: Link ID, only could be 0 or 1. | |
| Response | If <n> is illegal, it will response: +UDPCLOSE:Error; Or it will response +UDPCLOSE:<n>,OK。 | |
| Example | AT+UDPCLOSE=1 +UDPCLOSE:1,OK | Close the UDP link on Link1, success. |
| | AT+UDPCLOSE=2 +UDPCLOSE:Error | Link ID is wrong, faild. |
|  NOTE | | |

8.11 Check TCP/UDP link status: +IPSTATUS

| Description | This command is to check TCP/UDP link status | |
|-------------|---|---|
| Format | ● AT+IPSTATUS=<n> | |
| Syntax | <n>: Link ID, only could be 0 or 1. | |
| Response | +IPSTATUS: <n>,<CONNECT or DISCONNECT>,<TCP or UDP>, <send-buffer-size> ● <CONNECT or DISCONNECT>: The status of this link, get value: CONNECT or DISCONNECT. ● <TCP or UDP>: Link type, get value: TCP or UDP. ● <send-buffer-size>: The module internal available send buffer size, indicating with decimal ASCII code, a byte per unit. | |
| Example | AT+IPSTATUS=0 +IPSTATUS:0,CONNECT,TCP,2047 | Link0 has been establish TCP link, available buffer size is 2047 bytes. |
| | AT+IPSTATUS=1 +IPSTATUS:1,DISCONNECT | Link1 has not establish any link. |



NOTE

If it is UDP link, <send-buffer-size> would response 0 all the time.

8.12 TCP/IP AT commands NOTE

- (1) If use internal protocol, it must set **AT+XISP=0** when the module is initialized. This command should set before the command: AT+CGDCONT;
- (2) It must add character **0x0d as end charater** to the end of data pacakage, but this end chatacter shall not be counted to the data length, for example, sending a 10-bytes command is as follows:

```
AT+TCPSEND=0,10
```

```
>
```

After the sign ">" appeared, it could begin to send data 1234567890 and should add the character 0x0.


- (3) After setting up PPP connect, it should check the connect set-up successful or not, get an IP addres, if the address is 0.0.0.0, it indicates that the PPP connect is failed. It needs to re-set the PPP connect until succeed. If the connect is always failed, please check the code is set to be internal protocol or not.

9 DNS (Domain Name Server) commands

9.1 Check IP address


| Description | This command is to check IP address | |
|---|--|--|
| Format | AT+DNS=<string> | |
| Syntax | <string>: be checked website URL, like www.china.com . | |
| Response | See the example below. | |
| Example | at+dns="www.china.com" OK +DNS:124.238.253.103 +DNS:124.238.253.102 +DNS:OK | Check "www.china.com" website The module gave two IP address: 124.238.253.103 124.238.253.102 |
|  NOTE | 1、It must establish PPP link before implementing this command, then the IP address could be detected successfully. (AT+XIIC=1). 2、One URL may correspond to several IP address, these addresses will be listed in back code. The list will be ended with +DNS: OK. 3、There is no need to set DNS server before using DNS to check IP. DNS server would be given by base station during the negotiating of PPP. 4、The length of URL can't exceed 250Bytes. | |

9.2 Check or set DNS

| Description | This command is to check or set DNS | |
|---|---|--|
| Format | AT+DNSSERVER? AT+DNSSERVER=<n>,<dns-ip> | |
| Syntax | <n>: Dns server number, get value: 1-2. <dns-ip>: DNS server IP address. | |
| Response | See the example below. | |
| Example | at+dnsserver? +DNSSERVER:dns1:211.95.193.97;dns2: 0.0.0.0 at+dnsserver=1,211.65.24.123 +DNSSERVER:OK at+dnsserver? +DNSSERVER:dns1:211.65.24.123;dns2: 0.0.0.0 | Check DNS server. Dns1is 211.95.193.97; Dns2 is empty. Set dns1 server IP is 211.65.24.123 |
|  NOTE | Generally, the user can't set DNS server. During PPP negotiation time, the base station control will give a DNS server IP. | |


10 TCP server AT commands

10.1 Setting the server TCP listener: +TCPLISTEN


| Description | Set the server listening, supporting three master station link. | |
|---|---|---|
| Format | AT+TCPLISTEN=<port> +TCPLISTEN:<socket>,OK | |
| Syntax | Port: port number Socket: SOCKET number | |
| Response | See the example below. | |
| Example | AT+TCPLISTEN=6800 | Listening port number 6800 |
| | +TCPLISTEN:0,OK or +TCPLISTEN:bind error | Server started listening Bind failed |
| | AT+TCPLISTEN=6800 | If the listener has been set, then set it, it will prompt Listening ... |
| | Listening... | |
| | AT+TCPLISTEN? | Check the listening state, that is currently in listening. |
| | +TCPLISTEN:listening status | |
| | AT+TCPLISTEN? | Check the listening state, that is not currently listening. |
| | +TCPLISTEN:not listening | |
| | Connect AcceptSocket=1,ClientAddr=119.123.77.133 | |
| | Received the master station connection requests. AcceptSocket is the established socket between the main station and module, 119.123.77.133 is the IP address of the master station | |
|  NOTE | This instruction must be after successful establishing a working PPP connection Corresponding to the software version: V1.30B above Unicom card or China mobile private network card can be used for debugging, the China mobile public network card can not be used for server debugging | |

10.2 Close listening links: +CLOSELISTEN


| Description | Close listening links |
|-------------|---|
| Format | AT+CLOSELISTEN +CLOSECLIENT:<socket>,local link closed |
| Syntax | Socket: SOCKET number |

| | | |
|---|--|--|
| Response | See the example below. | |
| Example | AT+CLOSELISTEN +CLOSELISTEN:0,local link closed | Network anomalies, it will also receive the information; |
|  NOTE | Corresponding to the software version: V1.30B above | |

10.3 Close the master station link: +CLOSECLIENT


| Description | Close the master station link | |
|---|--|--|
| Format | AT+CLOSECLIENT +CLOSECLIENT:<socket>,remote link closed | |
| Syntax | Socket: SOCKET number | |
| Response | See the example below. | |
| Example | AT+CLOSECLIENT +CLOSECLIENT:1,remote link closed | |
|  NOTE | Corresponding to the software version: V1.30B above | |

10.4 Receive the data from the main station: +TCPRECV(S)


| Description | Receive the data from the main station | |
|---|--|--|
| Format | +TCPRECV(S):<SOCKET>,<length>,<data> | |
| Syntax | | |
| Response | See the example below. | |
| Example | +TCPRECV(S):1,10,1234567899 | |
|  NOTE | 1) Mode with the client to receive a slightly different format, extra a symbolic "(S)" 2) It's different with the client's parameters 3) Corresponding to the software version: V1.30B above | |

10.5 The data sent to the master station: +TCPSENDS

| Description | The data sent to the master station |
|-------------|---|
| Format | AT+TCPSENDS=<socket>,<length> |
| Syntax | <socket>: The value of listening to AcceptSocket which is the socket between main station and the module, refer to AT + TCPLISTEN instruction description. |


| | | |
|---|--|--|
| | <length>: To send data length which is in bytes, recommended ranging between 1 to 1024 | |
| Response | See the example below. | |
| Example | AT+TCPSENDS=0,10 >1234567890 OK +TCPSENDS:0,10 | In sokcet 0 10 bytes of data sent successfully. |
| | AT+TCPSENDS=0,536 >1234567890... +TCPSENDS:Buffer not enough,439 | In sokcet 0 send 536 bytes of data, lack of internal buffer, failed to send. |
|  NOTE | 1、 TCP link must has been established before sending TCP data 2、 Data sent to 0x0d end. Corresponding to the software version: V1.30B above | |

10.6 Check status of the master station link: +CLIENTSTATUS


| Description | Check status of the master station link | |
|---|--|--|
| Format | AT+CLIENTSTATUS=<socket> | |
| Syntax | <socket>: The value of listening to AcceptSocket which is the socket between main station and the module, refer to AT + TCPLISTEN instruction description. | |
| Response | +CLIENTSTATUS: <socket>,<CONNECT or DISCONNECT>,<TCP>,<send-buffer-size> ● <CONNECT or DISCONNECT>: The link status which value is CONNECT or DISCONNECT。 ● <TCP>: Link type, the value is TCP ● <send-buffer-size>: Modules available internal sending buffer size in bytes, decimal ASCII code represents. | |
| Example | AT+CLIENTSTATUS=0 +CLIENTSTATUS:0,CONNECT,TCP,2048 | Master station socket 0 , TCP connection has been established, the available buffer is 2048 bytes. |
|  NOTE | Corresponding to the software version: V1.30B above | |

10.7 Set module signal status: +SIGNAL

| Description | Set module signal status |
|-------------|--------------------------|
| Format | AT+SIGNAL=<n> |


| | | |
|--|---|--|
| Syntax | <n>: 0: One state, Normal Flash Once a second, shows no exception state, or stay lit; 1: One state, connecting GPRS data service on blink once per second, otherwise do not light up; 2: Two States : Flash and slow Flash, GPRS data service 250 milliseconds Flash once, other normal 1 blinks again. 3: Connect to GPRS data service lights stay lit, the other one blink per second; 4: Connect to GPRS data service lights stay lit, otherwise do not light up; | |
| Response | See the example below. | |
| Example | AT+SIGNAL=0 | |
| | OK | |
| | AT+SIGNAL? | |
| | +SIGNAL:2 | |
| | OK | |
|  NOTE | 1) If not set, Power-on default value is 2. If it is set, the value can be saved which is subject to the set value. 2) This instruction set, be sure to receive the return value, and then do the other AT instructions. 3) Corresponding to the software version: V1.30B above 4) Status values 3 and 4, corresponding to the software version: V1.30c or V1.20u | |

10.8 Setting external protocol stack light status: +GPRSSTATUS


| Description | Setting external protocol stack light status | |
|---|---|-----------------------------|
| Format | at+gprsstatus=<status> | |
| Syntax | <status>: GPRS status 0: Indicates no GPRS connection 1: Indicates GPRS connection | |
| Response | See the example below. | |
| Example | at+gprsstatus=1 | When the lights will change |
| | OK | |
|  NOTE | 1) The command only for external protocol stack; When the terminal is connected to GPRS, use this command, you can change the state of the signal, which can distinguish between the state of the module; Disconnect GPRS, and then set back. 2) The command can meet the AT + SIGNAL to operate 3) Corresponding to the software version: V1.30c or V1.20u | |

11 FTP AT commands

11.1 Login FTP server: +FTPLOGIN


| Description | This command is to login FTP server. | |
|---|---|---|
| Format | AT+FTPLOGIN=<ip>,<port>,<user>,<pwd> | |
| Syntax | <p><ip>: FTP server IP.</p> <p><port>: FTP server port number, usually is 21.</p> <p><user>: User name to login FTP server, the length can't exceed 100 ASCII code. There should be no comma (',') in the user name.</p> <p><pwd>: The password to login FTP server, the length can't exceed 100 ASCII code. There should be no comma (',') in the password.</p> | |
| Response | <ol style="list-style-type: none"> If the AT command Format is not correct, it will response +FTPLOGIN: Error <n>. <n> is a wrong code. If FTP has been in login status, it will response +FTPLOGIN:Have Logged In. If the last AT command which is related to FTP has not been finished, it will response +FTPLOGIN:AT Busy. If login is success, it will response +FTPLOGIN: User logged in. If login is failed as wrong user name or wrong password, it will response +FTPLOGIN: 530 Not logged in. If connecting to FTP server is failed, it will response +FTPLOGIN: Error Connect Server Fail. If the login is failed as the login time is out (the time is over 30s), it will response +FTPLOGIN: Error TimeOut. | |
| Example | At+ftlogin=219.134.179.52,21,user1,pwd2009 OK +FTPLOGIN:User logged in | Login server 219.134.179.52, port 21, user name is user1,password is pwd2009。 Login success. |
|  NOTE | <ol style="list-style-type: none"> FTP and TCP/UDP can't use at same time. The read and write operation of FTP can't be done before login. This command can be used after the opening of PPP link. | |

11.2 Logout FTP server: +FTPLOGOUT

| Description | This command is to logout FTP server. | |
|---|---|--------------------|
| Format | AT+FTPLOGOUT | |
| Syntax | NULL | |
| Response | OK | |
| Example | AT+FTPLOGOUT OK | Logout FTP server. |
|  NOTE | This command can be used no matter FTP protocol is in any status. | |


11.3 Download data from FTP server: +FTPGET

| Description | This command is to download data from FTP server. | | |
|-------------|---|--|-------------------------|
| Format | AT+FTPGET=<dir&filename>,<type>,<Content or Info> | | |
| Syntax | <Dir&filename> File direct and name. (file direct is compared with FTP root direct.) <Type> data transfer mode: 1: ASCII; 2: Binary。 <Content or Info> is to specify what you need is content of the file or information of the file(file direct): 1: get the file content 2: get the information of file or specified direct. | | |
| Response | 1. If the AT command Format is incorrect, it will response:+FTPGET:Error <n>. (<n> is incorrect code.) 2. If FTP is not login status, it will response: +FTPGET:Error Not Login. 3. If the last AT command which is related to FTP has not been finished, it will response:+FTPGET:AT Busy. 4. If the login is failed as the login time is out (the time is over 30s), it will response +FTPLOGIN: Error TimeOut. 5. Response: +FTPGET:<length>,<data>, <length> represents the length of data, <data> represents data content. 6. Response: +FTPGET:OK.total length is <n>, data read is success, reading length of the data is n. | | |
| Example | AT+FTPGET=,1,2 +FTPGET:446,drw-rw-rw- 1 user group 0 Apr 14 15:55 . | | Get informati ons |


| | | |
|---|--|---|
| | drw-rw-rw- 1 user group 0 Apr 14 15:55 .. -rw-rw-rw- 1 user group 1238528 Jan 14 10:36 1M.doc -rw-rw-rw- 1 user group 10 Jan 15 15:01 test.txt +FTPGET:OK.total length is 446 | under root content. |
| | at+ftpget=test.txt,1,2 +FTPGET:65,-rw-rw-rw- 1 user group 10 Jan 15 15:01 test.txt +FTPGET:OK.total length is 65 | Get information of file 'test.txt'. |
| | at+ftpget=test.txt,1,1 +FTPGET:10,123456780 +FTPGET:OK.total length is 10 | Get the content of the file 'test.txt'. |
|  NOTE | There is a time delay from receiving the last data to +FTPGET: OK.total length is <n>, this time delay is to ensure the transimission realibility. Default value is 8s. After the appearance of +FTPGET:OK.total length is <n>, the next FTP operation could work out. | |

11.4 Upload data to FTP server: +FTPPUT

| Description | This command is to upload data to FTP server. |
|-------------|---|
| Format | AT+FTPPUT=<filename>,<type>,<mode>,<size> |
| Syntax | <filename>: file name of need-to-send file. <type>: file transimission type: -1: ASCII -2: Binary <mode>: operation mode: -1: STOR mode. Establish a document on server to write into data, if a document has been already exist,it will be replaced by the new built one. -2: APPE mode. Establish a document to write into data, if a document has been already exist, the data will be attached at the end of the file. -3: DELE mode. Delete a file, at this time, there need to set parameter 'size' to be 0, then input 0x0d after the appearance of '>'. <size> : the length of data, the maximum data can't exceed 10240. |
| Response | 1) If the AT command Format is incorrect, it will response:+FTPGET:Error <n>. (<n> is incorrect code.) 2) If FTP is not login status, it will response: +FTPGET:Error Not Login. 3) If the last AT command which is related to FTP has not been finished, it will response:+FTPGET:AT Busy. 4) If <length> exceed 10240, it will response +FTPPUT: length overflow. |

| | | |
|---|--|---|
| | 5) Respons: +FTPPUT:OK,<n>, file sent: success, the length of sent file is n. 6) Respons: +FTPPUT:Delete File OK, delete file: success. 7) Respons: +FTPPUT>Error send data error, this FTP command can't be recognized, the module will automatically disconnect at this time. | |
| Example | <pre>at+ftpput=test.txt,1,1,10200 > +FTPPUT:OK,10200 at+ftpput=test.txt,1,2,10200 > +FTPPUT:OK,10200 at+ftpput=test.txt,1,3,0 > +FTPPUT:Delete File OK</pre> | <p>Remark: the length of upload file 'test.txt' is10200, transmission mode is ASCII, operation mode is STORE.</p> <p>Remark: the length of upload file 'test.txt' is10200, transmission mode is ASCII, operation mode is APPE.</p> <p>Delete 'test.txt' file.</p> |
|  NOTE | Inputted data without echo. | |

11.5 Check FTP status: +FTPSTATUS

| Description | This command is to check FTP status. | |
|---|--|--|
| Format | AT+FTPSTATUS | |
| Syntax | NULL | |
| Response | +FTPSTATUS:<status>[,<ip>,<port>] ● <status>: 0: not login FTP server; 1 : login FTP server, the server IP and port number are as the following parameter. ● <ip>: Server IP. ● <port>: Server port number. | |
| Example | <pre>AT+FTPSTATUS +FTPSTATUS:1, 219.134.179.521,21</pre> | |
|  NOTE | | |

12 Appendix (AT command flow chart of commonly used functions) :

12.1 AT command flow chart for setting up TCP connect

```

MODEM: STARTUP // after the module power-on, startup response

+PBREADY
...
AT+CCID
+CCID: 89860109247552607598

OK

AT+CREG?
+CREG: 0,1 // Registered on the GSM network

AT+CSQ // After module is powered on, check the signal strength, it is
CSQ:15,3 // recommended after the AT + CREG? command

OK
...
AT+XISP=0 // set internal protocol stack.
OK
...
at+cgdcont=1,"IP","CMNET" // set APN

OK
AT+XGAUTH=1,1,"GSM","1234" // User authentication, private network need to add that the
// general command

OK

at+xiic=1 // establish PPP link

OK
at+xiic?

+XIIC: 1, 10.10.73.214 // PPP connect has been establish, IP is 10.10.73.214

OK

at+tcpsetup=0,220.199.66.56,6800 // establish TCP link
OK

+TCPSETUP: 0,OK // establish TCP connect: success

at+tcpsend=0,10 // send data on TCP connect

>0123456789
OK

+TCPSEND: 0,10 //data send: success

at+ipstatus=0

```



```
+IPSTATUS: 0,CONNECT,TCP,2047 //check connect status
at+tcpclose=0 // close TCP connect on Link0

+TCPCLOSE: 0,OK
at+ipstatus=0


+IPSTATUS: 0,DISCONNECT
```

Please referece below flow chart (NOTE: every command must add a ENTER 0x0d):

neoway

12.2 AT command setting and checking flow chart for 'SMS full'

AT command setting and checking flow chat for "SMS full"

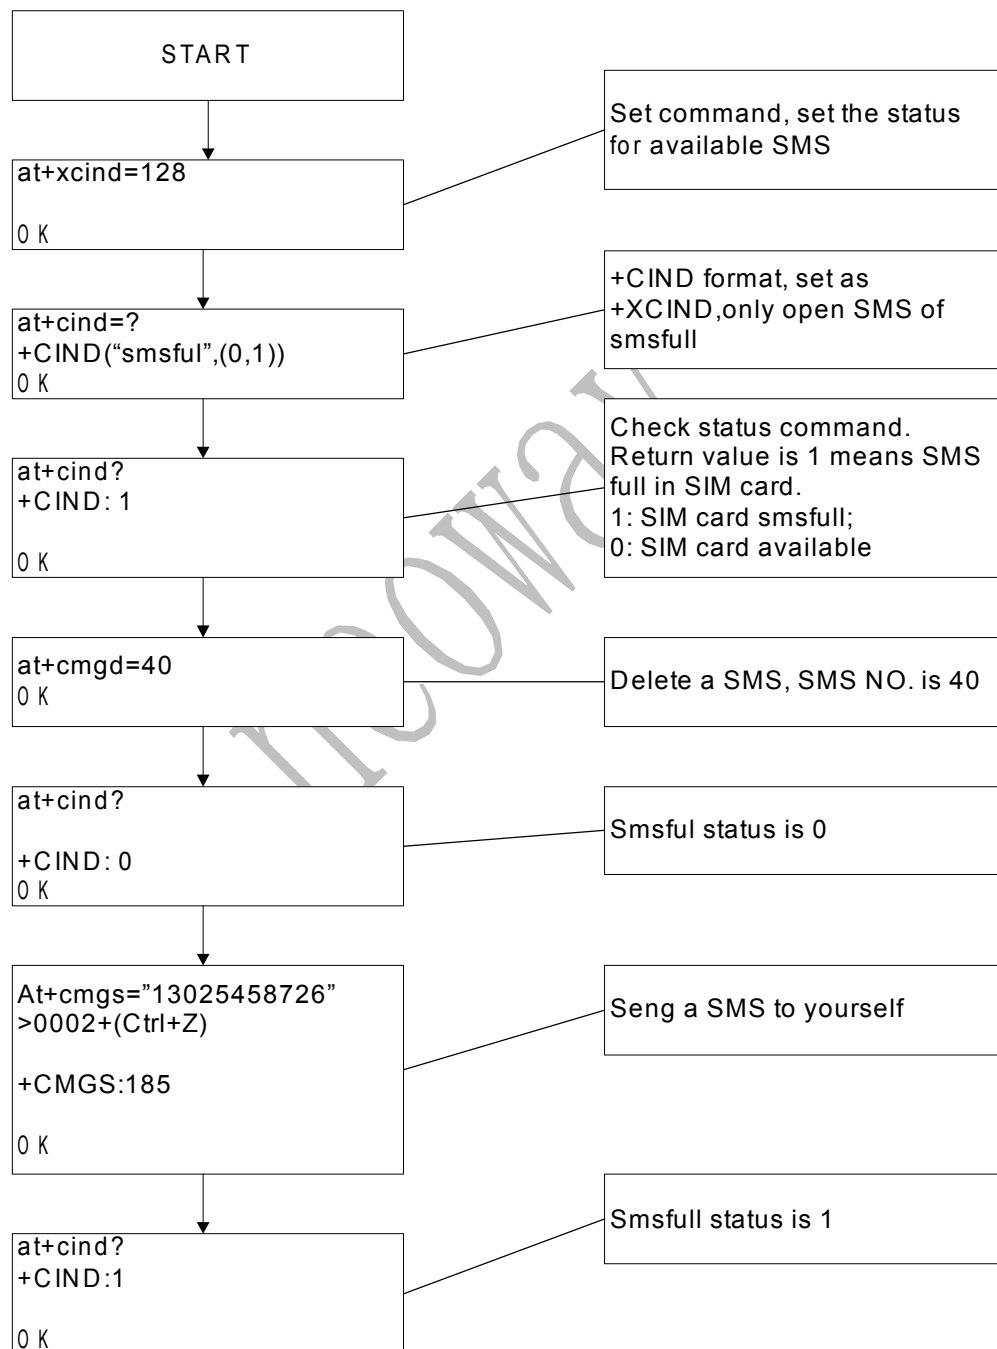


12.3 SMS general AT commands


| Function | Format | Example | Description |
|------------------------------|-------------------|--|---|
| Set text mode | AT+CMGF=1 | AT+CMGF=1 OK | AT commands need to set when sending text mode SMS |
| Select TE character string | AT+CSCS="GSM" | AT+CSCS="GSM" OK | |
| Set PDU mode | AT+CMGF=0 | AT+CMGF=0 OK | AT commands need to set when sending PDU mode SMS |
| TE hexadecimal | AT+CSCS="UCS2" | AT+CSCS="UCS2" OK | |
| Send SMS | AT+CMGS="number" | AT+CMGS="13430981508" > Shenzhen neoway +CMGS: 232 OK | AT+CMGS="13430981508" click 'ENTER' to send, when the indicating symbol '>' appears, input SMS content (Shenzhen neoway), then click CTRL+Z(corresponding character is 0x1A) to send. |
| Indicating method of new SMS | AT+CNMI=2,1,0,0,0 | AT+CNMI=2,1,0,0,0 OK (Receive SMS and SMS NO.) +CMTI: "SM",1 | CNMI default value is 1,0,0,0,0. As the module must store SMS on SIM card, CNMI must set to be two mode: 2,1,0,0,0 (new SMS content stored into SIM card and not display) or 2,2,0,0,0 (new SMS content display directly and not store into SIM card) |
| Read SMS | AT+CMGR=n | AT+CMGR=1 +CMGR: "REC READ","10086","", "09/04/ 24,09:07:09+50" ???????????????????? ???www.gd.chinamobile.c om/shenzhen????????? ?> ?? OK | |
| Read all SMS | AT+CMGL="ALL" | AT+CMGL="ALL" List all SMS | NOTE After displaying all SMS, the unread SMS will change into read SMS. |
| Delete SMS | AT+CMGD=n | AT+CMGD=3 OK | Delete SMS according to sequence number |

| | | | |
|-----------------------|-------------|---|--|
| Delete all SMS | AT+CMGD=0,4 | AT+CMGD=0,4 OK | Delete SMS, see details in AT commands |
| Check quantity of SMS | AT+CPMS? | AT+CPMS? +CPMS: "SM",0,20,"SM",0,20,"SM",0,20 | 0: quantity of SMS 20: capacity of stored SMS |

12.3.1 Flow chart for sending text mode SMS

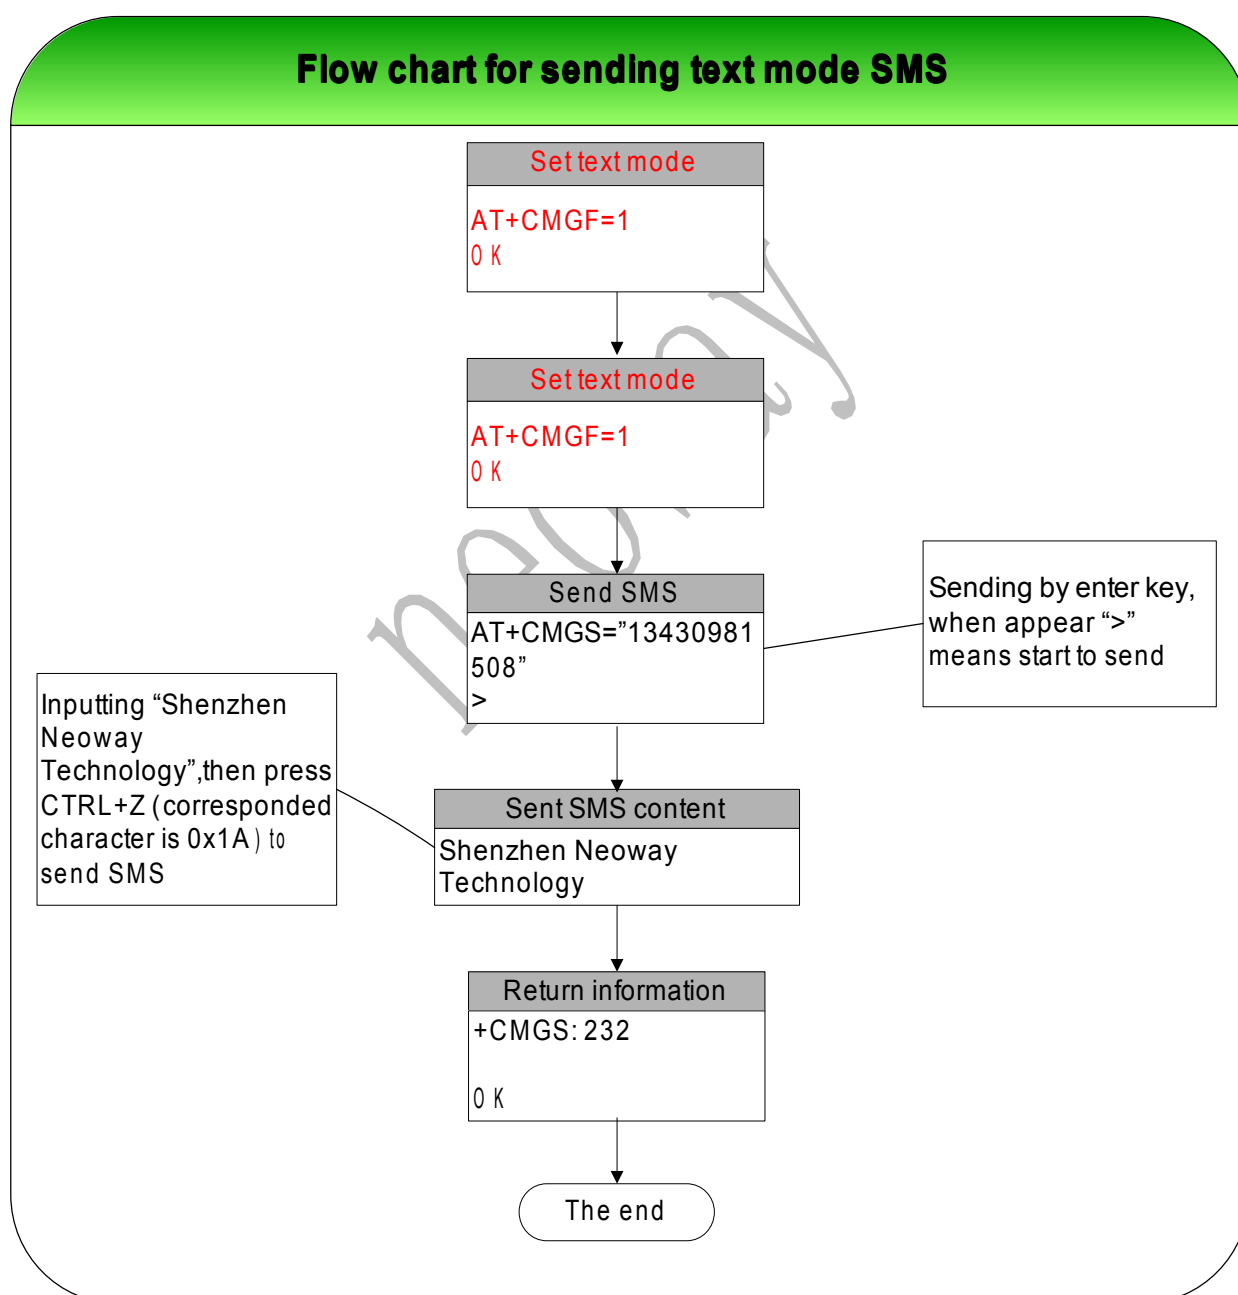

12.3.2 Flow chart for sending PDU mode SMS

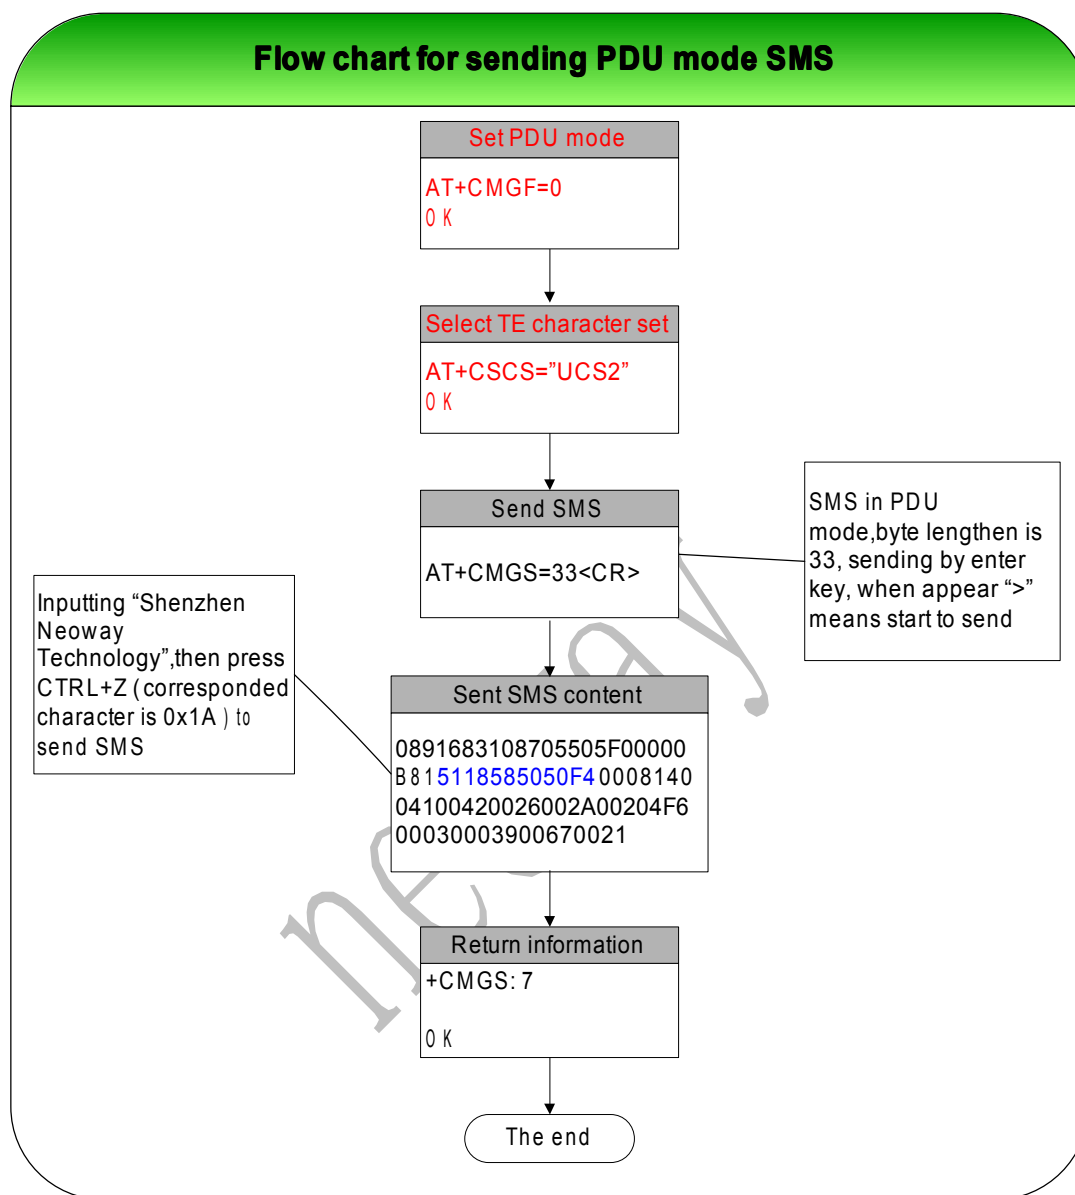

12.4 Low Consumption Mode Setting

- 1) Confirm DTR is high level (If not, it's need to set high level), then set command at+enpwrsave=1
- 2) Then set DTR a low level
- 3) Wait for about 10 seconds, it will enter the low consumption mode

After module enter low consumption mode, when there are calls、SMS、datas, it will exit low consumption mode automatically, meanwhile it can answer calls、view SMS、receive and send datas normally uses serial port. After the calls、SMS、datas about 2 seconds, it will enter low consumption mode automatically.

Automatic arousal: pull DTR to high level, after processing, then pull DTR to low level.

13 FAQ

| Questions | Description | Solution |
|---------------------------------------|---|--|
| Serial port problem | <p>1) Situation 1: serial port is disconnected or garbled</p> <p>2) Situation 2: serial port is connected but can't download software</p> | <p>1) the default baud rate of the module is 115200. The serial port is disconnected, usually because the baud rate of single board software and the module are repugnant. The baud rate can be set and save.</p> <p>2) DTR and RTS will switch when updating. Because some USB-Serial port cable performs not so good, especially some bad cable can't be switched normally and leading the module can't download software.</p> |
| SMS problem | SMS can not be received and sent. | Because not familiar with AT command Format, to the non mode SMS, it must choose character string of TE, details please see Chapter 11. |
| SMS end symbol | What is 'CTRL+Z' corresponding character? | It's 0x1A. |
| use AT+TCPSSEND to send data: failed. | No response OK +TCPSSEND: 0,n | The sent data must be ended with 0x0d . |
| Power on problem | M590i has no reaction when the module is power on | Siemens module has a 100s time delay when power on, but M590i is different, its pluse is wider than Siemens module, so it need to delay 300ms. |
| Server disconnected problem | Does the module react when the server is disconnected? | <p>If the server is automatically disconnected, the module could know and response: +TCPCLOSE:0,Link Closed;</p> <p>If the server disconnected abnormal, cause the server has not sent a disconnect AT to the module, the module can't know immediately. It will disconnect in 10 minutes.</p> |
| Data service and voice | How to deal with incoming call when doing GPRS service? | When there is incoming calls or SMS under GPRS service status, it can switch between data mode and AT mode by +++/ATO. Details please see NOTE in 8.3. |
| Data service and SMS | How to deal with incoming SMS when doing GPRS service? | |