


Bank select: 0

Program default CC/PC select: 12

Programmable footswitch: 28-33

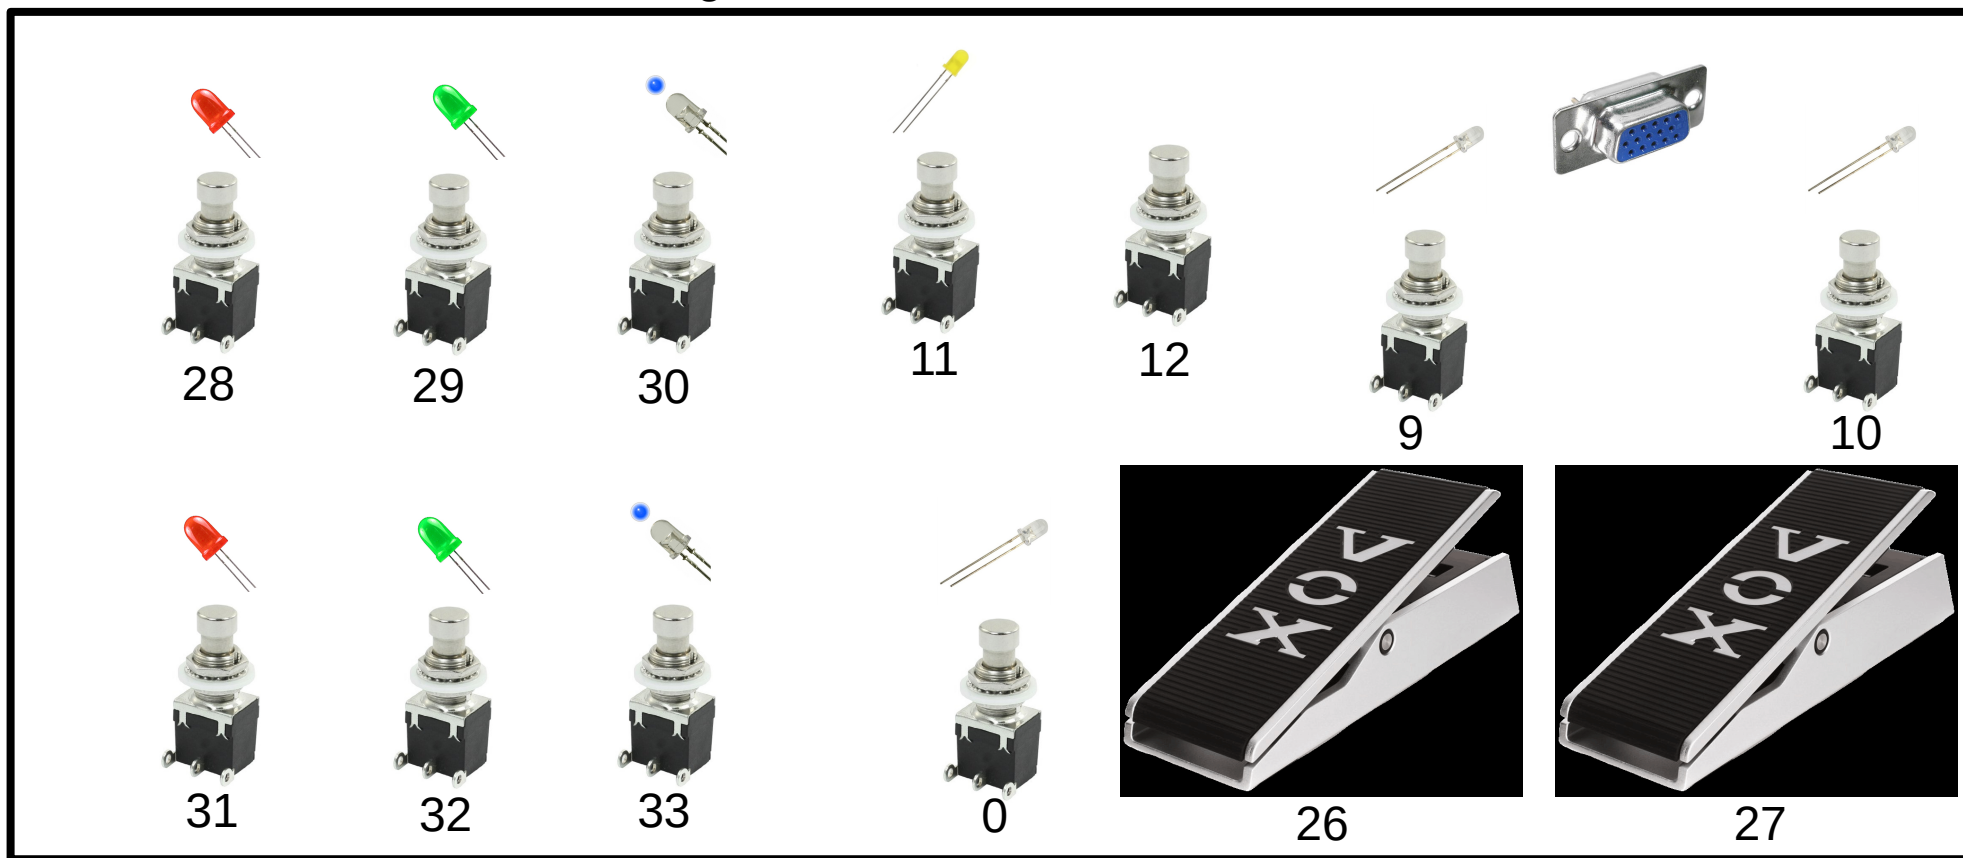

Expression pedal: 26, 27

Expression ON/OFF latched footswitch: 9, 10

Programming mode: 11