


Active message bank LED: 13

Bank select/default footswitch message select: 37

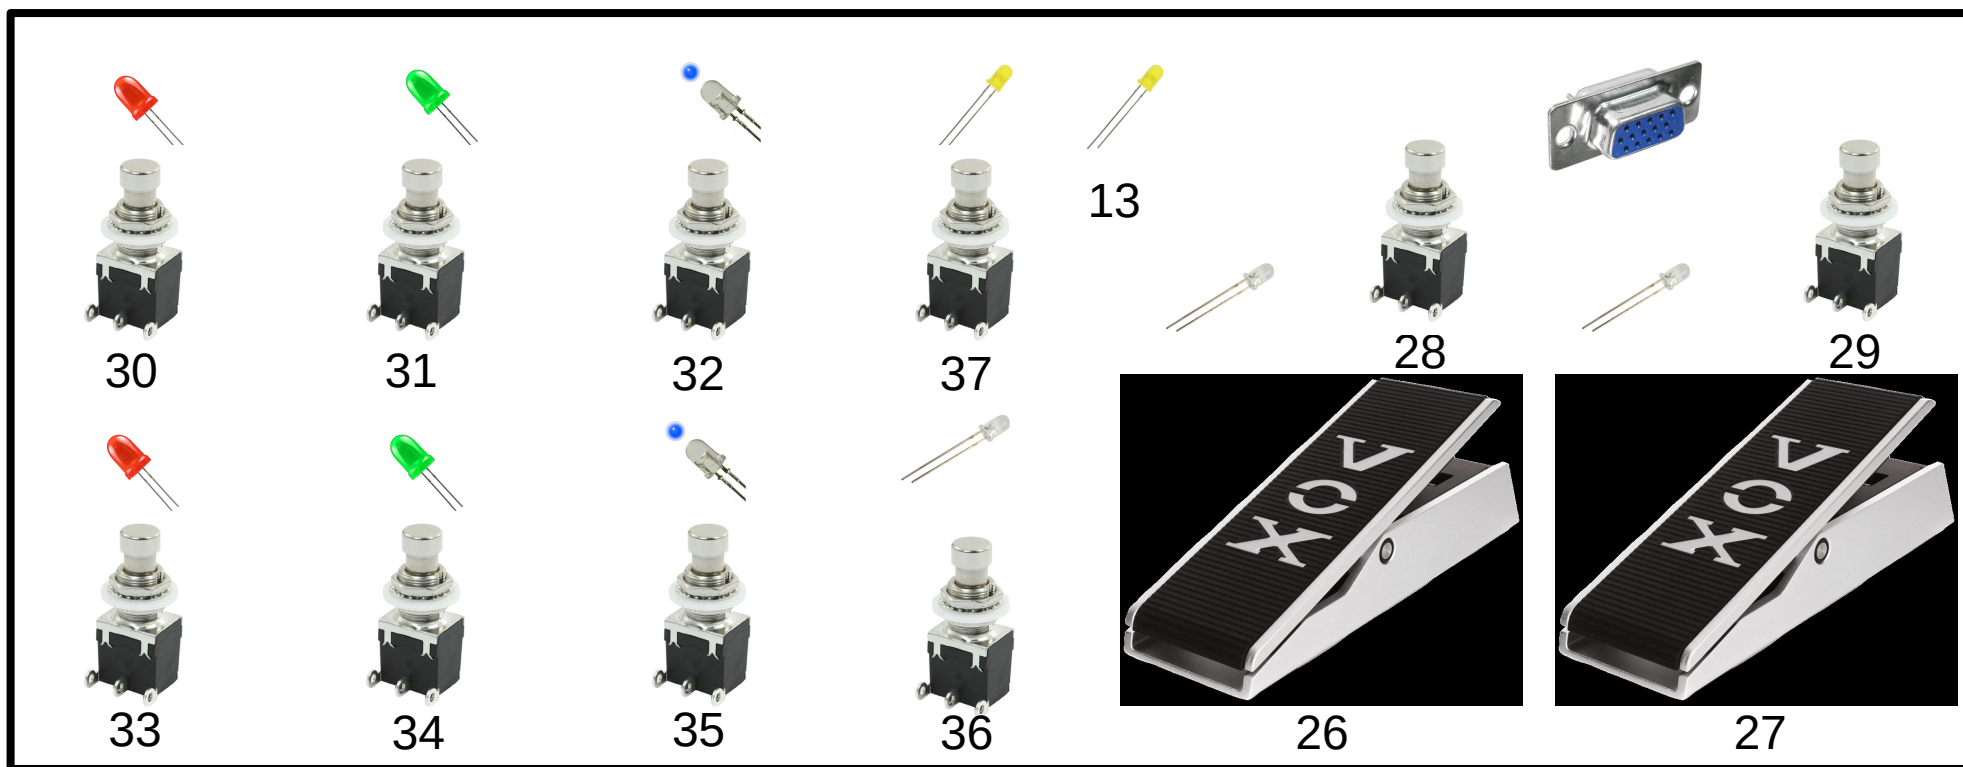

Expression pedal: 26-27

Expression ON/OFF latched footswitch: 28-29

Programmable latched footswitch: 30-36