

2. Adjustment SDI to Analog Unit - PM 5664D Only

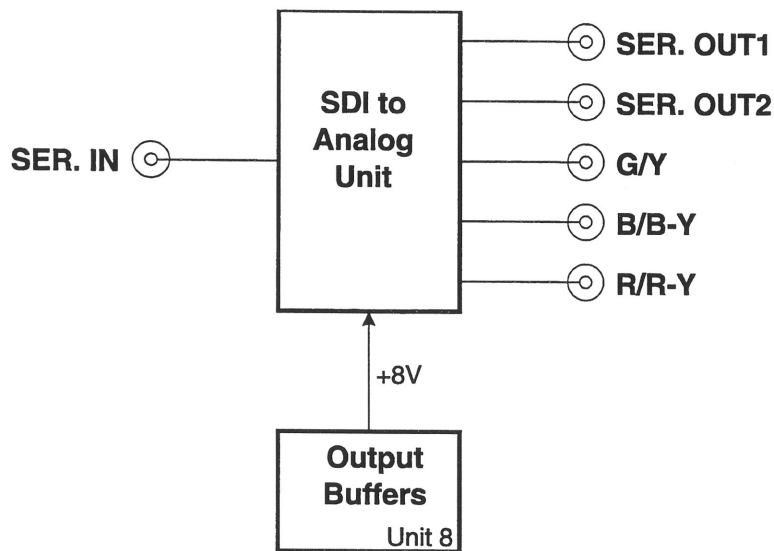


Fig. 2-1 SDI to Analog Unit

To get access to SDI to Analog Unit remove seven "A" screws at rear panel of the PM 5664D. For further information about access to the instrument please refer to Chapter 3.

— Connect GND Connector with chassis.

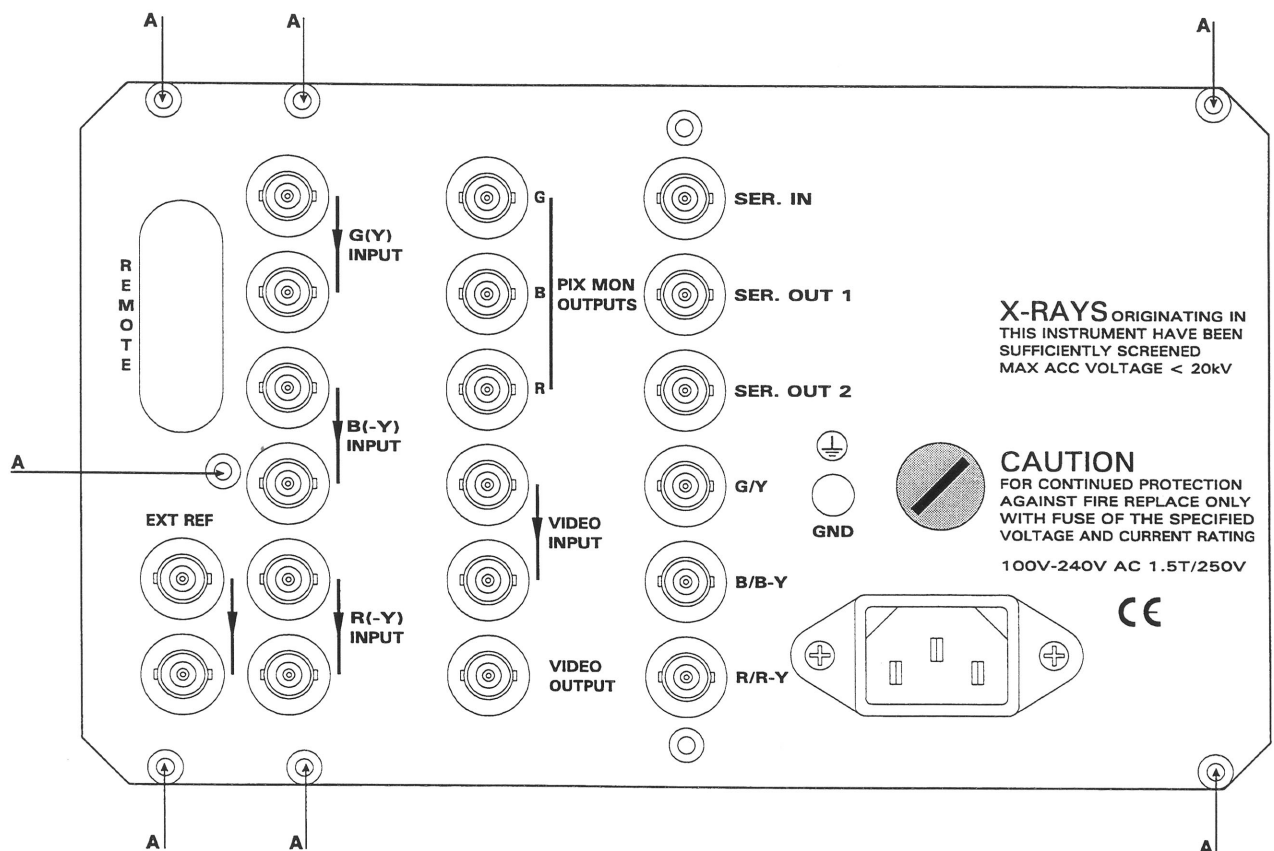


Fig. 2-2 Access to SDI to Analog Unit