



Densité CPU-ETH2 Enhanced Ethernet Controller Card Guide to Installation and Operation

GPI Report	Allows the GPI output to be enabled or disabled; disable removes any existing fault report	Factory Default	Restores factory default settings for all parameters (but not ethernet settings).
CTRL Version	Returns the version number of the currently-installed firmware.	Upgrade	Perform a controller firmware upgrade.
		CTRL Execution	Reboot the controller card.

DENSITÉ CPU-ETH2 MENU

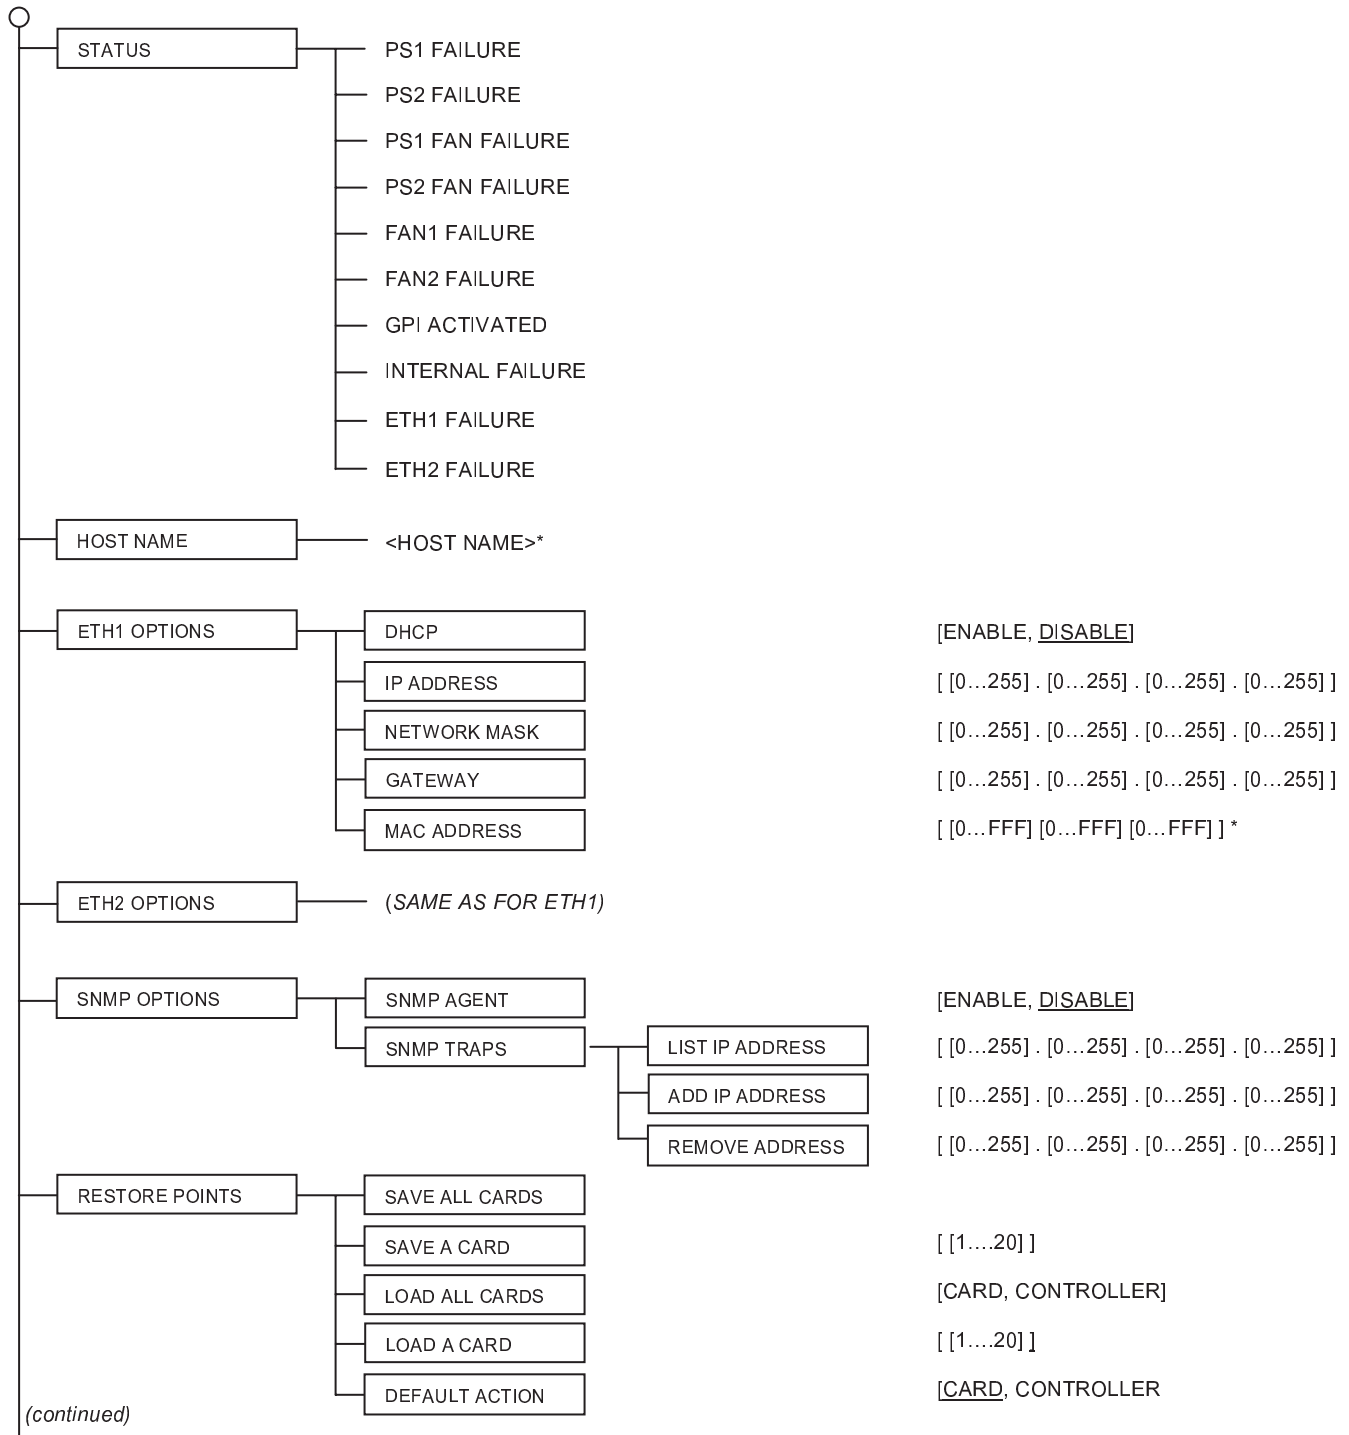

Densité CPU-ETH2 Enhanced Ethernet Controller Card
Guide to Installation and Operation

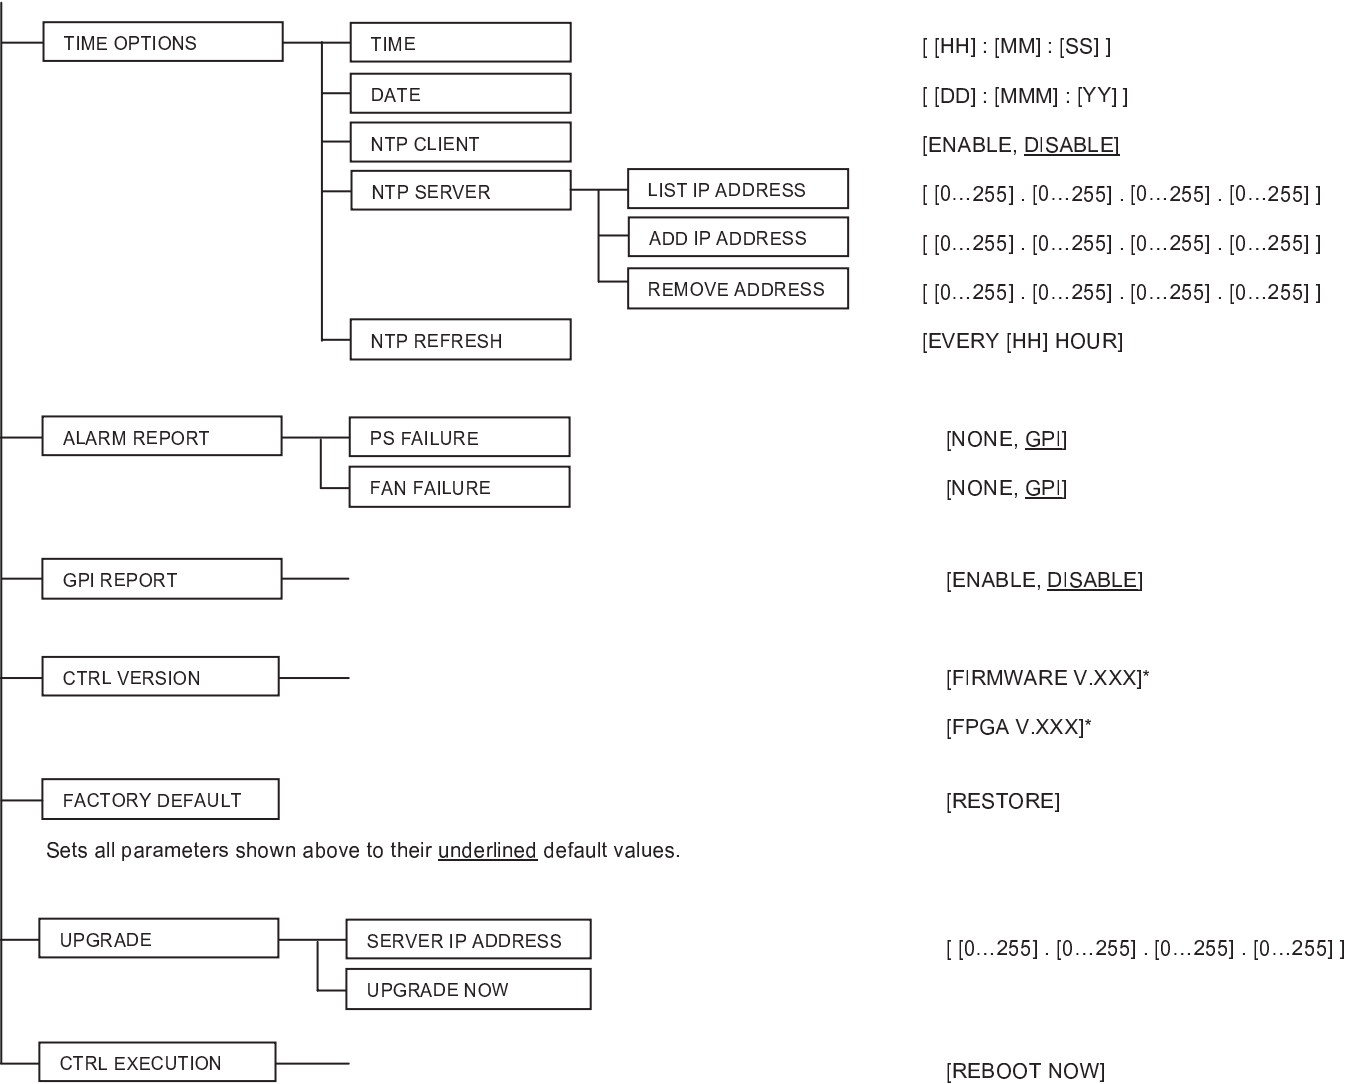

* Values marked with an asterisk are displayed but cannot be edited.