


1. Remove the screw

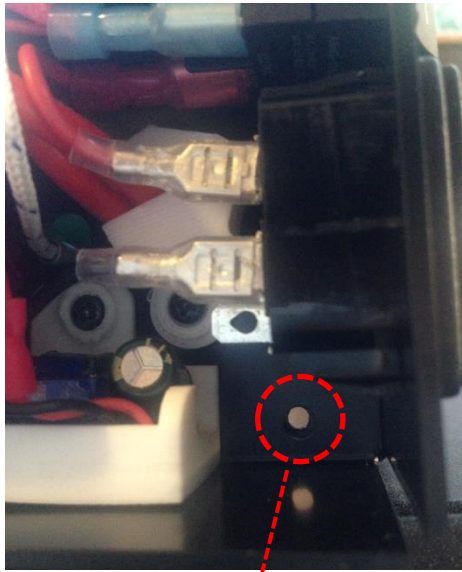


Bottom right corner

2. Scrape the coating off around the hole



A cutter or a file

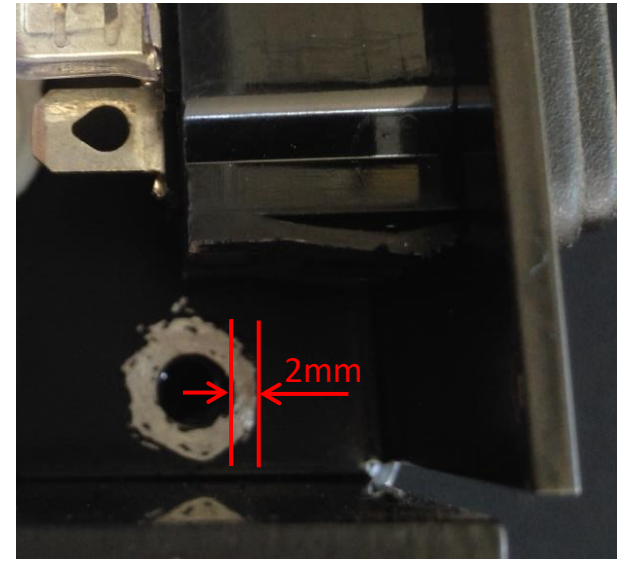

3. Connect to the earth terminal with the hookup wire



Earth terminal

Tighten the screw

The hookup wire

