



# FT NavVision<sup>®</sup>

## Remote Access through Teamviewer

Publication type: Setup document  
Publication number:  
Title: FT NavVision®  
Subject:  
Issue: 1.1  
Publication date: November 19, 2012  
Total number of pages: 9

Author: VCMM Kerckhaert

## Table of contents

---

	Page #
Figures .....	4
1. Introduction .....	6
2. Preparations .....	6
2.1 Teamviewer .....	6
2.2 Laptop settings.....	7

## Figures

Figure 2-1: Teamviewer connection page	6
Figure 2-2: network 1	7
Figure 2-3: network 2	7
Figure 2-4: Network 3	8
Figure 2-5: Network 4	8

**NOTICE**

**This document contains proprietary information.  
No part of this document may be photocopied, reproduced or  
translated into another language without the prior written consent of  
Free Technics B.V.**

## 1. Introduction

To get remote access through Teamviewer, you will need to connect the FT system to a laptop that has Teamviewer installed and is connected to the internet. Once connected an employee of Free Technics can give remote support

## 2. Preparations

### 2.1 Teamviewer

First you need to download and install Teamviewer onto your laptop. You can find the free version here:

<http://www.teamviewer.com/it/index.aspx?pid=google.tv.s.nl&gclid=CNSst4DXyLECFYwhtAodH0UAFg>

After installing and restarting you will find a shortcut on your desktop. Please start that, you will get the following screen.

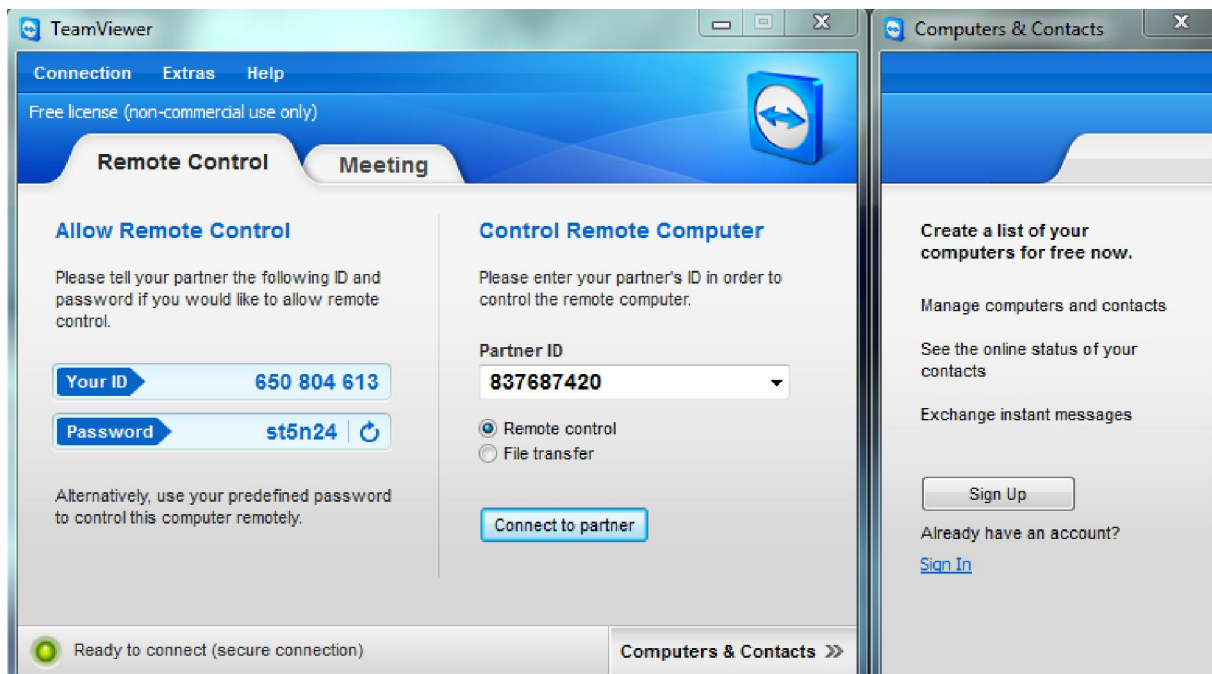



Figure 2-1: Teamviewer connection page

To let the employee of Free Technics make a connection, you will have to send your ID and Password as shown in the Teamviewer start page (see Figure 2-1).

## 2.2 Laptop settings


Go to network settings:

Windows7: controlpanel>network and sharing center (see Figure 2-2).

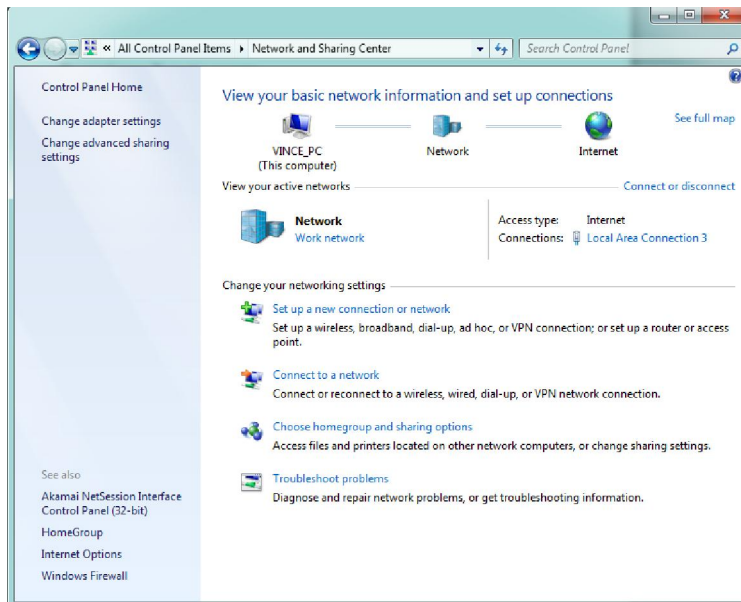


**Figure 2-2: network 1**

Choose change adapter settings (see Figure 2-2).

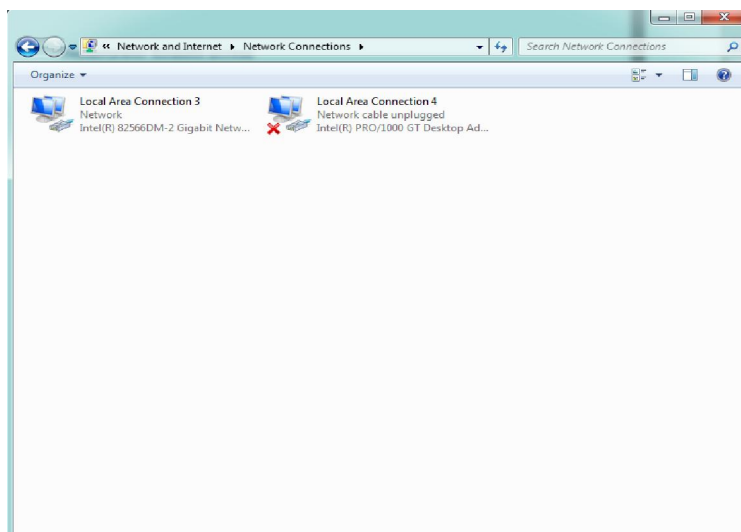


**Figure 2-3: network 2**

Look for the Lan-connection that you use to connect to the switch. Right click on it with your mouse and choose properties. (see Figure 2-3)

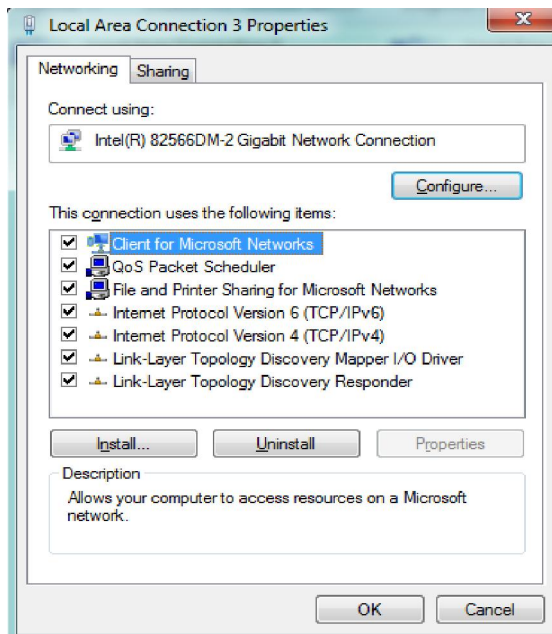

**Figure 2-4: Network 3**

Doubleclick on "Internet Protocol Version 4 (TCP/IPv4) (see Figure 2-4).

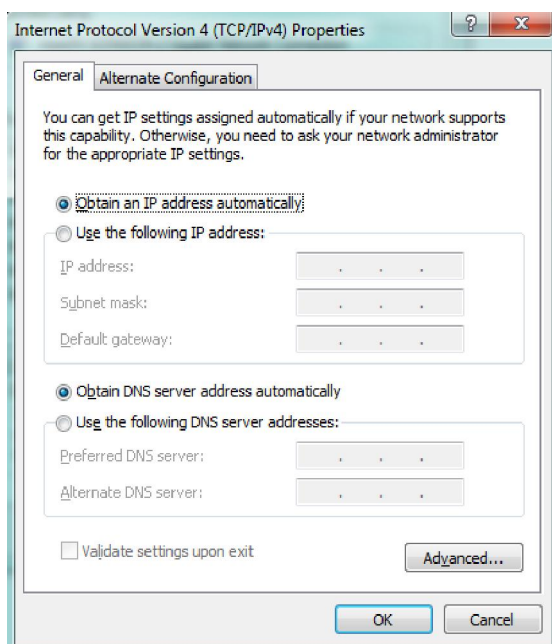

**Figure 2-5: Network 4**





Choose "Use the following IP address" and fill in the following:

IP address 192.168.1.78  
Subnet mask 255.255.0.0

Check with Free Technics if the IP address is alright

Click OK twice.

Connect your laptop through Lan to one of the switches of the FT NavVision system. Make sure you have connection with internet and that Teamviewer is running. If so, we can connect with your ID and password.

## Free Technics

Technical & customer support  
**The Netherlands**

Free Technics B.V.  
Eikenlaan 259J  
2404 BP, Alphen aan den Rijn  
The Netherlands

Telephone: +31 172418 890  
Fax: +31 172418 899  
[www.freetechnics.eu](http://www.freetechnics.eu)