

CARE AND MAINTENANCE

FRAMES

Cleaning: Use mild soap and warm water. Do not use abrasive materials, cleansers or bleach products. Rinse with clean water and dry thoroughly.

Maintenance: Periodically clean chairs and dry thoroughly. Drain any water accumulated inside the frames by removing the adjuster glides or foot caps from the bottom of the legs.

WARNING :Water allowed to accumulate inside the frames and then exposed to freezing temperatures can cause damage to the frames. Such damage is not covered under warranty. Always clean, drain and dry thoroughly before storing for the winter. Maintain glossy finishes by applying a coat of high quality auto wax after cleaning. Do not use wax on textured or matte finishes. For best results, always store or cover your furniture with outdoor furniture covers when not in use. Covers not included.

FABRIC (SLINGS)

Cleaning: Wipe minor spills immediately. Clean with mild soap, warm water and soft cloth. Although the fabric has been treated to resist stains, over time it may be necessary to use stain removers. Follow the manufacturer's instructions.

Maintenance: The best way to maintain the beauty of your furniture is to store them in a dry area out of extreme temperatures or severe weather. If your furniture is being used in areas where birds and trees are plentiful, covering your furniture is especially recommended.

WARRANTY PROGRAM

Hanamint Corporation, Inc. warrants Hanamint branded products to the original retail buyer that if the furniture frame fails structurally within five (5) years from date of purchase. The structural warranty for Casa Casual branded products is (3) years. Hanamint will replace the part, repair the frame, or replace entire item at our option. Replacement will be in the original color and style whenever possible; however, equal value replacement will be offered in the event of product discontinuance. Hanamint warrants the powder coat finish for three (3) years from date of purchase, including peeling or blistering. Warranty period is one (1) year for wood, cushions, sling fabrics and umbrella frames. This limited warranty applies to residential use only. Hanamint does not warrant against acts of nature, commercial use, normal wear and tear, chipping, fading, exposure to harsh chemicals or solvents, abuse, freeze damage, glass breakage, or failure to take reasonable care of the furniture. Due to the unique nature of hand-applied finishes, fading and wearing of hand-applied finishes is not included in this warranty. Hanamint will not be liable for shipping charges either to or from its warehouse on merchandise returned after 12 months from the date of purchase. When requested, goods must be returned for inspection or a photograph provided to Hanamint Corporation, Inc., or its authorized representative, when requesting parts, replacement, or repair. Original proof of purchase must accompany all warranty claims.

Obtaining Warranty Service: To obtain warranty service please contact the retailer where the furniture was originally purchased within the relevant warranty period and provide a copy of your dated register receipt as proof of purchase. All warranty issues must be handled through the retailer where the furniture was originally purchased.

This warranty is the exclusive statement of your rights with respect to the defects in the items you have purchased and supersedes any other express warranty or statement, written or oral, made in connection with the purchase and sale of such item. Some states do not allow exclusion or limitation of incidental or consequential damages, so that limitation may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

CHAISE LOUNGE

(For Item# 007230 and same type Chaise Lounge)

ASSEMBLY INSTRUCTIONS











Please read the Instructions carefully before assembly. Make sure you have all the parts and hardware as identified on the parts list.



Hanamint®

CHAISE LOUNGE (For # 007230 and same type Chaise Lounge)

PARTS AND HARDWARE LIST

| No. | Description | Part# | Qty. | Diagram |
|-----|-------------------|-----------|------|---|
| 1 | Bed | 007230C00 | 1 |  |
| 2 | Backrest | 007230C10 | 1 |  |
| 3 | Left Arm | 007230C21 | 1 |  |
| 4 | Right Arm | 007230C22 | 1 |  |
| 5 | Leg | 007230C31 | 2 |  |
| 6 | Axle Rod | 007230A53 | 1 |  |
| 7 | Back Adjuster | 007230A16 | 1 |  |
| 8 | Wheel | 007230A50 | 2 |  |
| 9 | Small Washer | HD10600 | 2 |  |
| 10 | Large Washer | HD10800 | 6 |  |
| 11 | Wide Washer | HD20600 | 2 |  |
| 12 | Small Lock Washer | HD30600 | 4 |  |
| 13 | Large Lock Washer | HD30800 | 6 |  |
| 14 | Small Long Screw | MY00640 | 2 |  |
| 15 | Small Short Screw | MY20616 | 2 |  |
| 16 | Large Long Screw | MY00845 | 6 |  |
| 17 | Small PVC Cap | HM50600 | 2 |  |
| 18 | PVC Cap | HM10000 | 2 |  |
| 19 | Nut | HN10600 | 2 |  |
| 20 | Bolt | MW80820 | 6 |  |

ASSEMBLY INSTRUCTIONS

1. Place Bed upside down on a soft clean surface. Attach Legs to Bed using Bolts, Large Lock Washers and Large Washers.
2. After both front legs are in place, turn Bed right side up and attach Left Arm assembly by lining up the two front holes on the arm with the two holes in the side of Bed. Secure with two Large Long Screws. Insert Axle Rod through the hole in the attached arm.
3. Attach Right Arm to Bed in the same manner as Left Arm.
4. Attach Back Adjuster to Backrest by inserting Small Long Screws through the holes of Backrest and Adjuster. Secure with Nuts, Small Lock Washers and Small Washers. Then put the Small PVC Cap on Nuts.
5. Insert Backrest between the two arms, lining up the holes. Insert Large Long Screws through the arm and screw into Backrest.
6. Attach the two Wheels onto the axle with Small Short Screws, Small Lock Washers and Wide Washers, then cover the center holes on Wheels with PVC Cap.

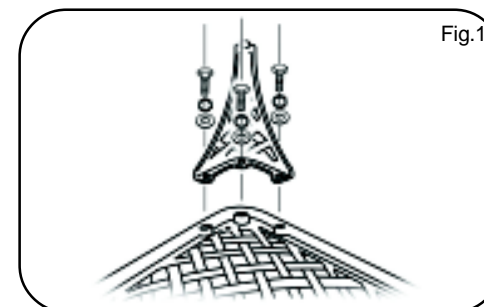


Fig.1

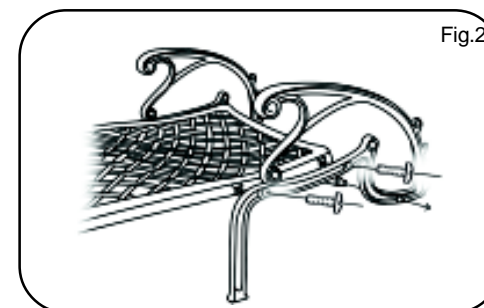


Fig.2

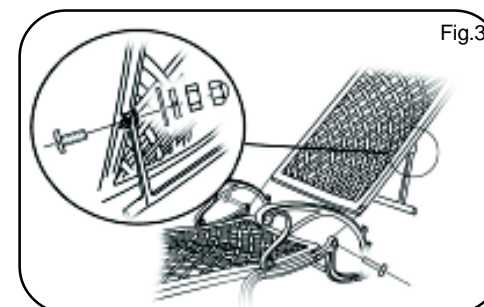


Fig.3

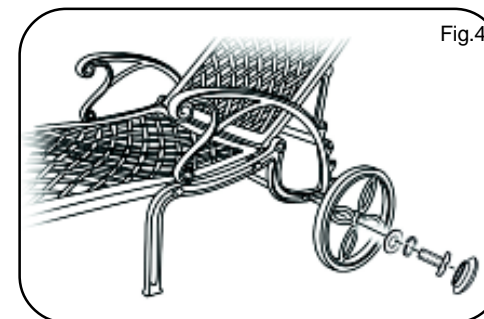


Fig.4