


Nama : Krisan Bagus

NIM : L200160030


## MODUL 3

### 1. Setting Wifi untuk Accespoint :


Masuk ke menu konfigurasi dengan address 192.168.1.254 (defaultnya 192.168.1.50)

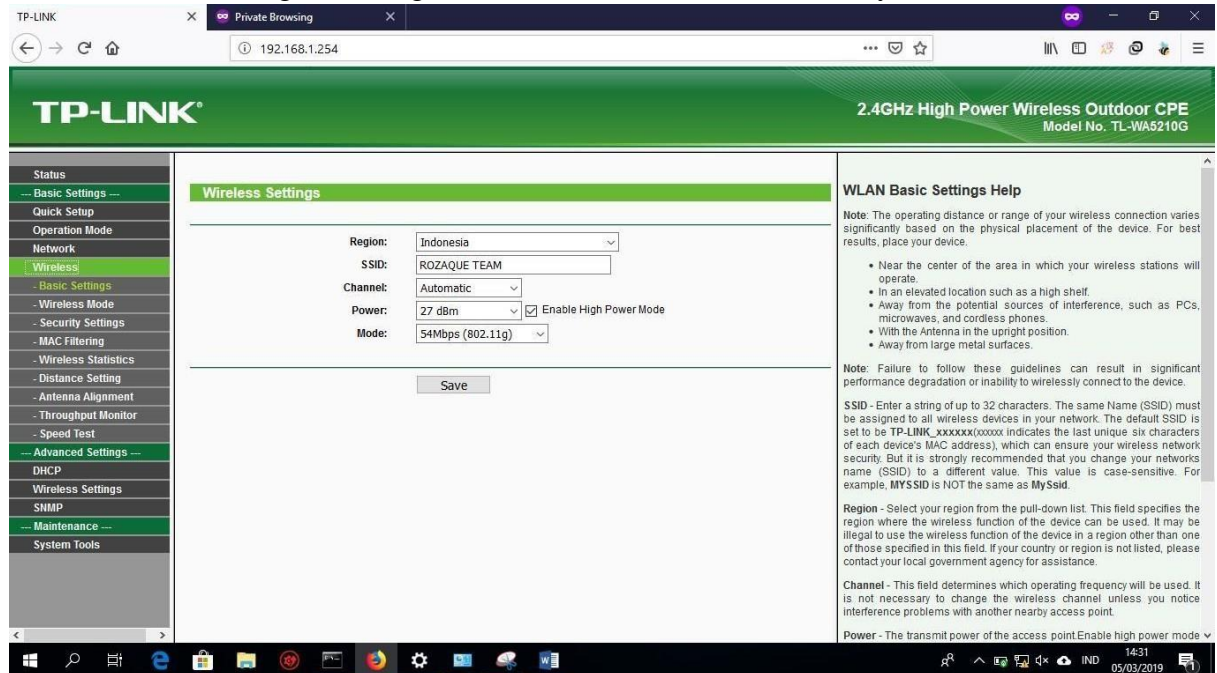


Memilih opsi sebagai accespoint dan mengganti IP addressnya

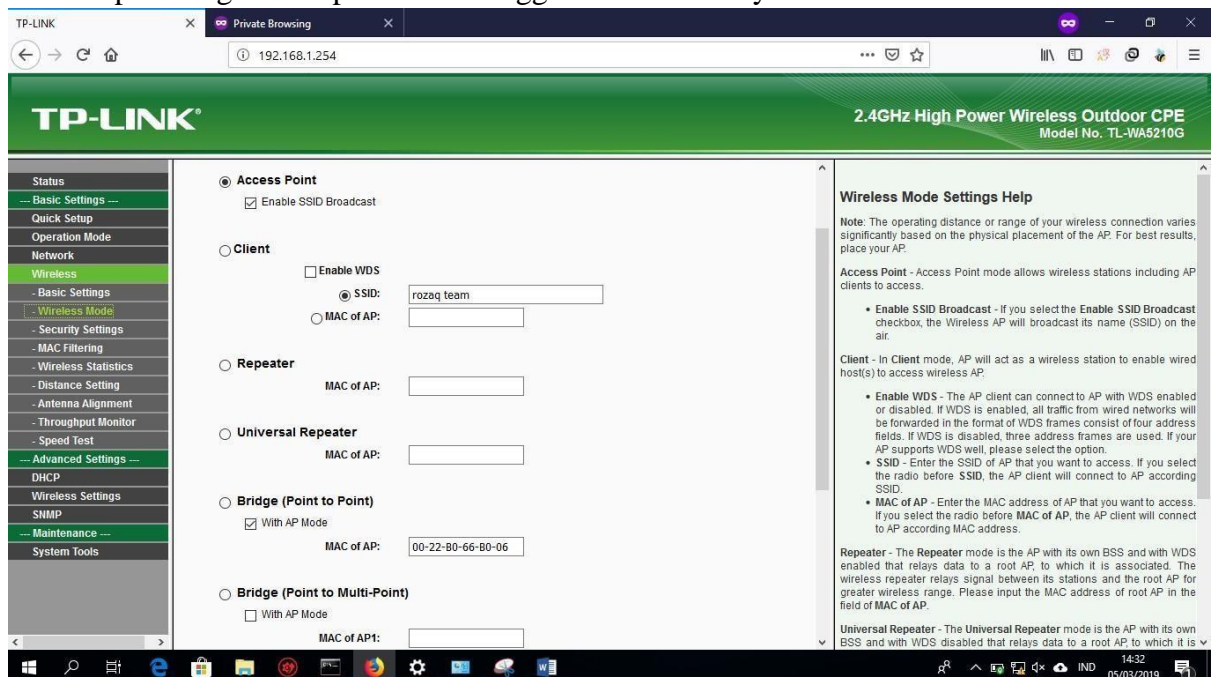

## Memberi IP di PC dengan network yang sama dengan accespoint

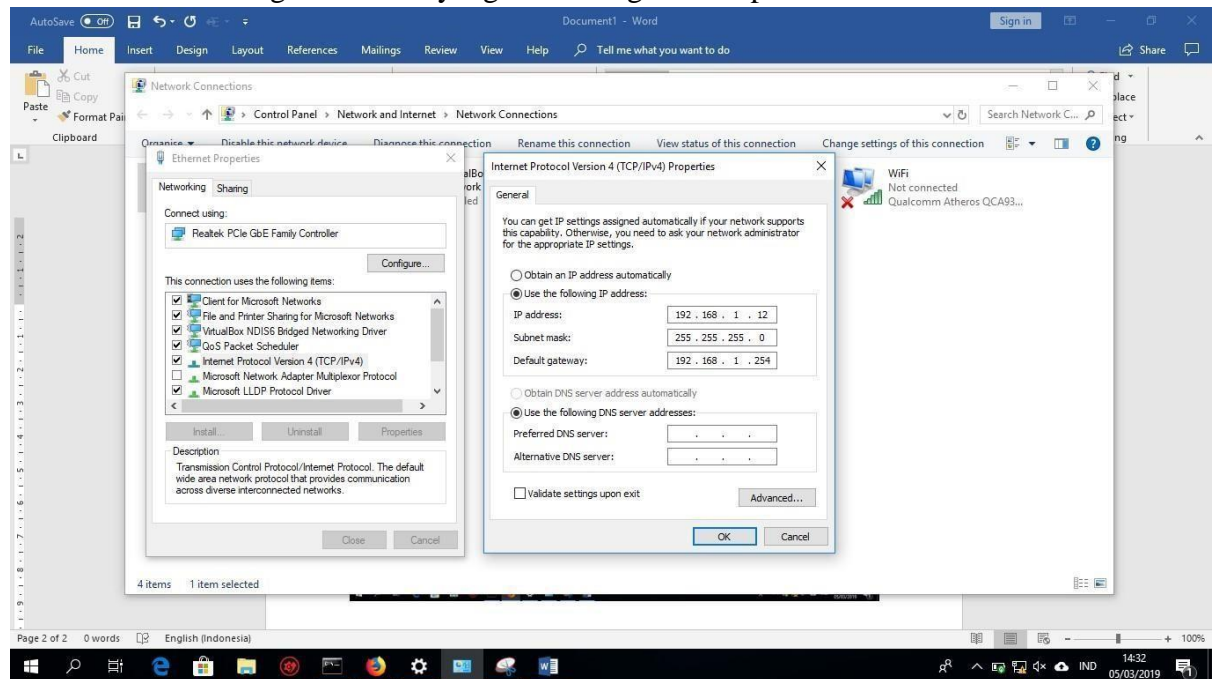

## Tes ping ke IP dari accespoint teman

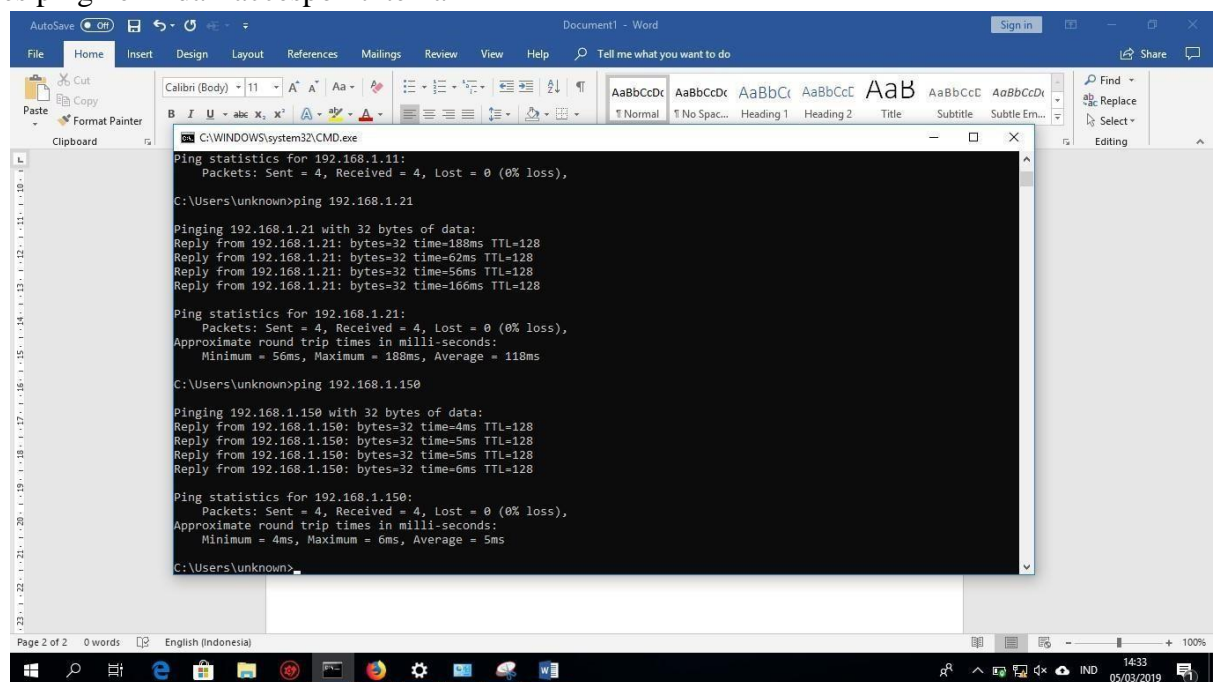

## 2. Pont-to-Point

Masuk ke menu konfigurasi dengan address 192.168.1.1

192.168.1.1/setup.cgi

Not secure | 192.168.1.1/setup.cgi

## EnGenius® Wireless Outdoor Access Point/ Client Bridge

### Client Bridge

- Status
  - Main
  - Connection Status
  - System Log
- System
  - System Properties
  - IP Settings
  - Spanning Tree Settings
- Wireless
  - Wireless Network
  - Wireless Security
  - Wireless Advanced Settings
- Management
  - Administration
  - SNMP Settings
  - Auto Reboot Settings
  - Backup/Restore Settings
  - Firmware Upgrade
  - Time Settings
  - Log
  - Diagnostics

#### Wireless Network

Wireless Mode: 802.11b/g Mixed (2GHz/54Mbps)

SSID: Specify the static SSID : ROZAQUE TEAM ( 1 to 32 characters )  
Or press the button to search for any available WLAN Service.

Site Survey

Prefer BSSID: ☐ E8 ☐ DE ☐ 27 ☐ B7 ☐ F6 ☐ 78

WDS Client: ☒ Enable ☐ Disable

Apply Cancel

Beri IP satu network dengan accespoint sebelumnya

192.168.1.1/setup.cgi

Not secure | 192.168.1.1/setup.cgi

## EnGenius® Wireless Outdoor Access Point/ Client Bridge

### Client Bridge

- Status
  - Main
  - Connection Status
  - System Log
- System
  - System Properties
  - IP Settings
  - Spanning Tree Settings
- Wireless
  - Wireless Network
  - Wireless Security
  - Wireless Advanced Settings
- Management
  - Administration
  - SNMP Settings
  - Auto Reboot Settings
  - Backup/Restore Settings
  - Firmware Upgrade
  - Time Settings
  - Log
  - Diagnostics

#### System Information

Device Name	EOC2611P
Ethernet MAC Address	00:02:6f:94:4d:e6
Wireless MAC Address	00:02:6f:94:4d:e7
Country	N/A
Current Time	Sat Jan 1 07:43:06 UTC 2000
Device Uptime	0 Days 0 Hours 43 Mins
Firmware Version	1.3.1
Auto Reboot Settings	Disabled

#### LAN Settings


IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DHCP Client	Disabled

#### Current Wireless Settings


Operation Mode	Client Bridge
Wireless Mode	IEEE 802.11b/g Mixed
Frequency/Channel	2.412GHz (Channel 01)
Wireless Network Name (SSID)	ROZAQUE TEAM
Security	Disabled
Spanning Tree Protocol	Disabled
Distance	1 Km

Refresh

Pilih mode ClientBridge

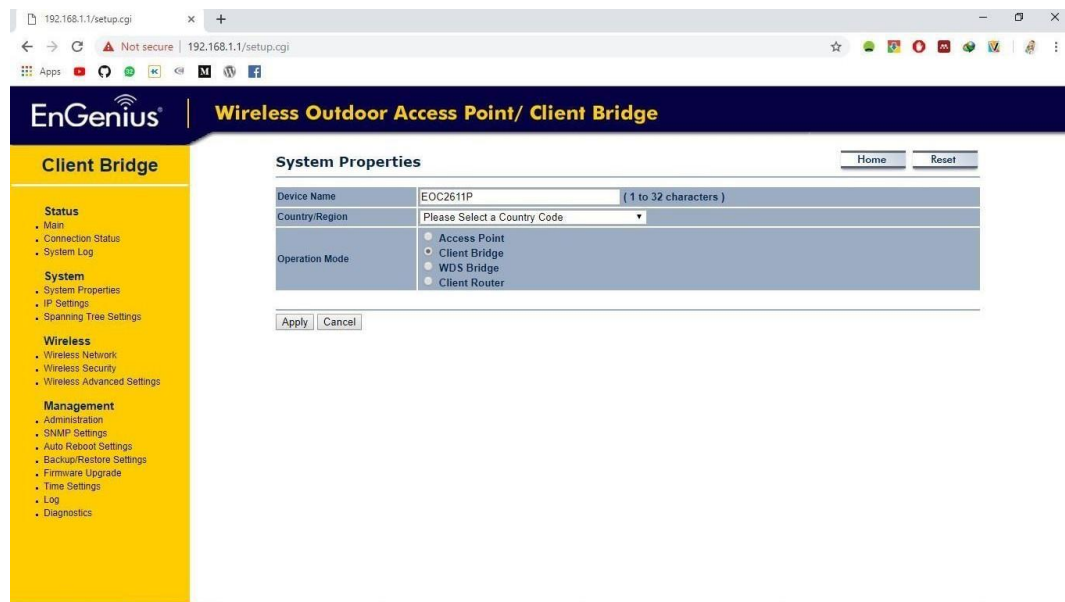

Beri IP satu network dengan point-to-point sebelumnya

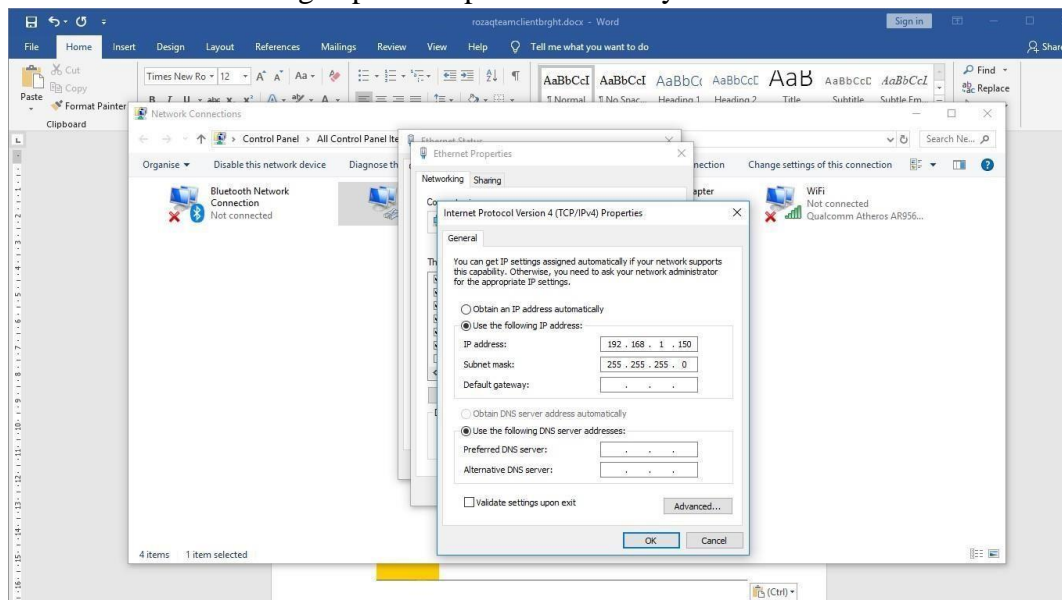

Tes ping ke IP dari accespoint teman

