


## Illumination circuit

### CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU, the Body ECU makes the switch illuminations come on.


### WIRING DIAGRAM

## RHD Models (w/ Moon roof):

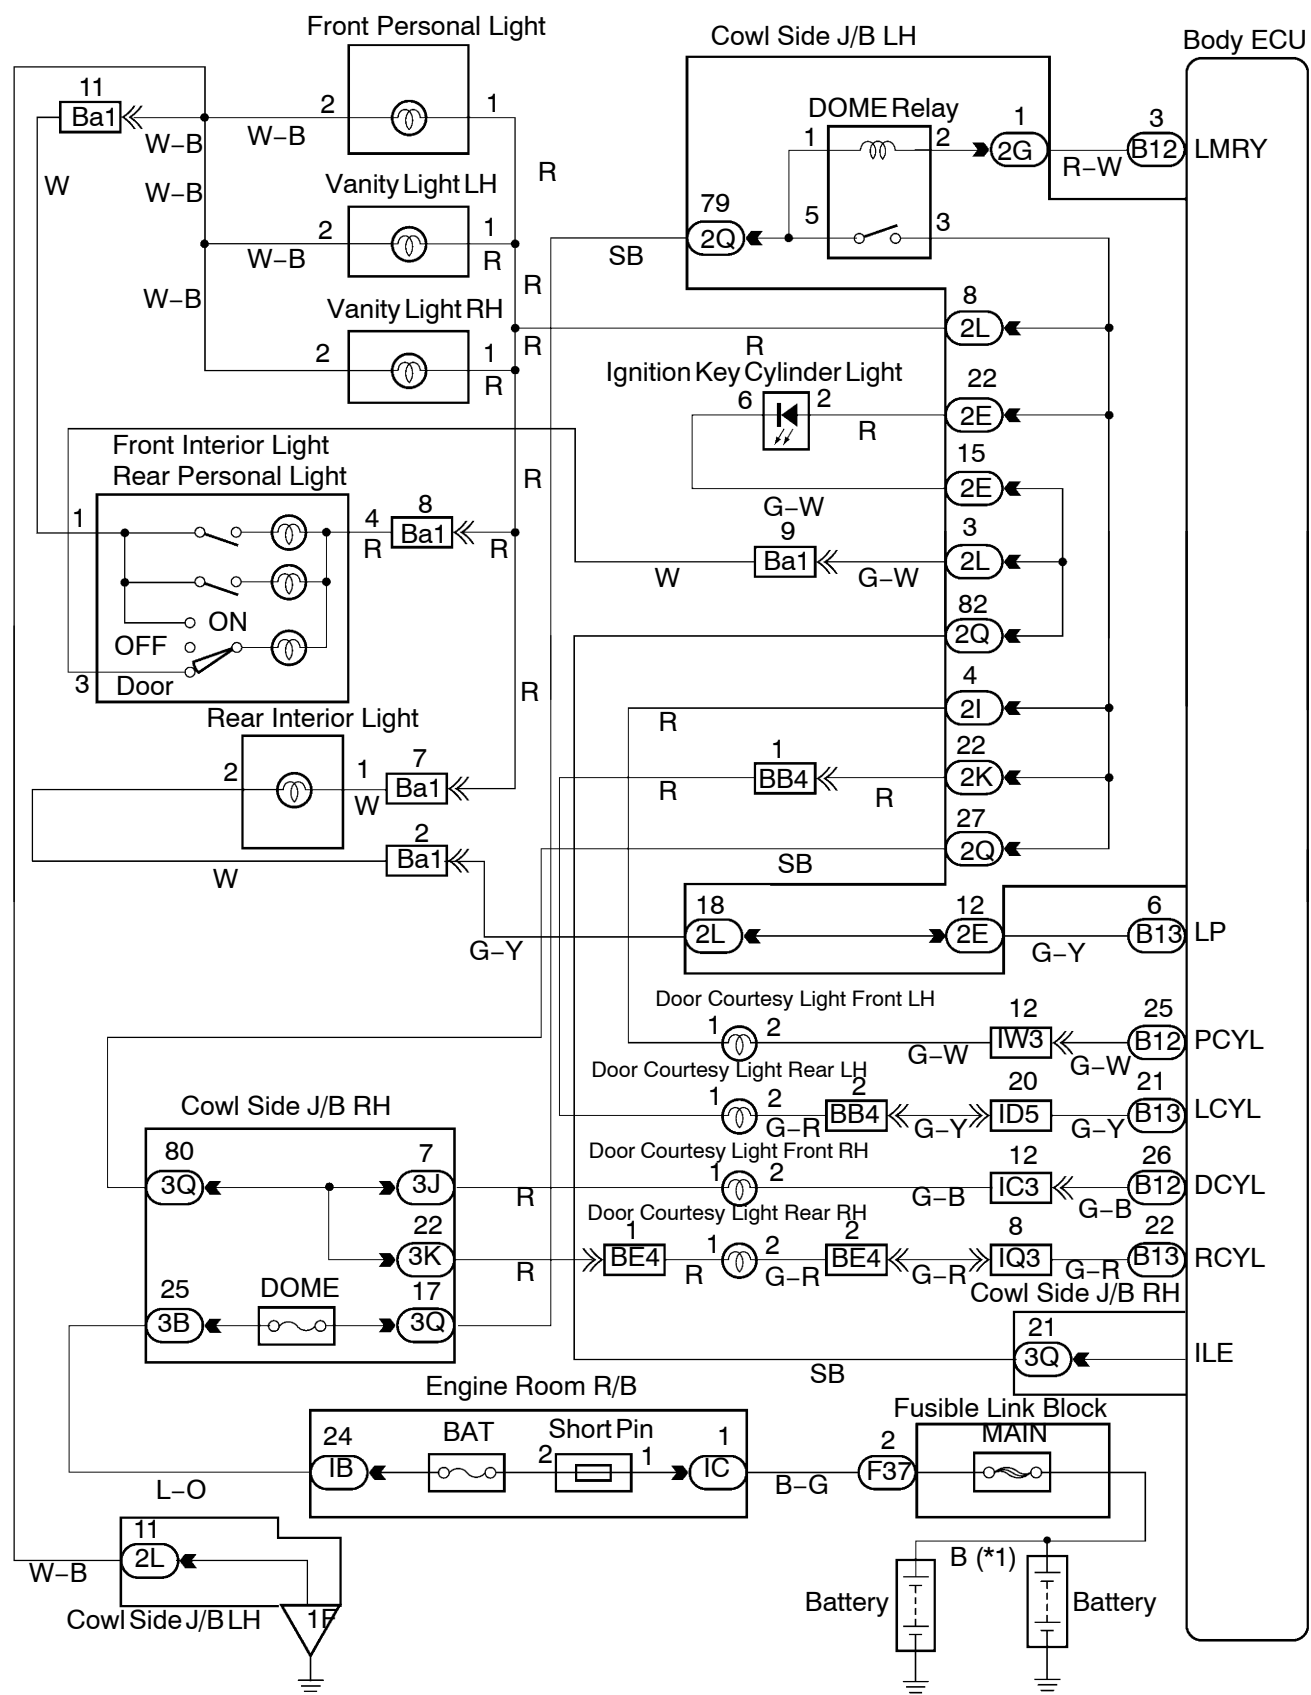

\*1: Diesel


I26313

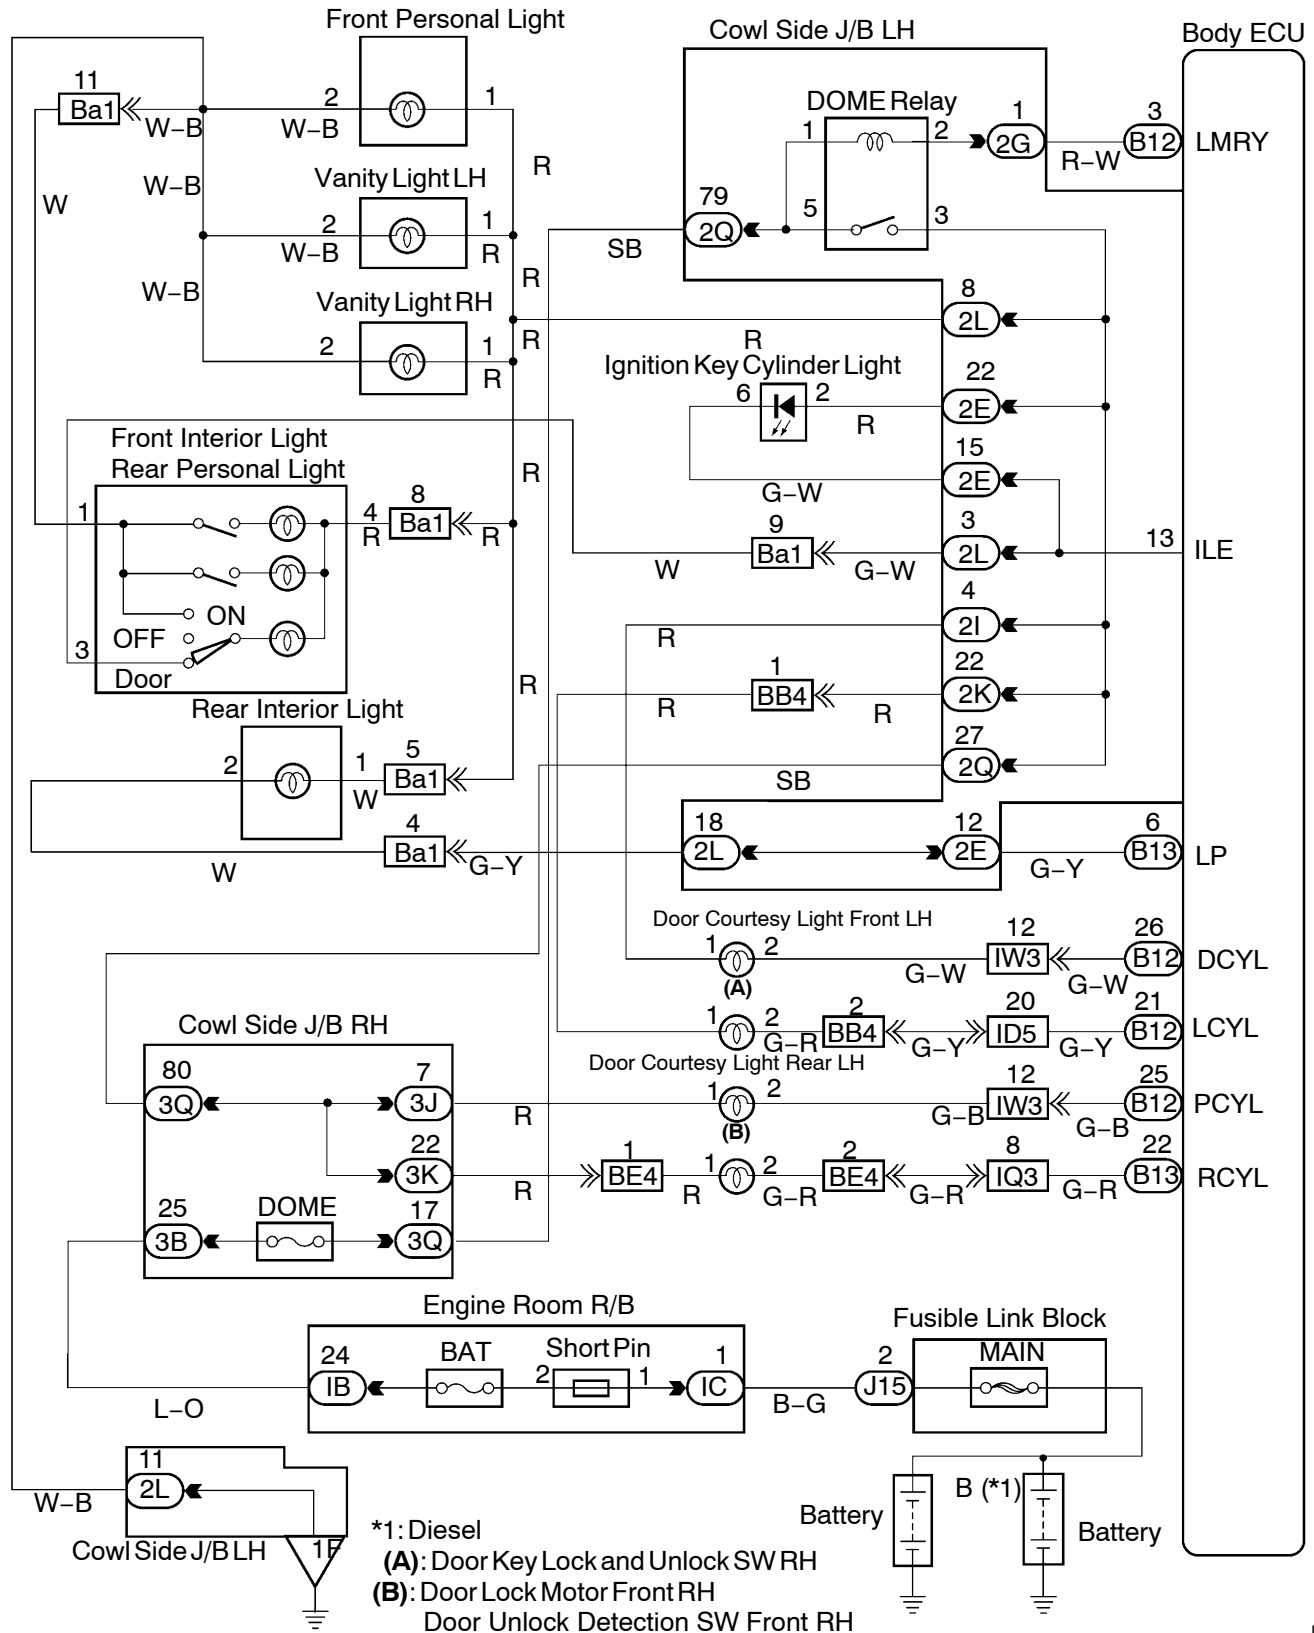**LHD Models (w/ Moon roof):**


I26318

126333

## RHD Models (w/o Moon roof and w/o overhead console):

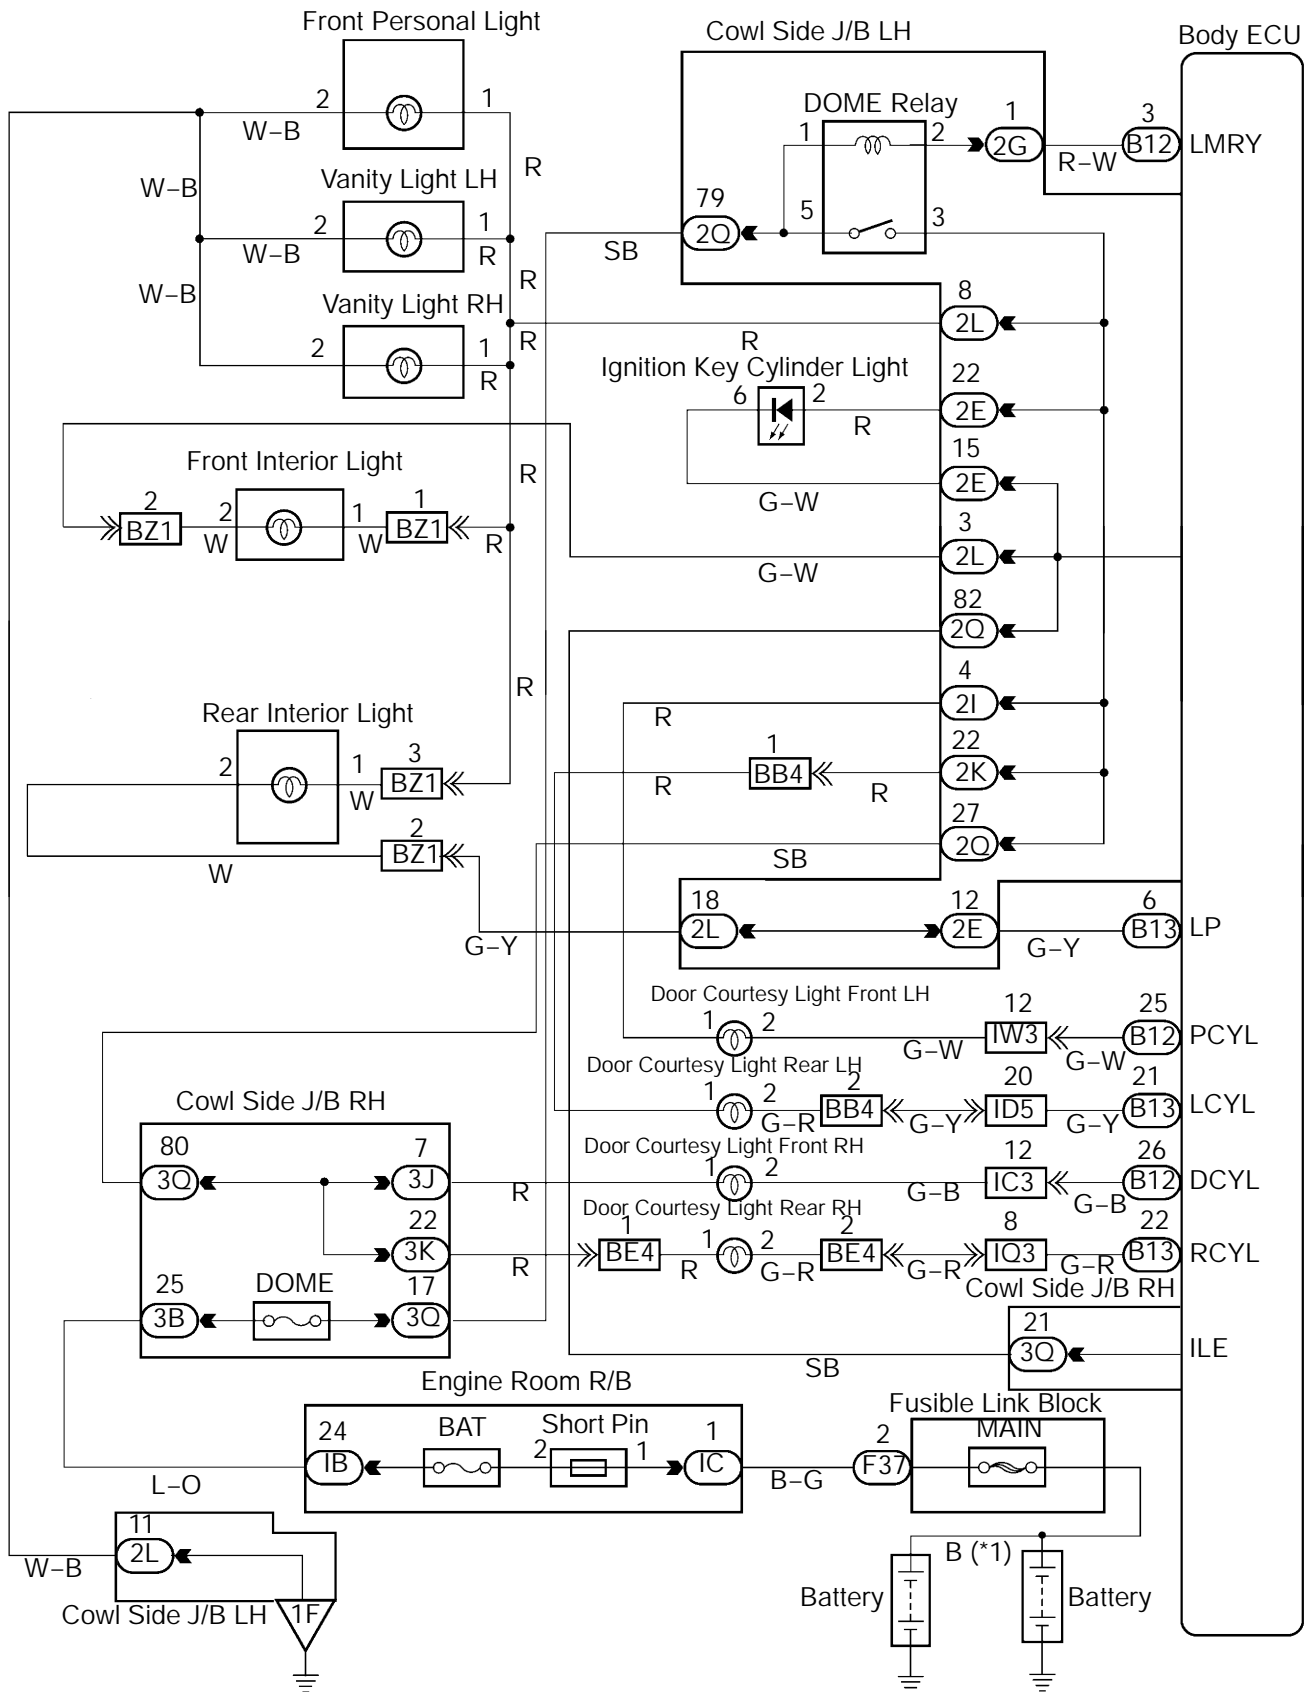


## LHD Models (w/o Moon roof and w/ overhead console):

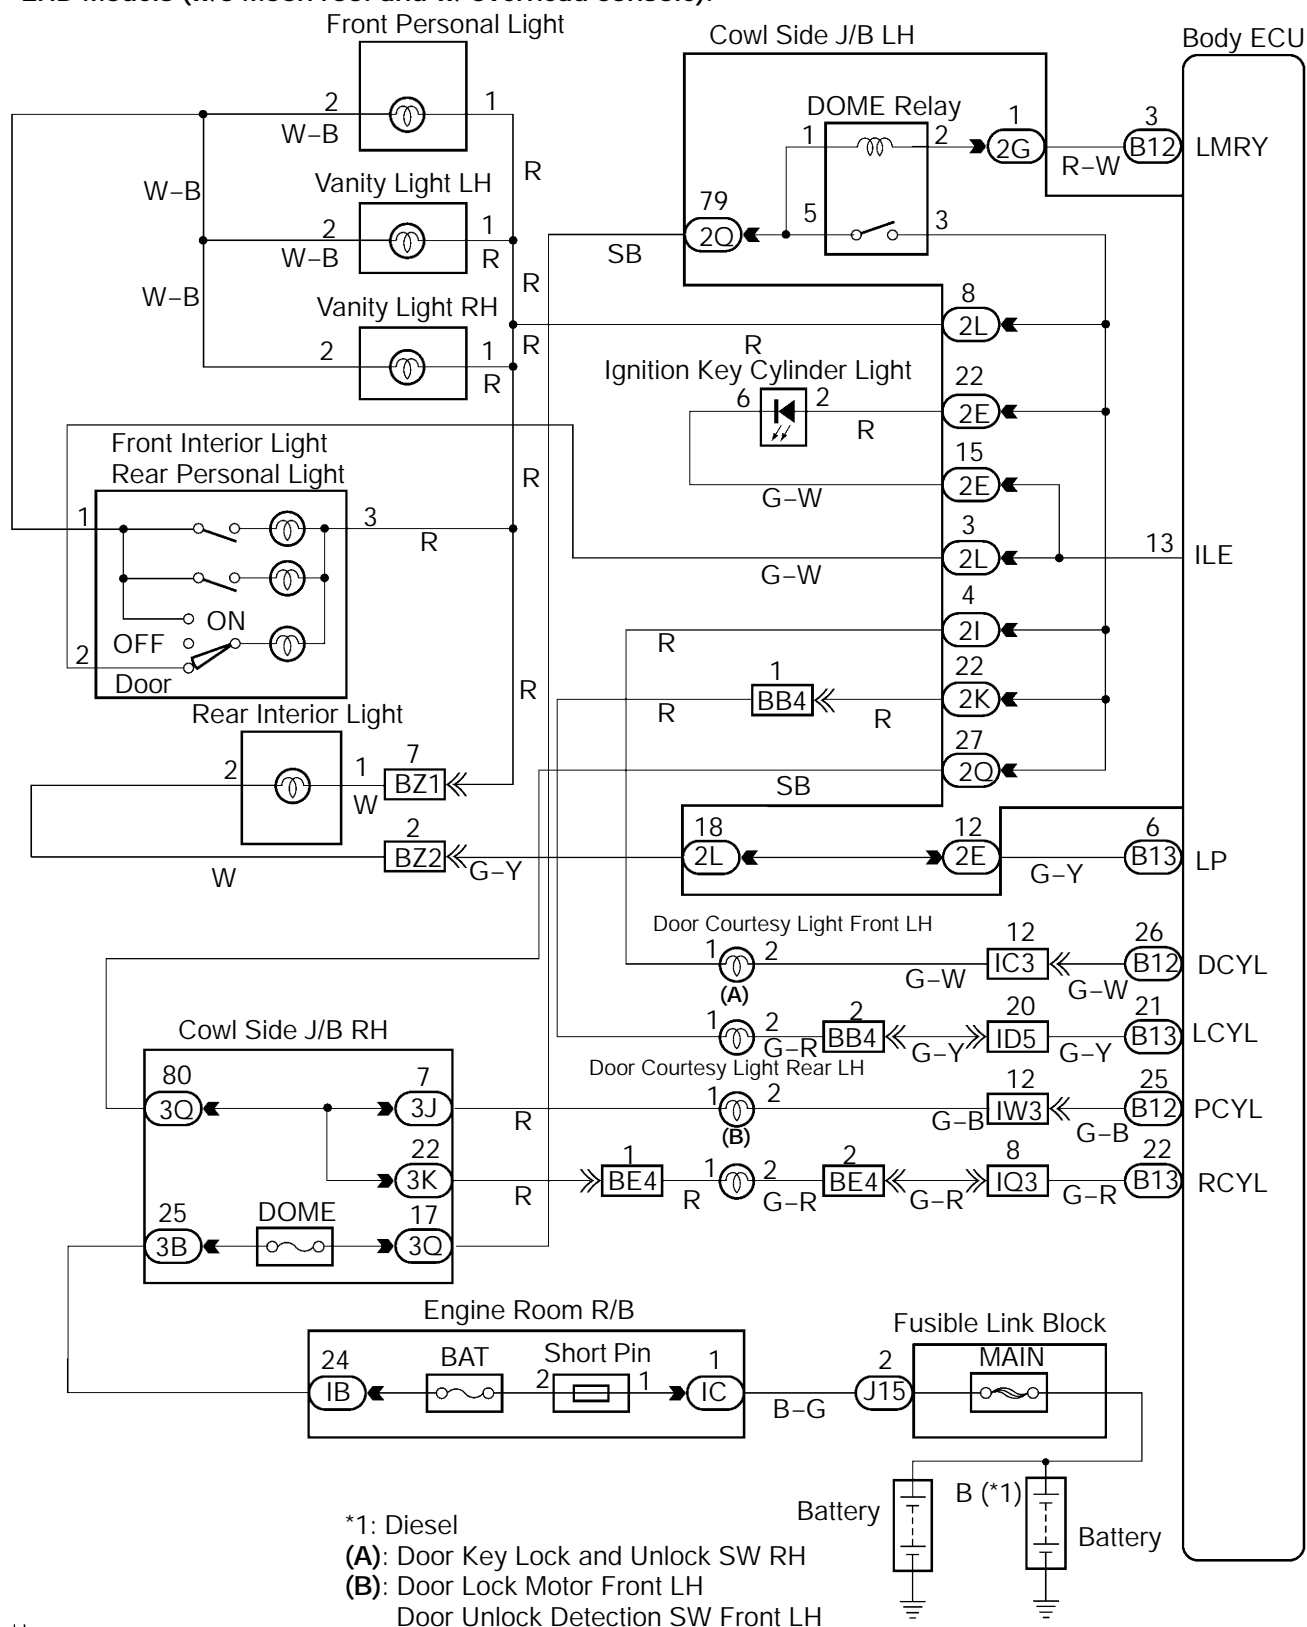

H

I26320

## LHD Models (w/o Moon roof and w/o overhead console):

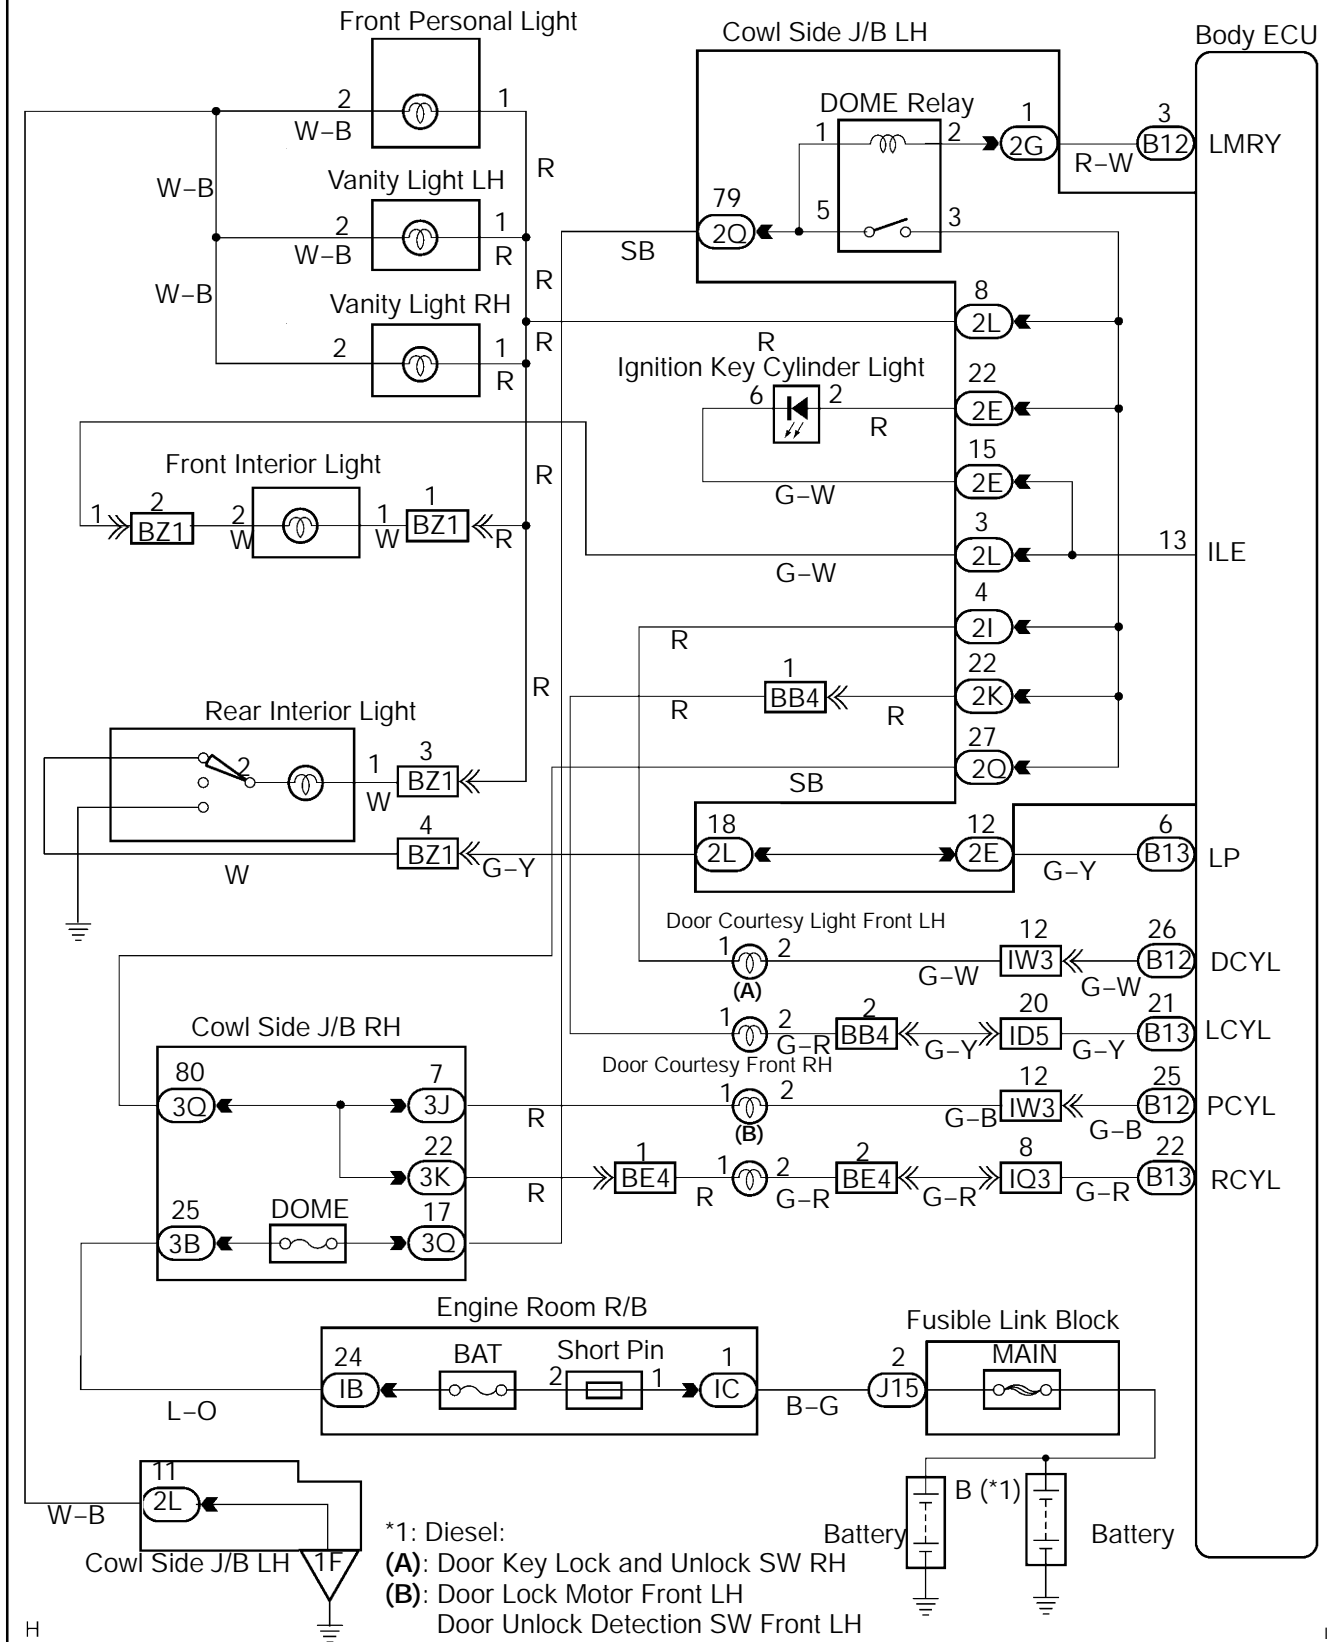

I26321

## INSPECTION PROCEDURE

### HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check illumination using hand-held tester.
---	--

### PREPARATION:

Connect the hand-held tester to DLC 3.

### CHECK:

Check that the illumination operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check illumination light.
---	---------------------------

NG

Replace illumination light.

OK

3	Check wire harness and connector between illumination light and Body ECU ( <a href="#">See page IN-38</a> ).
---	--

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).